HSC-650, HSC-800

INCLUDING: OPERATION, INSTRUCTION, INSTALLATION, MAINTENANCE AND PARTSBOOK

IMPORTANT: READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS TOOL.

MULTI PURPOSE BONE SAW

TOOL DATA

MODEL: HSC-650 ASSEMBY NO. 6220100

TYPE: HYDRAULICALLY / AIR OPERATED

NET WEIGHT: 6.5 LB (3.0 KG)

HYDRAULIC PRESSURE: 2400 P.S.I. MAX


MODEL: HSC-800

ASSEMBLY NO. 6222000

TYPE: HADRAULICALLY / AIR OPERATED

NET WEIGHT: 8.8 LB (4.0 KG)

HYDRAULIC PRESSURE: 2400 P.S.I. MAX

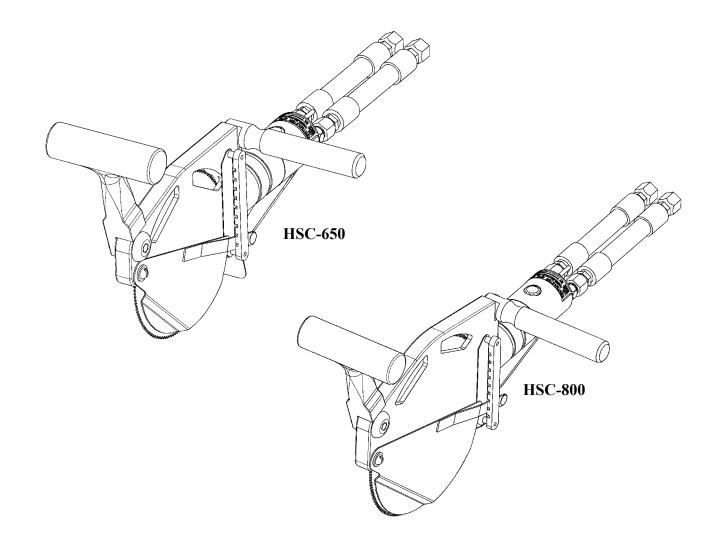

- = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.
- = Hazards or unsafe practices which could result in minor personal injury, product or property damage.
- **=** Important installation, operation or maintenance information.

OPERATING AND SAFETY INSTRUCTIONS

A	OT OPERATE THIS TOOL UNTIL YOU HAVE READ AND UNDERSTOOD THE SAFETY SUCTIONS AND OPERATING MANUALS.
	OT OPERATE THIS TOOL UNTIL YOU HAVE RECEIVED TRAINING IN THE HANDLING, ATION AND USE OF THIS TOOL.
	USING A MALFUNCTIONING OR DEFECTIVE TOOL IMMEDIATELY. REPORT ANY LEMS OR DEFECTS TO YOUR SUPERVISOR FOR REMOVAL OF THE TOOL FROM ICE.
/ WARNING DO NO	OT ATTEMPT TO REPAIR THE TOOL YOURSELF.
NO NO	OT ALLOW UNAUTHORIZED PERSONS TO USE TOOL.
	VE AND DISCONNECT POWER FROM THE TOOL WHEN TOOL IS LEFT UNATTENDED OR T IN USE.
MARNING NEVER	R TIE DOWN, BYPASS, ALTER OR MODIFY THE ACTIVATING SWITCHES OR TRIGGERS OF FOOL.
NEVER	R MAKE ALTERATIONS OR MODIFICATIONS TO THIS TOOL.
	ONSTANTLY AWARE AND ALERT FOR UNSAFE CONDITIONS AND REPORT THEM DIATELY TO YOUR SUPERVISOR.
MARNING NEVER TOOL.	R PLACE YOUR HAND OR ANY PART OF YOUR BODY IN THE CUTTING PATH OF THE
	R ALLOW ANYONE ELSE TO PLACE THEIR HANDS OR ANY PART OF THEIR BODY IN THE ING PATH OF THE TOOL.
	OT ACTIVATE CONTROL SWITCHES OR TRIGGERS OF THIS TOOL UNLESS YOU INTENDEST OR OPERATE THIS TOOL.
/ WARNING DO NO	OT USE THIS TOOL FOR ANY PURPOSE OTHER THAN IT'S INTENDED PURPOSE.
	I OPERATING THIS TOOL WEAR THE PROTECTIVE GEAR AND SAFETY EQUIPMENT LIED TO YOU.
THE N	IOISE EMISSION (SOUND PRESSURE LEVEL) AT THE WORKSTATION MAY EXCEED 80 dB EAR AND SOUND PROTECTION GEAR IS REQUIRED.

!\ WARNING

OPERATING INSTRUCTIONS

NARNING ONLY TRAINED PERSONNEL ARE TO OPERATE THIS TOOL.

- TO ENSURE TOOL IS OPERATING PROPERLY, PERFORM FOLLOWING STEPS AT START OF EACH SHIFT:
 - MAKE SURE TOOL MOVES UP AND DOWN FREELY WHILE HANGING FROM BALANCER OVERHEAD.
 - WITH POWER TO TOOL TURNED ON, TEST TRIGGER FOR PROPER OPERATION.
 - DEPRESS EACH TRIGGER SEPARATELY. TOOL SHOULD NOT ACTIVATE. DEPRESS BOTH TRIGGERS. TOOL SHOULD ACTIVATE.
 - IF TOOL HAS "ANTI-TIE DOWN" OPTION, BOTH TRIGGERS MUST BE DEPRESSED SIMULTANEOUSLY FOR TOOL TO ACTIVATE.
- 2. TO PERFORM WORK, HOLD TOOL FIRMLY AT BOTH HANDLES. SQUEEZE TRIGGERS TO ACTIVATE TOOL.
- 3. DO NOT EXERT EXCESSIVE PRESSURE. ALLOW TIME FOR THE TOOL TO CUT.
- 4. TOOL REQUIRES 40 S.C.F.M. OF AIR @ 90 P.S.I. AIR PRESSURE.

MAINTENANCE

WARNING ONLY TRAINED AND QUALIFIED PERSONNEL ARE TO PERFORM MAINTENANCE AND SERVICE TO THIS TOOL.

- FILL LUBRICATOR WITH KENTMASTER AIR MIST OIL (PART NO. 7903050). SET DRIP RATE ACCORDING TO INSTRUCTIONS SUPPLIED.
- 2. TOOL REQUIRES GREASING AFTER 40 HOURS OF OPERATION. GREASE USING KENTMASTER GREASE (PART NO. 7903070).

BLADE REMOVAL AND CLEANING.

/ WARNING

ALWAYS DISCONNECT POWER SUPPLY FROM TOOL BEFORE INSTALLING OR REMOVING BLADE FROM TOOL.

\overline{M} WARNING ALWAYS WEAR WIRE MESH GLOVES WHEN INSTALLING OR REMOVING BLADE FROM TOOL.

- TO REMOVE BLADE, LOOSEN (2) SCREWS, FIGURE 1, ITEM 1 AND GUARD, ITEM 2.
- REMOVE SCREW, ITEM 3, BLADE HOLDER, ITEM 4 AND BLADE, ITEM 5.
- 3. CLEAN ALL PARTS REMOVED WITH SOAP AND WATER.
- 4. SHARPEN OR REPLACE BLADE WHEN NECESSARY AND LUBRICATE ALL PARTS.
- 5. REASSEMBLE ALL PARTS IN REVERSE ORDER.

AT END OF EACH SHIFT:

- 1. REMOVE SAW BLADE.
- 2. IF USING BLADE AGAIN, WASH BLADE WITH HOT WATER TO REMOVE FAT, MEAT AND BONE PARTICLES.
- 3. DRY AND APPLY A COAT OF MINERAL OIL TO ENTIRE SURFACE OF BLADE TO AVOID OXIDATION.


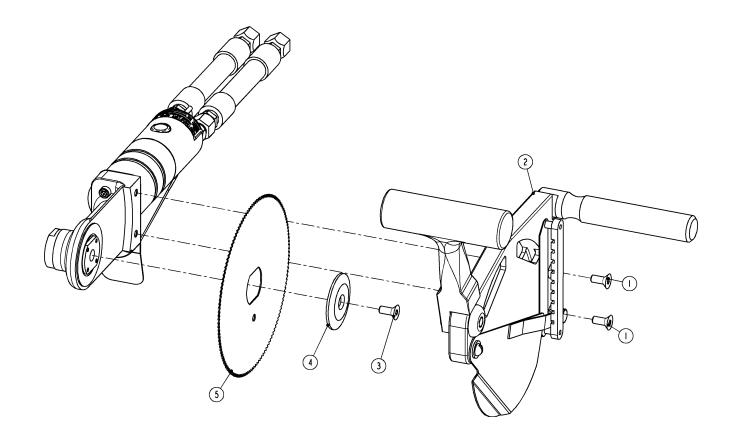


Figure 1 HSC-

SERVICE

- 1. KEEP GOOD RECORDS OF ALL SERVICE ACTIVITY AND INCLUDE TOOL IN PREVENTIVE MAINTENANCE PROGRAM.
- 2. USE ONLY GENUINE KENTMASTER REPLACEMENT PARTS TO ASSURE PROPER PERFORMANCE OF TOOL.
- 3. CONTACT THE KENTMASTER SUPPLIER NEAREST YOU FOR PARTS AND CUSTOMER SERVICE INFORMATION.

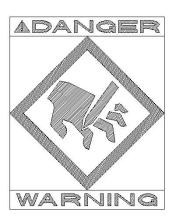

PARTS BOOK

MODEL HSC-650, MULTI PURPOSE BONE SAW

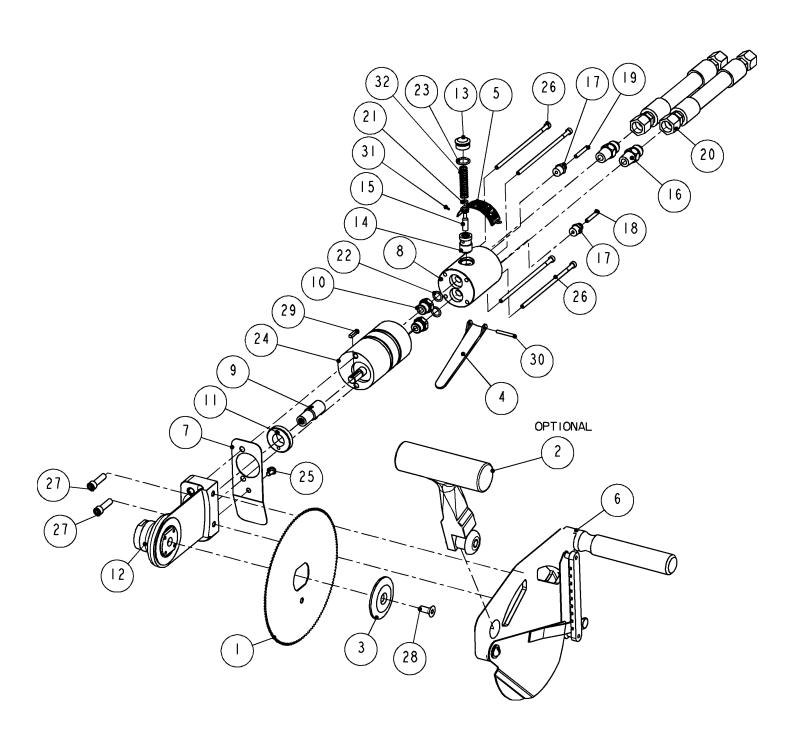


Figure 2 MODEL HSC-650

	6220100	: HSC-650, MULTI PURPOSE BONE SAW	
ITEM	PART #	DESCRIPTION	QTY
1		6.5" SAW BLADE, 140 TOOTH	1
'		6.5" SAW BLADE, SKIP TOOTH, 70 TOOTH	
2		FRONT HANDLE/ OPTIONAL	1
3	6201120	HOLDER, BLADE	1
4	6211670		1
5	6211690	NAME PLATE	1
6	6220220	GUARD AND DEPTH GAUGE	1
7	6221100	GUARD	1
8		BODY, VALVE	1
9		COUPLING	1
10	6221140	FITTING	2
11	6221150	ALIGNMENT RING	1
12	6221160	GEAR HOUSING ASSEMBLY	1
13	6300770	VALVE PLUG	1
14	6600350	BUSHING	1
15	6600360	VALVE STEM	1
16	7012130	CONNECTOR	2
17	7036030		2
18		RED AIR TUBE	1
19	7300720	GREEN AIR TUBE	1
20	7303670	HYDRAULIC HOSE	2
21	7680080	O-RING	1
22	7680120	O-RING	2
23	7680140	O-RING	1
24	7805060	HYDRAULIC MOTOR	1
25	8030030	SCREW	1
26	8208320	SCREW	4
27	8211080	SCREW	2
28	8241050	SCREW	1
29	8602050	KEY	1
30	8620080	PIN	1
31	8640030	DRIVE SCREW	4
32	8890010	SPRING	1

Figure 3 BOM FOR MODELS HSC-650

GEARS AND GEAR HOUSING ASSEMBLY

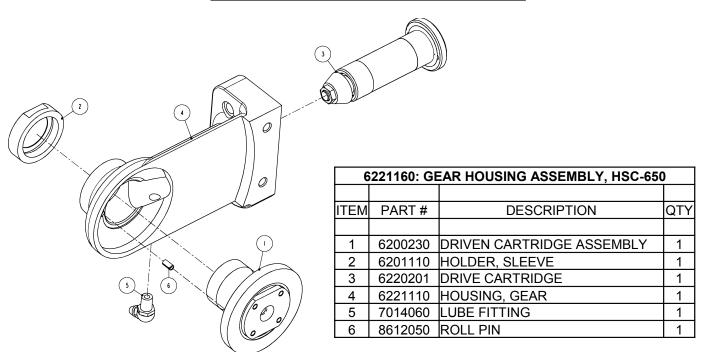


Figure 4 6221160: GEAR HOUSING ASSEMBLY, HSC-650

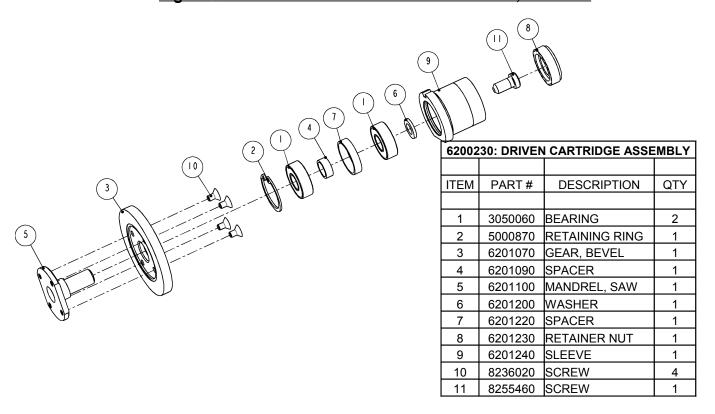


Figure 5 6200230: DRIVEN CARTRIDGE ASSEMBLY

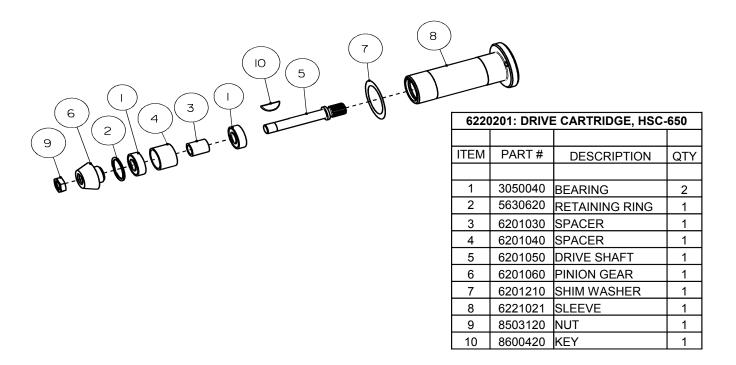


Figure 6 6220201: DRIVE CARTRIDGE ASSEMBLY, HSC-650


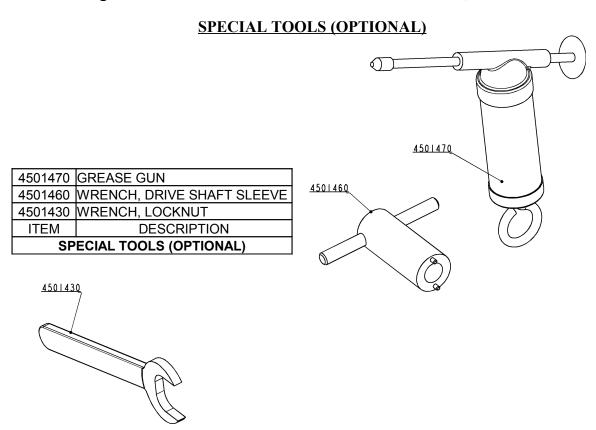


Figure 7 HSC-650, SPECIAL TOOLS (OPTIONAL)


HSC-650, BLADE GUARD AND DEPTH GAUGE, 6.5"

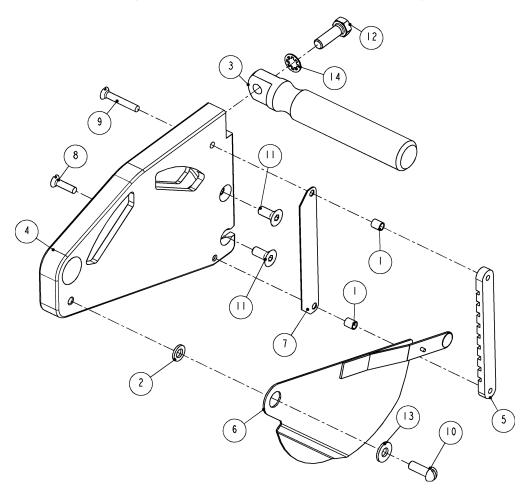

6220220: GUARD AND DEPTH GAUGE, 6.5"			
ITEM	PART#	DESCRIPTION	QTY
1	6201180	SPACER, BRIDGE	2
2	6201200	WASHER	1
3	6211030	HANDLE	1
4	6221030	GUARD	1
5	6221040	BRIDGE	1
6	6221050	DEPTH GAUGE, 6.5" BLADE	1
7	6221070	PLATE, FRICTION	1
8	8010060	SCREW	1
9	8010100	SCREW	1
10	8031060	SCREW	1
11	8241050	SCREW	2
12	8413080	SCREW	1
13	8505100	WASHER	1
14	8507150	WASHER	1

Figure 8 6220220: GUARD AND DEPTH GAUGE, 6.5"

FRONT HANDLE (OPTIONAL)

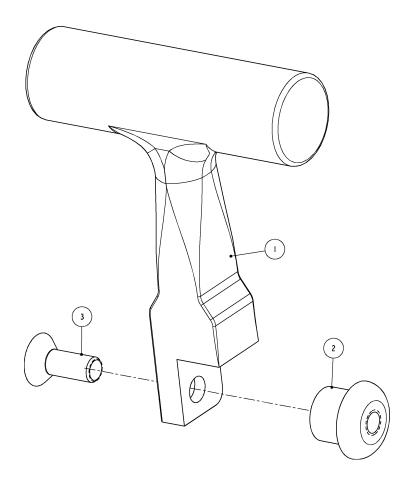

6201640: FRONT HANDLE (OPTIONAL)			
ITEM	PART#	DESCRIPTION	QTY
1	6201620	FRONT HANDLE	1
2	6201630	NUT	1
3	8245080	SCREW	1

Figure 9 6201640: FRONT HANDLE (OPTIONAL)

MODEL HSC-800, MULTI PURPOSE BONE SAW

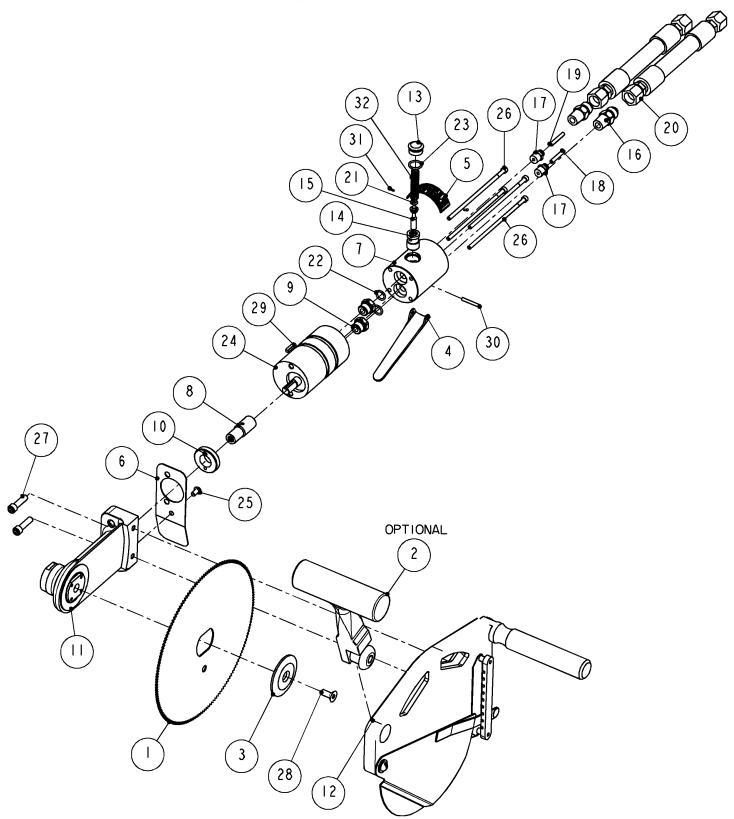


Figure 10 MODEL HSC-800

KENTMASTER MFG. CO., INC. 1801 SOUTH MOUNTAIN AVE., MONROVIA, CALIFORNIA 91016 UNITED STATES OF AMERICA ① TELEPHONE: (626) 359-8888 FAX: (626) 303-5151

	6222000	D: HSC-800, MULTI PURPOSE BONE SAW	
ITEM	PART #	DESCRIPTION	QTY
	4000230	8" SAW BLADE, 150 TEETH, STANDARD	1
1	4000140	8" SAW BLADE, 100 TEETH	1
	4000310	8" SAW BLADE, 74 TEETH, SKIP TOOTH	1
2	6201640	FRONT HANDLE / OPTIONAL	1
3	6201120	HOLDER, BLADE	1
4	6211670	LEVER	1
5	6211690	NAME PLATE	1
6	6221100	GUARD	1
7	6221120	BODY, VALVE	1
8	6221130	COUPLING	1
9	6221140	FITTING	2
10	6221150	ALIGNMENT RING	1
11	6222100	GEAR HOUSING ASSEMBLY	1
12	6222200	GUARD AND DEPTH GAUGE	1
13	6300770	VALVE PLUG	1
14	6600350	BUSHING	1
15	6600360	VALVE STEM	1
16	7012130	CONNECTOR	2
17	7036030	FITTING	2
18	7300710	RED AIR TUBE	1
19	7300720	GREEN AIR TUBE	1
20	7303670	HYDRAULIC HOSE	2
21	7680080	O-RING	1
22	7680120	O-RING	2
23	7680140	O-RING	1
24	7805060	HYDRAULIC MOTOR	1
25	8030030	SCREW	1
26	8208320	SCREW	4
27	8211080	SCREW	2
28	8241050	SCREW	1
29	8602050	KEY	1
30	8620080	PIN	1
31	8640030	DRIVE SCREW	4
32	8890010	SPRING	1

Figure 11 BOM FOR MODEL HSC-800

6222100: GEAR HOUSING ASSEMBLY, HSC-800 ITEM PART# **DESCRIPTION** QTY 6200230 DRIVEN CARTRIDGE ASSEMBLY 1 2 6201110 HOLDER, SLEEVE 1 3 6222110 HOUSING, GEAR 1 6222121 DRIVE CARTRIDGE 1 4 7014060 LUBE FITTING 1 6 8612050 ROLL PIN 1

GEARS AND GEAR HOUSING ASSSEMBLY

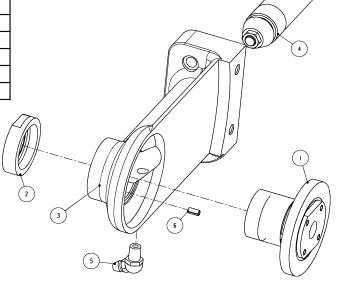


Figure 12 6222100: GEAR HOUSING ASSEMBLY, HSC-800

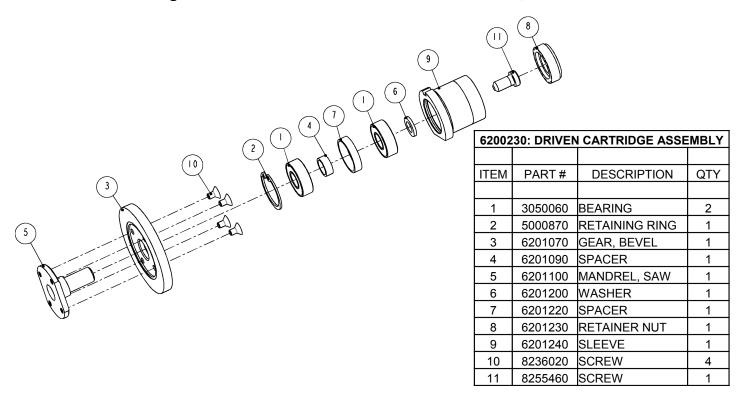


Figure 13 6200230: DRIVEN CARTRIDGE ASSEMBLY

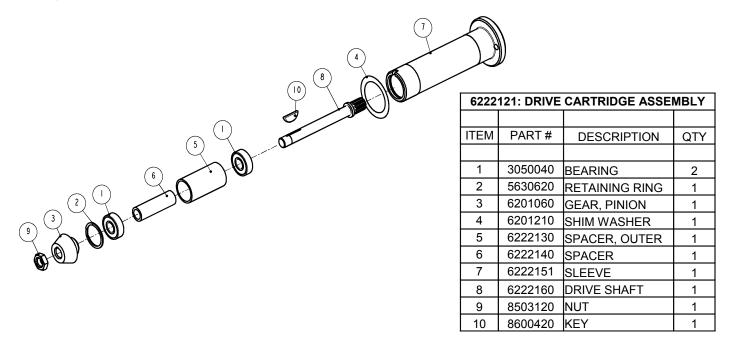


Figure 14 6222121: DRIVE CARTRIDGE ASSEMBLY, HSC-800


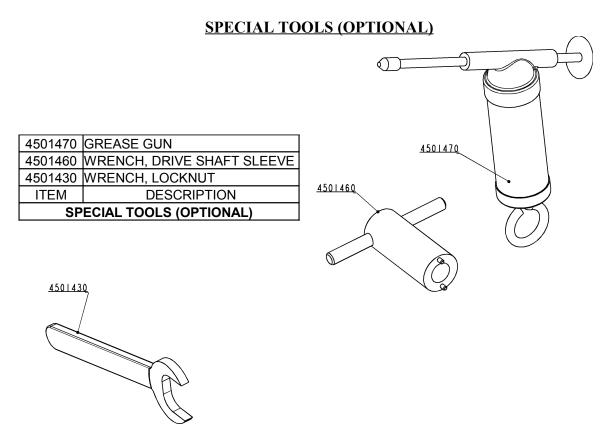


Figure 15 HSC-800, SPECIAL TOOLS (OPTIONAL)


HSC-800, BLADE GUARD AND DEPTH GAUGE, 8.0"

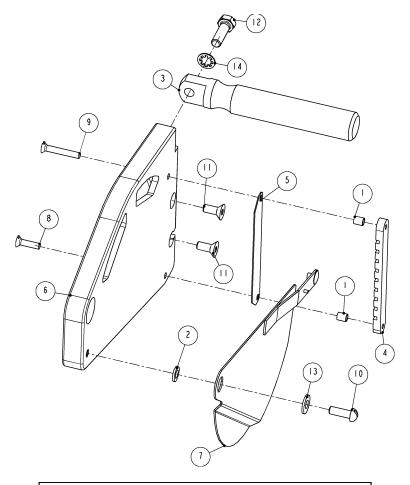

6222200: GUARD AND DEPTH GAUGE, 8.0"			
ITEM	PART#	DESCRIPTION	QTY
1	6201180	SPACER, BRIDGE	2
2	6201200	WASHER	1
3	6211030	HANDLE	1
4	6222240	BRIDGE	1
5	6222250	PLATE, FRICTION	1
6	6222210	GUARD	1
7	6222220	DEPTH GAUGE, 8" BLADE	1
8	8010060	SCREW	1
9	8010100	SCREW	1
10	8031060	SCREW	1
11	8241050	SCREW	2
12	8413080	SCREW	1
13	8505100	WASHER	1
14	8507150	WASHER	1

Figure 16 6222200: GUARD AND DEPTH GAUGE, 8.0"

FRONT HANDLE (OPTIONAL)

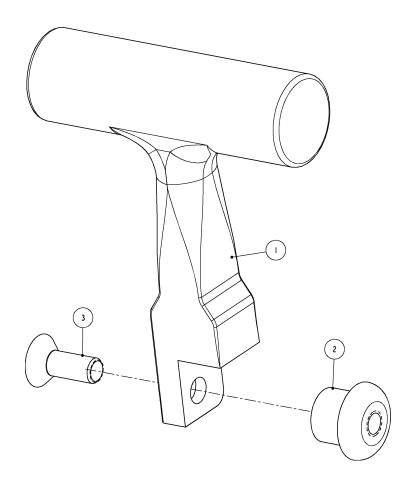

6201640: FRONT HANDLE (OPTIONAL)			
ITEM	PART#	DESCRIPTION	QTY
1	6201620	FRONT HANDLE	1
2	6201630	NUT	1
3	8245080	SCREW	1

Figure 17 6201640: FRONT HANDLE (OPTIONAL)

HSC-TUBING DIAGRAM AND POWER SUPPLY


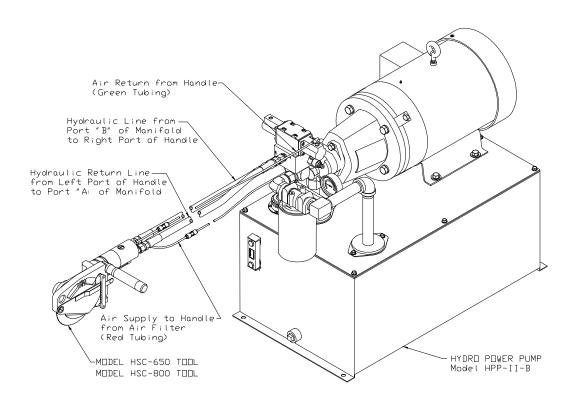


Figure 18 HSC-TUBING DIAGRAM AND POWER SUPPLY

[ENGLISH]

GENERAL INFORMATION

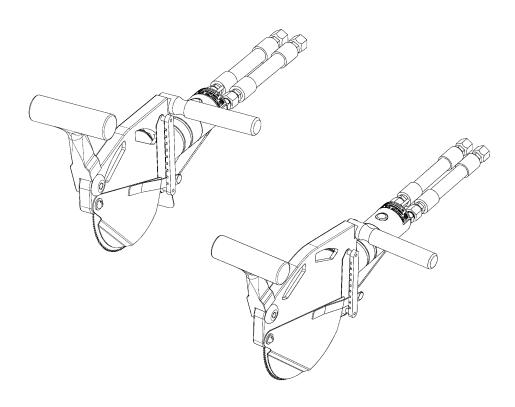

MODELS

HSC-650 MULTI PURPOSE BONE SAW (6220100) HSC-800 MULTI PURPOSE BONE SAW (6222000)

SERVICE CENTERS

KENTMASTER LTD. (U.K)
16 AVONBANK INDUSTRIAL CENTRE
WEST TOWN ROAD
AVONMOUTH - BRISTOL BS11 9DE
UNITED KINGDOM

TELEPHONE: ++ 44- (0) 117- 9235035 FAX: ++ 44- (0) 117- 9829010 KENTMASTER MFG. CO., INC. 1801 SOUTH MOUNTAIN AVE. MONROVIA, CALIFORNIA 91016 UNITED STATES OF AMERICA

TELEPHONE: (626) 359-8888 FAX: (626) 303-5151

NOTICE TO EMPLOYER AND PURCHASER OF TOOL NOTICE TO SAFETY DIRECTOR

You have purchased a powerful tool that, if misused, can cause severe injury and harm to your employees. You must instruct your employees in the safe and proper use of this tool and to follow the safety procedures and instructions that have been supplied by the manufacturer of this tool. Please follow the following instructions.



- **1.** Instruct tool operators to test the tool each day before using it to be sure it does not malfunction. Remove and repair any tool that malfunctions.
- 2. Instruct tool operators to immediately stop using a tool that malfunctions or is defective.
- **3.** Instruct personnel to immediately remove all tools that malfunction. Be sure to disconnect tool from power supply.
- 4. Instruct all personnel to stay clear of tool, and not to stand or walk in front of, or next to tool when in use.
- **5.** Point out to all personnel the dangers related to the misuse of tool and the importance of following safety procedures and instructions.
- **6.** Do not make, or allow others to make, alterations or modifications to this tool. Replace all lost or illegible labels.
- **7.** Follow all safety, installation and maintenance instructions provided with this tool. Establish proper safety procedures in accordance with local and national requirements to prevent accidental energizing of tool that can cause injuries.
- **8.** If this tool is sold or change in ownership takes place, you must provide the new owner all safety instructions, notices and maintenance instructions you were originally provided. You can obtain additional copies of the instructions from Kentmaster, free of charge upon request.
- 9. Give copies of instructions to: (A) Tool Operators
 - (B) Maintenance Supervisor
 - (C) Clean-up Supervisor

Kentmaster Worldwide Location

Kentmaster Equipment (Aust) PTY.LTD.

Unit 2,24 Central Court Browns Plains Qld. 4118

Australia

Telephone: (07) 3806-8400 Fax: (07) 3806-7933

Australia@Kentmaster.com Kentmaster do Brasil, Ltda.

Av. Dr. Joao Teodoro No. 805 Bairro De Vila Rezende 13405-240 Piracicaba, SP,

Brazil

Telephone #1: (019) 3 413 3113 Telephone #2: (019)983-4973

Fax: (019) 3 413 3113 Brazil@Kentmaster.com

Kentmaster (IRL) LTD. Benamore, Dublin Road.

Roscrea, CO, Tipperary, Ireland

Telephone: (353) 0505-23292 Fax: (353) 0505-23299

Ireland@Kentmaster.com

Kentmaster Equipment (NZ) LTD.

5 Cooper Street Havelock North New Zealand

Telephone #1: (64) 6 8777 857 Telephone #2: 0800 KENTMASTER

Fax: (64) 6 8777 858

NewZealand@Kentmaster.com

Kentmaster South Africa (PTY) LTD.

Johannesburg - S. Africa Unit 54 Sunnyrock Park Sunrock Close, Germiston South Africa

Telephone: (27) 11-455-3748 Fax: (27) 11-455-3749

SouthAfrica@Kentmaster.com

Kentmaster (UK) LTD.
Unit 16 Avonbank Ind. Centre
West Town Rd, Avonmouth-Bristol,

BS11 9DE England

Telephone: (44) 117-923-5035 Fax: (44)-117-932-9010 UK@Kentmaster.com

Kentmaster Mfg. Co., Inc. 1801 South Mountain Ave. Monrovia, CA, 91016

USA

Telephone #1: (626) 359-8888 Telephone #2: (800) 421-1477

info@Kentmaster.com Kentmaster Omaha 4417 South 139th Street Omaha, NE, 68137

Fax: (626) 303-5151

USA

Telephone #1: (402) 896-3355 Telephone #2: (800) 367-3181

Fax: (402) 896-3311 Omaha@Kentmaster.com

INDEX

OPERATING AND SAFETY INSTRUCTIONS
OPERATING INSTRUCTIONS
MAINTENANCE
SERVICE
PARTS BOOK
MODEL HSC-650, MULTI PURPOSE BONE SAW
GEARS AND GEAR HOUSING ASSEMBLY
SPECIAL TOOLS (OPTIONAL)
HSC-650, BLADE GUARD AND DEPTH GAUGE, 6.5"
FRONT HANDLE (OPTIONAL)
MODEL HSC-800, MULTI PURPOSE BONE SAW
GEARS AND GEAR HOUSING ASSSEMBLY
SPECIAL TOOLS (OPTIONAL)
HSC-800, BLADE GUARD AND DEPTH GAUGE, 8.0"
HSC- TUBING DIAGRAM AND POWER SUPPLY
NOTICE TO EMPLOYER AND PURCHASER OF TOOL
Kentmaster Worldwide Location
INDEX