



WAREWASHING
SOLUTIONS
1 3 0 0 2 1 7 4 1 1

INSTRUCTIONS FOR

Norris IM17 / IM5 DISHWASHER



Detergent — CHECK DETERGENT & RINSE AID IS CONNECTED

then check the tubes / weights are sitting in the detergent

Operation

1. Ensure that the bottom and side filters are in place
2. Press the **ON / OFF** button to turn on the machine. Door closed
3. Wait for the machine to fill & heat (approx. 20 minutes) to operating temperature (all lights will stop flashing)
4. Press the middle button & scroll to select wash time program.
5. Press **START**: the light above will flash, indicating machine operating.
6. End of cycle is displayed by the middle cycle light, it will stop flashing word **END**
7. The machine is ready for another load when temperature is ready

End of day procedures

Drain, Empty & Clean Dishwasher

- 1: Remove 2 side filters then close the door
- 2: Press the **CYCLE** button until drain symbol lights
- 3: Press **START**
- 4: The dishwasher will turn off once draining is complete – then remove bottom filter & clean filter & also wipe the bottom of machine

Regularly clean the wash / rinse arms

Loosen wash/rinse arm attachment to remove – then clean and replace. This should be done regularly to both top and bottom arms



Don't forget to replace all filters



These instructions **MUST** be adhered to as stated in the food act,
“PREVENTION OF CONTAMINATION OF FOOD AND FOOD PRODUCTS”.

AUTHORISED DISTRIBUTOR



WAREWASHING
SOLUTIONS
1 3 0 0 2 1 7 4 1 1
COMMERCIAL DISHWASHER SPECIALIST

Contacts: info@warewashingsolutions.com.au 1300 217 411