

User Manual

Ellipse Super Lite Rollator



Carbon Fibre Rollator



Thank you for purchasing the Peak-Care Ellipse Super Lite Rollator.

The Walking aid is suitable for a single user with limited mobility. The Ellipse Super Lite is ideal for indoor and outdoor use.

Kindly take time to go through this manual which gives you more details about your Ellipse Super Lite Rollator. Kindly keep this booklet handy and use it as and when required.

Ellipse Super Lite is warrantied to be free of defects in material and workmanship for twelve months from the date of purchase.

This device was built to exacting standards and carefully inspected prior to packing and shipping. This warranty is an expression of our confidence in the materials, our workmanship and an assurance of the same to our customers.

In the event of a defect covered by this warranty, we will at our option supply parts or replace the unit.

This warranty does not cover device failure due to owner's misuse or negligence or normal wear and tear. This warranty does not extend to nondurable components such as rubber accessories, castors and grips, which are subject to normal wear and need periodic replacement.

This equipment does not contain any user serviceable parts. Any damaged components of the rollator should only be replaced with genuine, original parts available from Peak Care Equipment.

If you have any queries, please contact the distributor.

| Kindly attach your receipt to this booklet |
|--------------------------------------------|
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |



List of Parts



- 1. Handgrip
- 2. Adjustable tubing hand grip
- 3. Rear reflector handgrip
- 4. Brake lever
- 5. Interlock button for handgrips
- 6. Back Strap

- 7. Seat
- 8. Bag
- 9. Front wheel
- 10. Brake adjust screw
- 11. Rear wheel
- 12. Safety bow

This pack includes





UNFOLDING ELLIPSE SUPER LITE

Position Ellipse on its safety bow and lift it



Push downwards on the seat rails to engage the locking mechanism.



HEIGHT ADJUSTMENT


Press the red release button located below the handgrips as shown and at the same time either push the handle down (lowering handle height) or pull the handle up (raising handle height), releasing the push button will automatically lock the handle at desired height.



ATTACHING THE CARRY BAG

Fold Ellipse Super Lite, Remove the stopper from the tube on either side of the seat, push the sliding block from bag into the guiding sleeve and put the stopper back in place



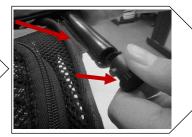



BRAKING / LOCKING

Pull both brake levers upwards to apply the brakes while the Ellipse Super Lite is moving. Always brake slowly and steadily






The effect of the brakes can be affected by abrasion of the wheels. Test the brakes regularly.



ADJUSTMENT OF BRAKES

To adjust the braking strength, adjust the brake by pressing the screw housing downwards and then left or right

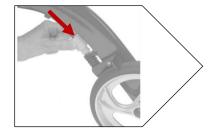



SITTING

Position the Ellipse Super Lite on an even and solid surface. Lock the brakes (parking position). The Ellipse Super Lite must stand and must not slip. Sit straight up and do not lean backwards



FOLDING/TRANSPORT/STORAGE

To fold, pull seat upwards by the handle of the seat plate



Once the Ellipse Super Lite is folded, use the red safety clip to secure the seat. This will stop the walker from opening whilst lifting in or out of a vehicle. See below:







SAFETY INSTRUCTIONS





IMPORTANT Do not propel yourself or have anyone push you whilst you are seated on the Rollator. This is a walking aid only and is not to be used as a transportation device.

- Use only as walking aid
- Use only on even and solid surfaces
- Maximum user weight: 120 Kg
- Regularly check the screws and fasteners on the Ellipse Super Lite and retighten if necessary.
- Use bag only for transport of objects and do not overload. Maximum load: 5 Kg
- Do not expose the product to temperatures above 40 °C for an extended period of time, as this can cause the Ellipse Super Lite parts to overheat and burn the user
- Please make sure the Rollator is fully opened, seat is down and the folding bar under seat is locked in the down position.
- Ensure that both knobs are fully tightened and are at equal heights. Test Rollator for stability before applying full weight to hand grips.
- Test the brake lever before operating the Rollator. When wheels are locked, lock bar on rear wheels should prevent wheels from turning. When locks are released, the wheels should turn freely.
- Always lock the brake lever before sitting and do not use seat when unit is on an inclined or uneven ground.
- Replace castors when tyres are significantly worn or damaged.

CLEANING AND MAINTENANCE

Clean regularly by hand with a damp cloth. Do not use aggressive detergents.

SPECIFICATIONS

| | Small | Medium | Large |
|------------------------------------|-------|--------|-------|
| Overall Length (mm) | 660 | 680 | 706 |
| Overall width (mm) | 600 | 600 | 600 |
| Handle (highest) (mm) | 850 | 960 | 1050 |
| Handle (lowest) (mm) | 760 | 835 | 920 |
| Seat depth (mm) | 220 | 220 | 220 |
| Seat Width (mm) | 450 | 454 | 454 |
| Seat height (mm) | 480 | 520 | 600 |
| Product nett weight (approx.) (kg) | 6.26 | 6.63 | 6.69 |
| Weight Limit (kg) | 120 | 120 | 120 |
| Wheel diameter Rear (mm) | 203 | 203 | 203 |
| Wheel diameter Front (mm) | 203 | 242 | 242 |



Level 1, 149 Princes Highway **Unanderra NSW 2526** Australia

Tel: +61 2 4272 2688. Fax: +61 2 4272 2699

www.peak-care.com.au

| Distributor | D | is | tri | b | ut | 0 | r | |
|-------------|---|----|-----|---|----|---|---|--|
|-------------|---|----|-----|---|----|---|---|--|

Page intentionally left blank

