


INSTRUCTION MANUAL FOR LABORATORY HOMOGENIZERS

Laboratory Equipment Pty Ltd
"Proudly Australian Owned and Operated."
26 Farr Street, Marrickville NSW 2204
Phone +61 02 95602811 Fax +61 02 95606131
www.labec.com.au

I · OUTLINE

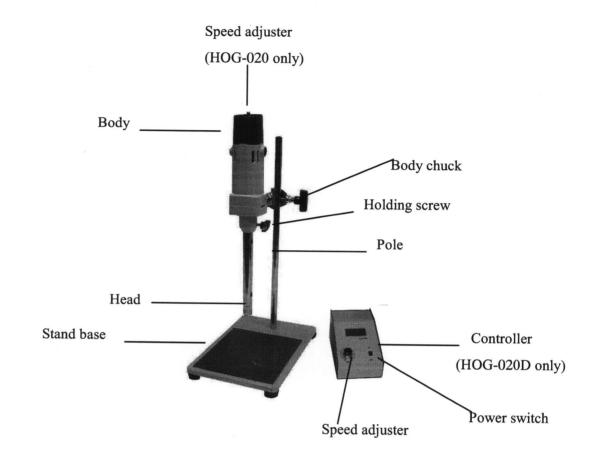

Model	HOG-020 / HOG-020D	
Power	AC 110 / 220V , 50 / 60 Hz	
Motor	AC 250W	
Max. speed (rpm)	26,000	
Driver	Electronic type	
Safety device	Fuse	
Coating	Medicine-resisting	
Weight (kg)	7	

///, OPERATION INTRODUCTION

- 1. Put container on stand base and keep distance between the head and bottom of container.
- 2. Turn the speed button to the end of left side.
- 3. Put plug into socket and then switch to be "ON" to start it.
- 4. Adjust speed button to be proper speed per your demand.
- 5. When you stop it, please turn speed button to the end of left side.
- 6. Switch the key to be "OFF".

IV. ATTENTION

- 1. Do not start it without any material inside container.
- 2. The speed has to match material's viscosity to avoid head at empty rotation.
- 3. Bad fluid is not suitable to the instrument
- 4. Heads are changeable, please loose the holding screw and take head off.
- 5. After you clean or change head, please must fix and screw it tightly.

V. INSPECTION

When the machine is out of order, please check following possible facts:

- 1. Fuse burns out or note
- 2. Carbon brushes at both sides of motor use out or contact improperly.
- 3. If carbon brushes use out, then take it off and renew it.

If above have been checked and useless, please send the machine back to agent for further examination and maintenance.

VI, APPLICATION OF HEADS


Model	Applicable range		
GEN-0010	To homogenize or mix on cell tissue in micro volume.		
GEN-0250	1. To disperse plant or animal tissue.		
	2. To treat suspensions and emulsions.		
	3. Homogenizing and mixing.		
	4. Extraction function.		
GEN-2000	1. To disperse plant or animal tissue.		
	2. To treat suspensions and emulsions.		
	3. Homogenizing and mixing.		
	4. Extraction function.		
GEN-3000	To disperse organic and inorganic matters.		
	2. Homogenizing and mixing.		
	3. Extraction function.		

VII, SPECIFICATION OF HEADS


Model	Circumference Speed (m/s)	Capacity (ml)	Size (mm)
GEN-0010	6.3	0.3~10	ф7 х 130
GEN-0250	11.3	2~250	ф12 х 170
GEN-2000	20.1	20~2000	ф20 х 200
GEN-300	29.9	100~3000	ф30 х 250

GEN-0010


Insult the tools into the shaft

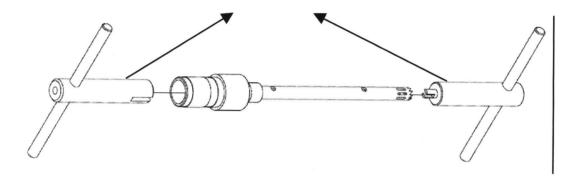

Turn the tools to open

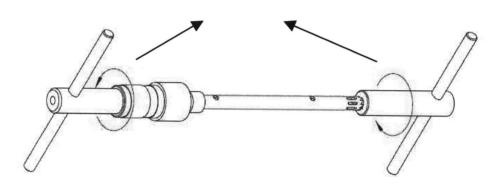


After open the shaft, 3 main parts from shaft GEN-0010 as follows

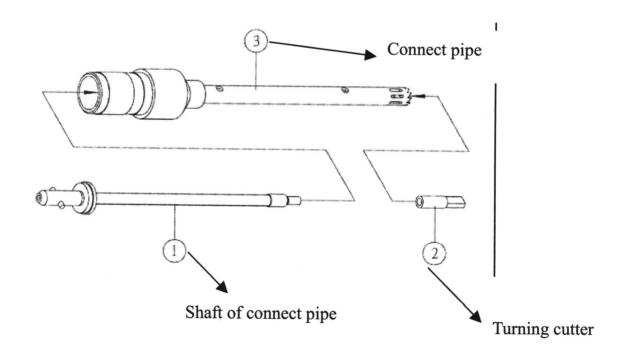


GEN-0250


Insult the tools into the shaft

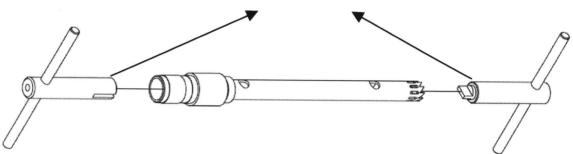


Turn the tools to open

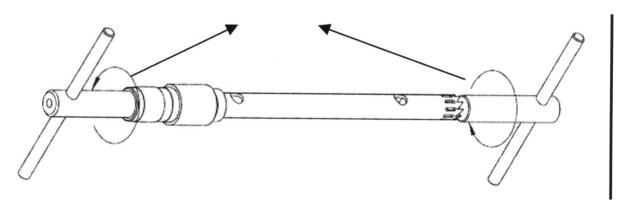


After open the shaft, 7 main parts from shaft GEN-0250 as follows

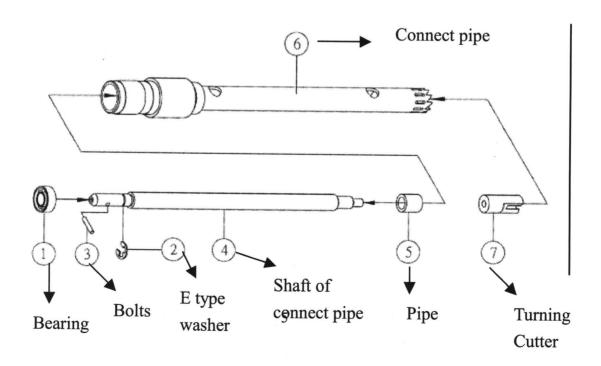


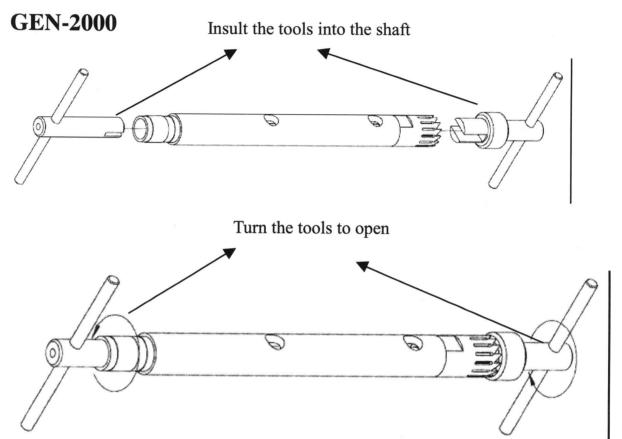


After open the shaft, 8 main parts from shaft GEN-2000 as follows

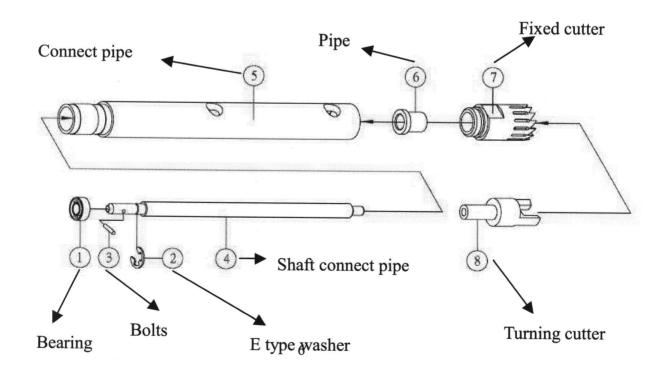

GEN-3000

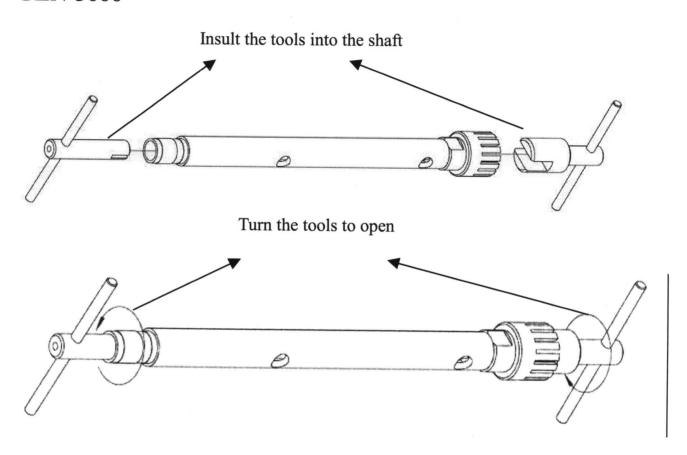


After open the shaft, 8 main parts from shaft GEN-3000 as follows

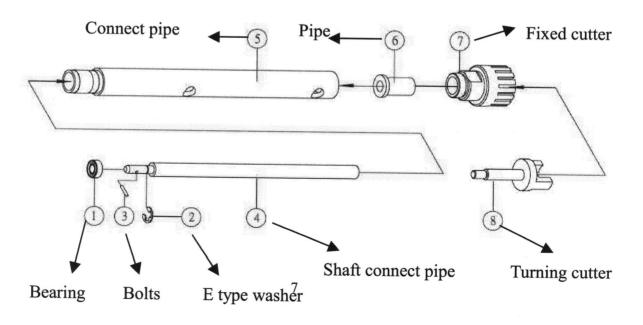


GEN-0010

Put each parts into Accordinly with the drawing

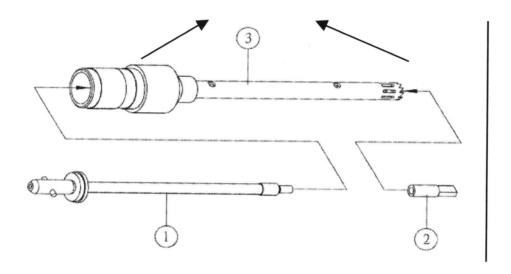


Insult the tools into the shaft

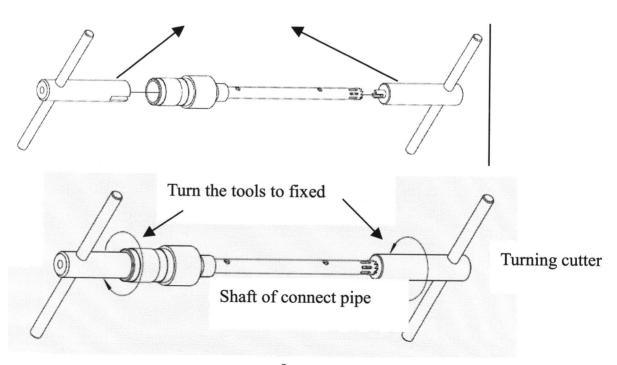


GEN-0250


Put each parts into Accordingly with the drawing

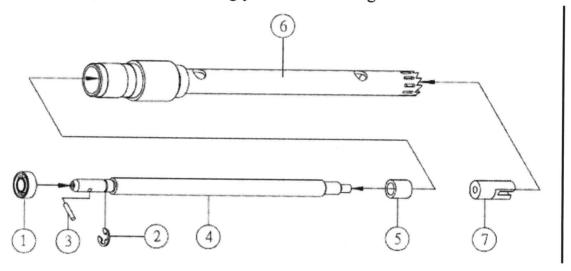

Insult the tools into the shaft

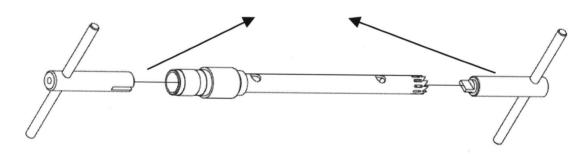


Turn the tools to fixed

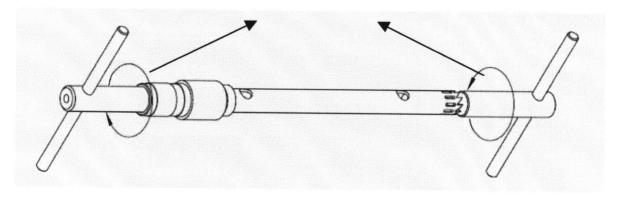


GEN-2000


Put each parts into Accordinly with the drawing

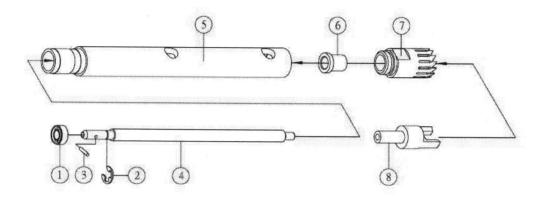

Insult the tools into the shaft

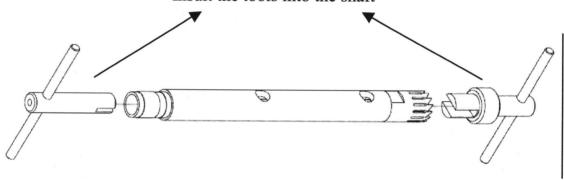


Turn the tools to fixed

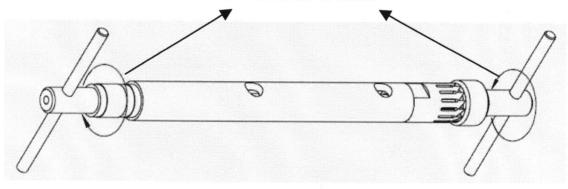


GEN-3000

Put each parts into Accordinly with the drawing

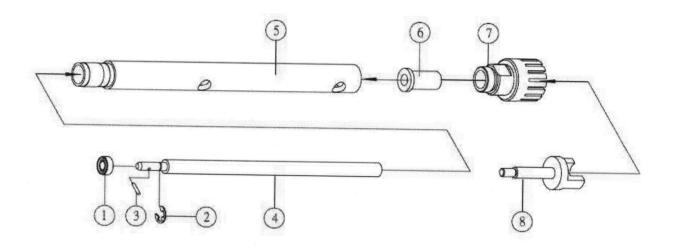

Insult the tools into the shaft

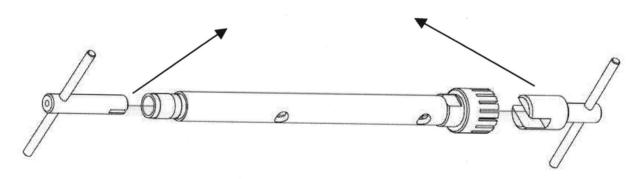

Turn the tools to fixed

