No. TD05-28-1019 Date May. 23, 2005

INSTRUCTION MANUAL

FOR

Fiberoptic Rotary Joint

Optical Component Engineering Information Systems Group

Hitachi Cable, Ltd.

1. General

This instruction manual describes install procedure of multi-port Fiberoptic Rotary Joint (FORJ).

2. Construction

Construction of Fiberoptic Rotary Joint and connecting rod (accessory) are shown in Drawings listed in Table 1.

Type (Port Number)	Drawi	ng No.	
	Main body	Connecting rod	
4, 6 ports, Adaptor type	EH3840252		
8, 10, 12 ports, Adaptor type	EH3840253	EH4785826	
4, 6 ports, Pigtail type	EH3840250		

Table 1. List of Construction Drawings

3. Install procedure

For details of install procedure, please refer to drawings listed in Table.2.

Table	2. Lis	t of Installed	d Position	Drawings	

Type (Port Number)	Drawing No.
4, 6 ports, Adaptor type	EH4826916
8, 10, 12 ports, Adaptor type	EH4826917
4, 6 ports,Pigtail type	EH4826914

- (a) Fix connecting rod to rotator shaft.
- (b) Fix FORJ to fixing hardware with four bolts (M6).[Note] Head of connecting rod shall be seated between guide-pins of FORJ.
- (c) Connect optical connectors to FORJ of Rotator side and Stator side.
 [Note] Before connecting optical connectors, ferrules shall be cleaned up with ethyl alcohol or appropriate kit.
- 4. Handling

Below items shall be paid attention to carefully, because of the precision optical instrument.

(a) Rotating axis

Keep the rotation axis to horizontally or vertically.

[Note] In case axis of rotating is vertical, fix optical fiber cord in certain interval (approximately 5 to 10cm) so as to release the load of optical fiber on connectors.

(b) Install environment

FORJ is delicate against rain drops and dust. They shall be stored in rain drops, and dust-proof case.

(c) Space for the optical fibers and connectors

Take a space for attach and/or detach of optical fibers and connectors. Required space is listed in Table 3.

14010		Unlant
Type (Port Number)	Required Space	Drawing No.
4, 6 ports,Adaptor type	215 +/- 1mm	EH4826916
8, 10, 12 ports, Adaptor type	224.5 +/- 1mm	EH4826917
4, 6 ports, Pigtail type	159.5 +/- 1mm	EH4826914

	Table 3.	Required Space of FORJ to Shaft
--	----------	---------------------------------

- (d) Do not shock and fall FORJ.
- (e) Do not load axis of rotating with excessive force Do not load axis of rotating with excessive force because optical system that is consist of prism and lens is aligned delicately.
- (f) Fixing accuracy for connecting rod

Fixing accuracy for connecting rod shall be kept listed in Table 4 from axis of rotation. Connecting rod shall be screwed tightly.


Table 4. Fixing Accuracy for Connecting Rod from axis of rotation			
Type (Port Number)	Required Accuracy	Drawing No.	
4, 6 ports,Adaptor type	30.5 +/- 1mm	EH4826916	
8, 10, 12 ports, Adaptor type	45 +/- 1mm	EH4826917	
4, 6 ports, Pigtail type	30.5 +/- 1mm	EH4826914	


Table 4	Fixing Accuracy	for Connecting	Rod from axis of rotation
	i inting / toourdoy		

- Optical fiber cord with connectors Handling manual for optical fiber cord with connectors is shown in figure 1. Optical connectors polishing shall be PC (Physical contact).
- 6. Others

All disputes arising out of or in connection with this instruction manual, including any question shall be resolved between Hitachi Cable, Ltd. and purchaser.


- End of document -

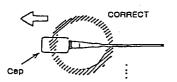

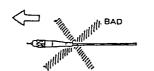

Handle a connector with a cap. When you find dusts on the endface of connector, the end face should be cleanded out with ethanol soaked gauze.


- か Don't Insert obliquely. (Insert straight.)
- Top

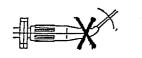



☆ Don't twist.

ightarrow Don't bend at the neck.

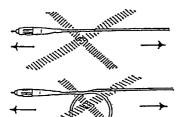

 ☆ Don't pull roughly.
 Allowable tensile strength: Less than 2.5kg(24.5N).


Don't leave the locknut loose. (Screw up.)


☆ Don't kink.



か Don't bend with less than 30mm radius.

Fig.1 Handling manual for optical fiber cord with connectors

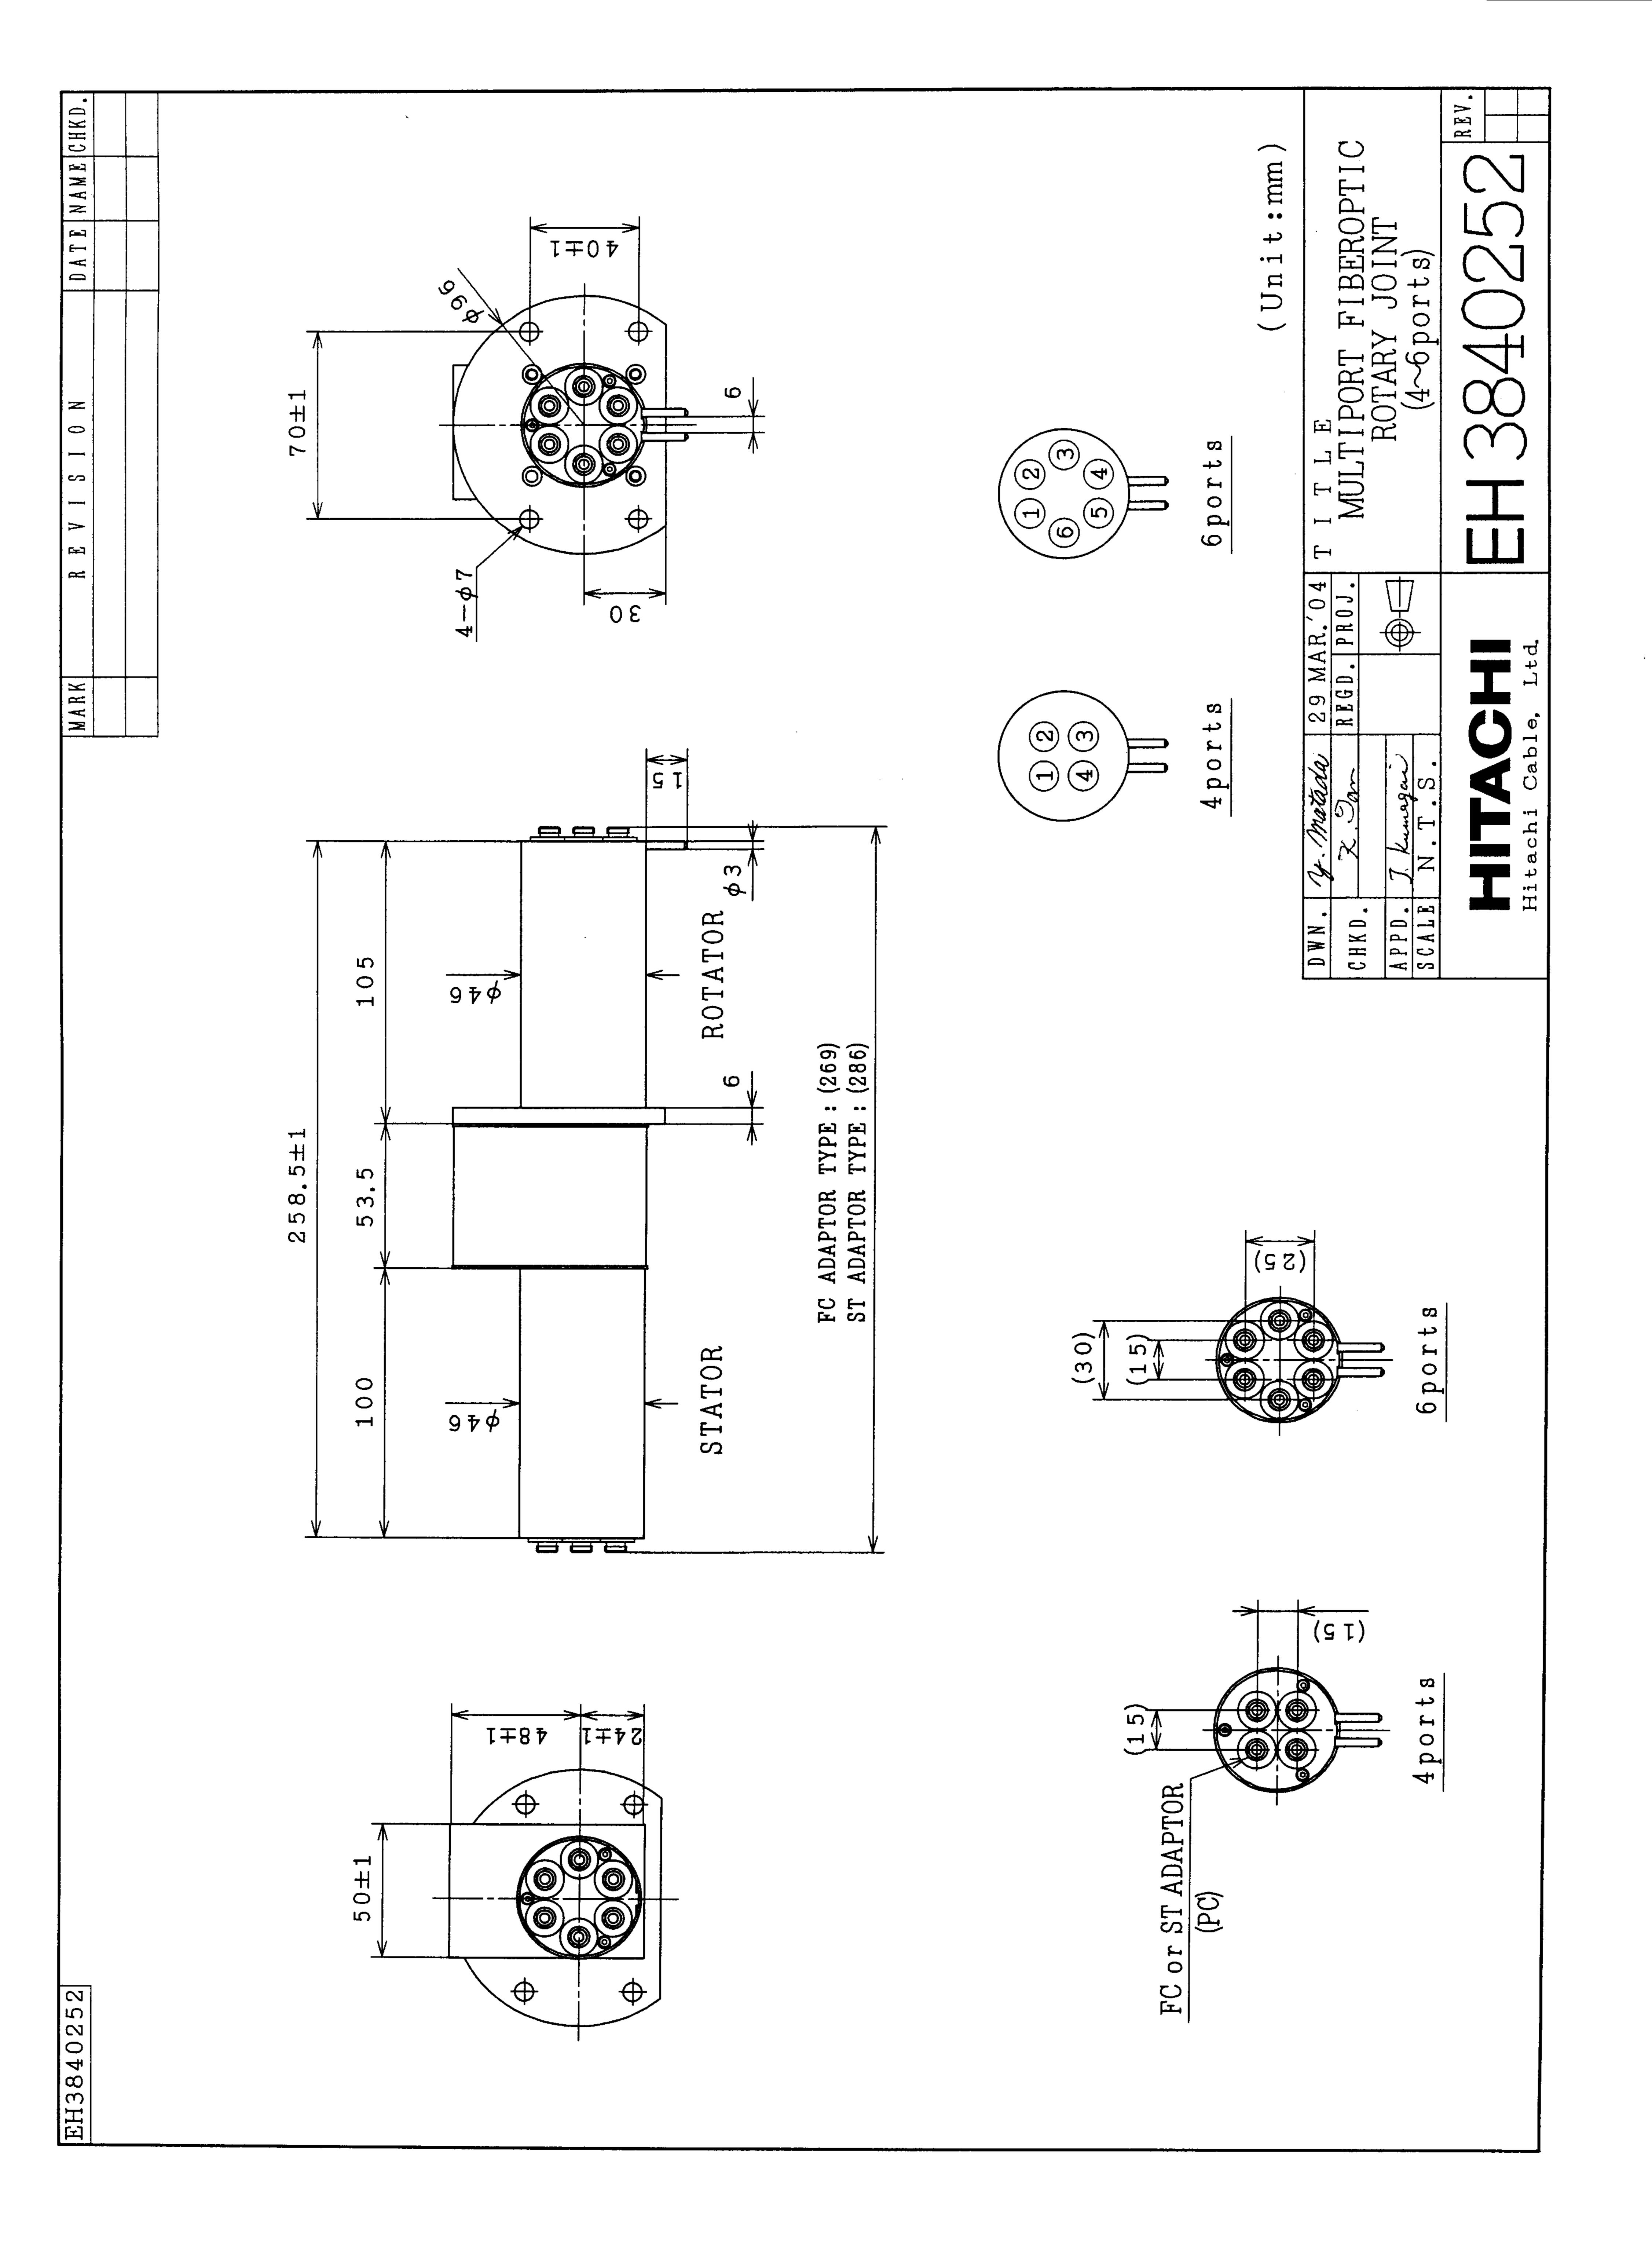

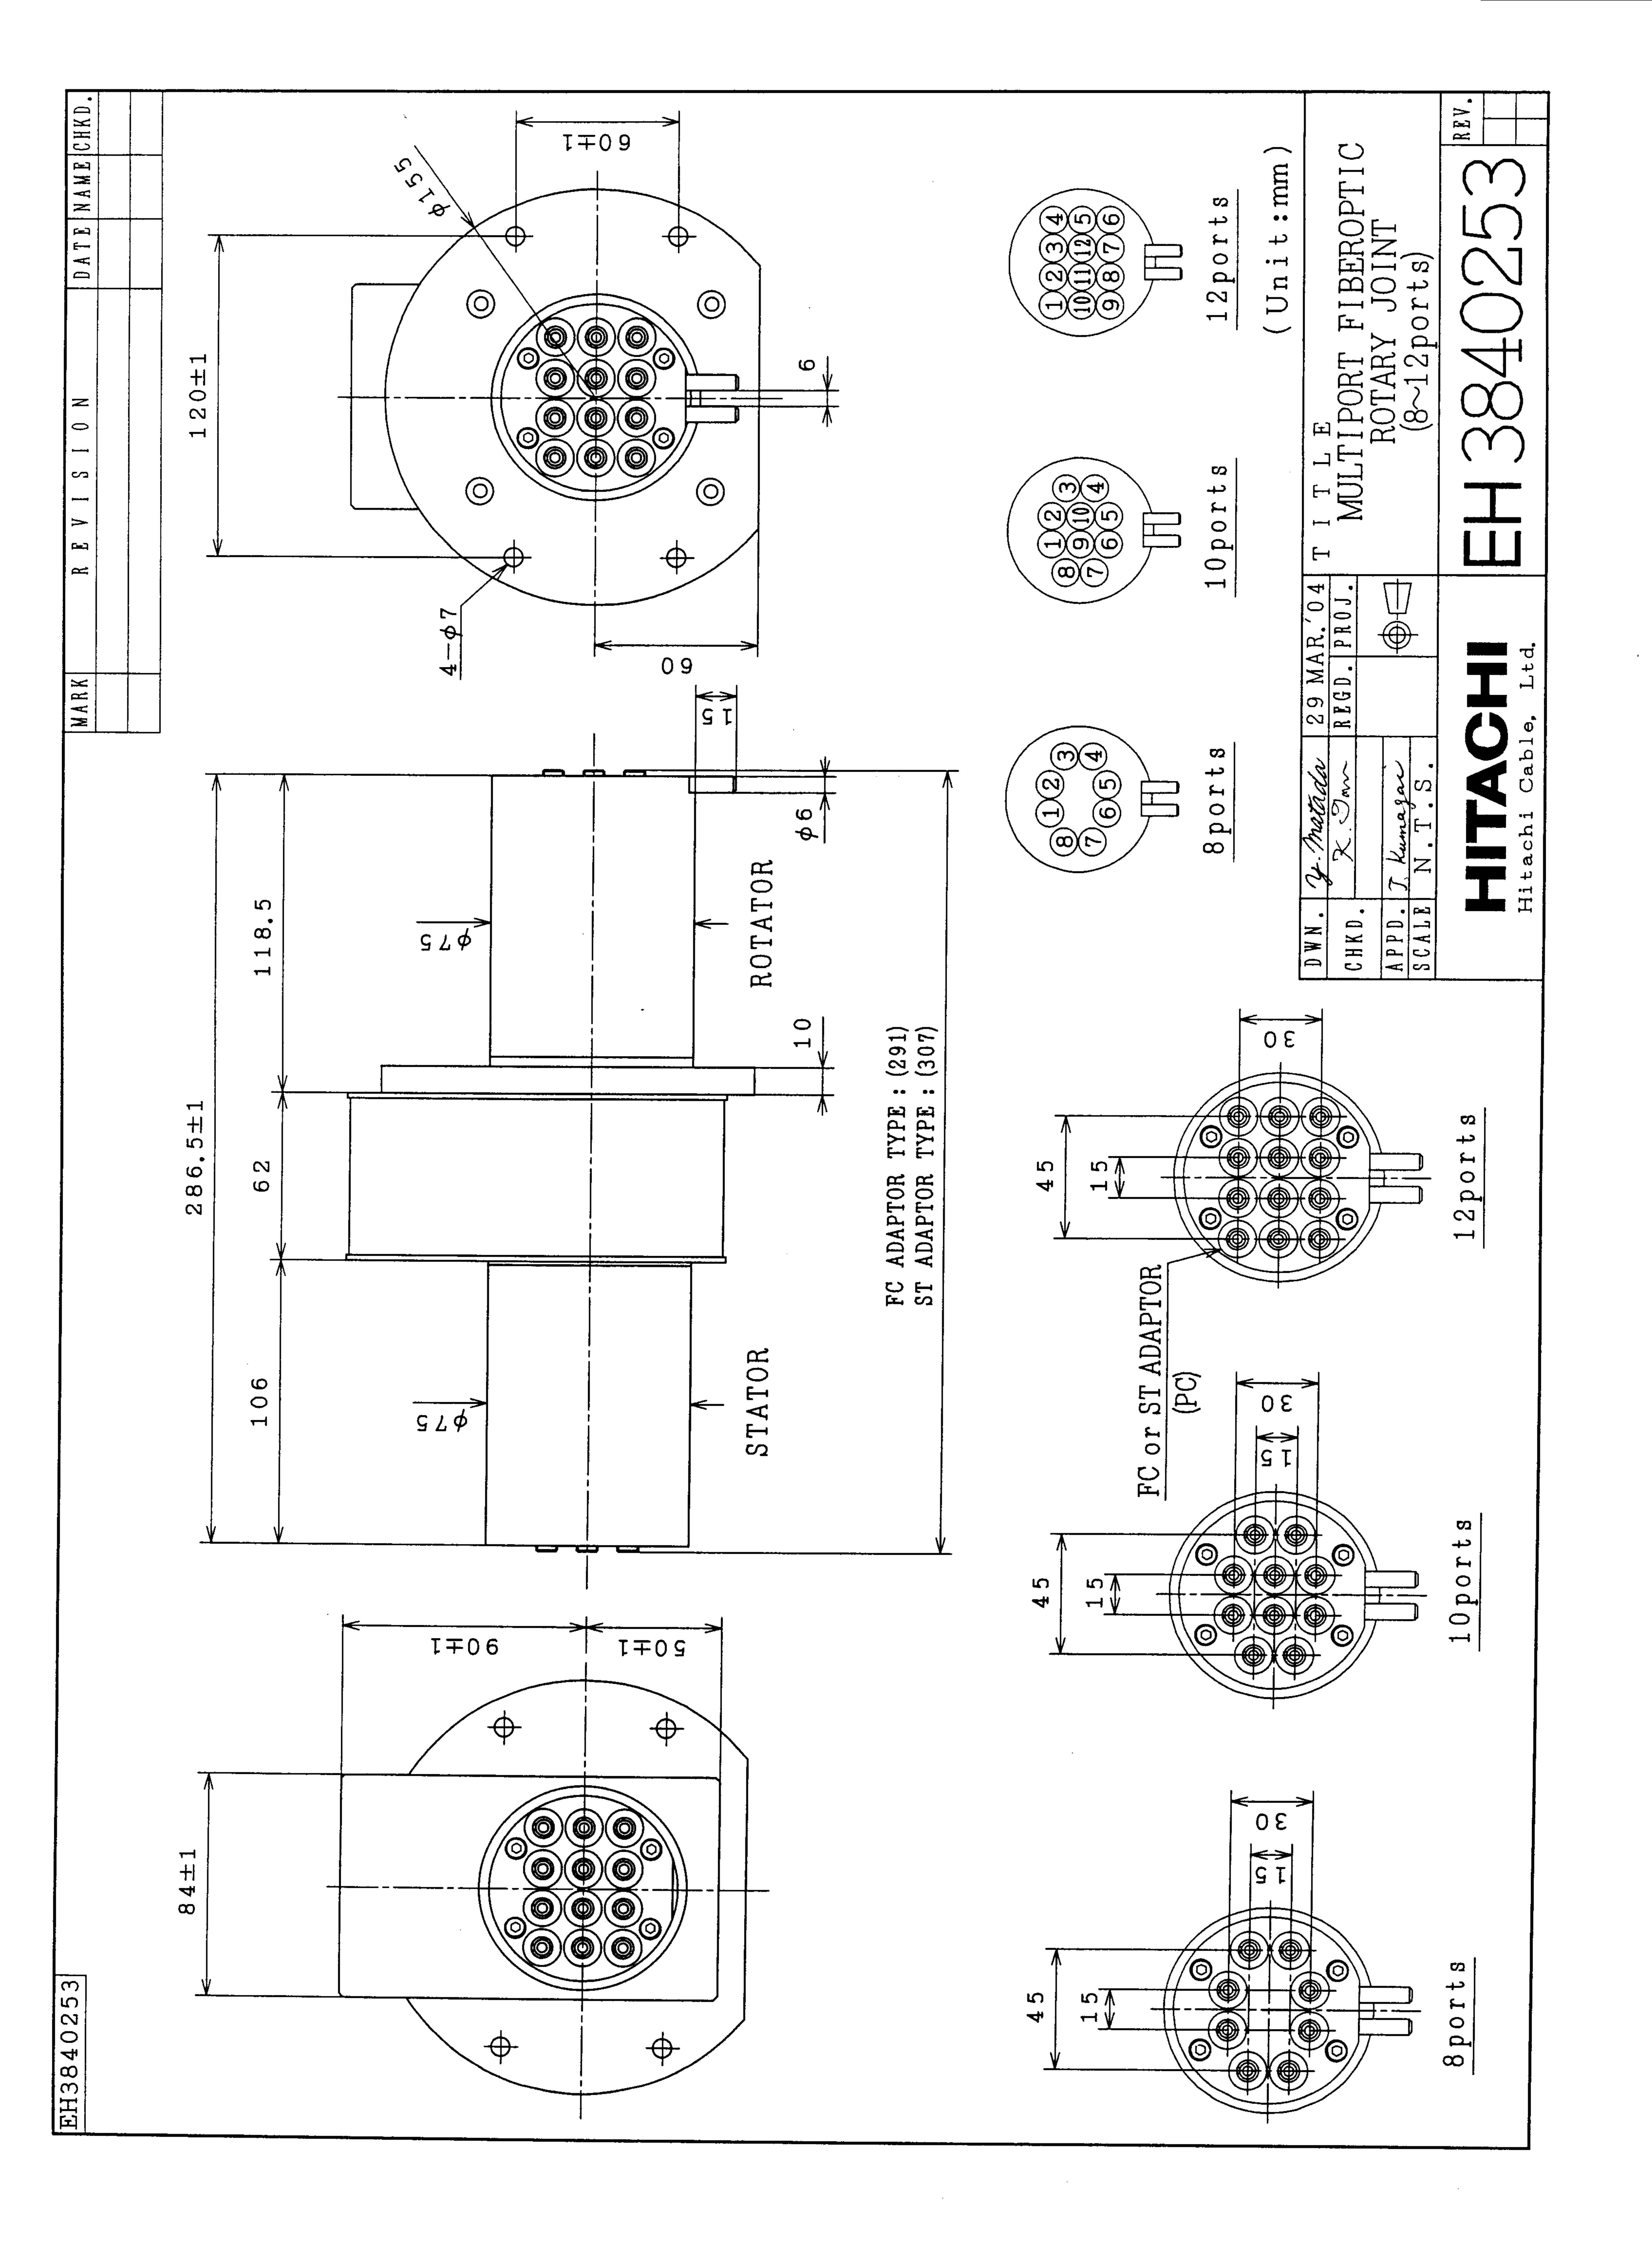

______.___ ___ ___ ___

