 
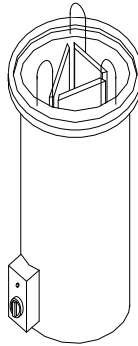 
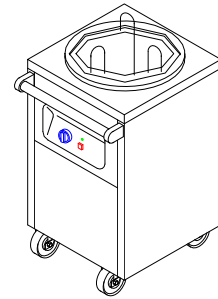 


ozti

DISH DISPENSER (ELECTRICAL)

USER'S MANUAL

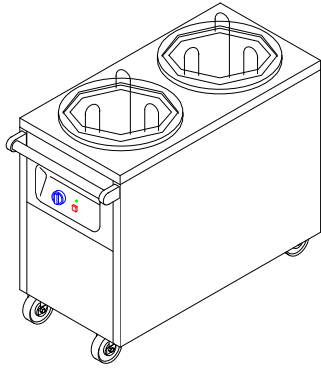

PRODUCTION YEAR:

SERIAL NO



MANUFACTURER : ÖZTİRYAKİLER MADENİ EŞYA SAN. VE TİC A.Ş.

PRODUCTION SITE : Beylikdüzü Eski Hadımköy Yolu 1.Km Büyükçekmece İstanbul/TÜRKİYE
Phone : 0090 212 886 78 00 (8 Hat-Lines) Fax : 0090 212 886 66 29

Our website: www.oztiryakiler.com

e-mail: export@oztiryakiler.com.tr

TABLE OF CONTENTS

PAGE NR.	TOPICS
1	COVER PAGE
2	TABLE OF CONTENTS
3	INTRODUCTION
4	TECHNICAL DATA
5	ELECTRICAL CIRCUIT DIAGRAM
6	MAIN DIMENSIONS AND CONTROL BOARDS
7	WARNING SIGNS
8	SAFETY DETAILS
9	TRANSPORTING AND MOVING
10	INSTALLATION OF THE APPLIANCE
11-12	OPERATION OF THE APPLIANCE
13	CLEAN-UP AND MAINTENANCE
14	TERMS OF WARRANTY



CAUTION

This appliance should only be used in facilities where relevant standards, laws and safety requirements are complied with

INTRODUCTION

Dear User,

Thank you for purchasing our appliance and for your reliance upon our company. Our appliances are used in professional kitchens in 75 countries. Our appliances are produced in compliance with international standards. **Important notice: Please read and ensure that the users read this user's manual in order to achieve the desired performance in line with your expectations and to use your appliance for long years. Please take the warnings mentioned above into consideration before calling for service...**

☞ Please read and ensure that your operation personnel also reads this user's manual care fully before installing and using the appliance. If the appliance is operated without reading the user's manual, the appliance will not be covered by the warranty.

☞ The manual containing information about installation, usage and maintenance of our product you purchased should be read carefully. Please ensure that power supply connections to the appliance are already installed by qualified personnel according to local legislation, before our authorized service personnel arrives for the installation of the appliance.







☞ If you are confused or you don't have enough information please get in touch with authorized service by phone.

☞ Please keep in mind that, if the service personnel is delayed at your site, related expenses and delay costs will be charged to you on hourly basis.




☞ We hope that you will get the best performance from our product...

TECHNICAL DATA


YOUR PRODUCT'S TYPE	 OTI 4478	 OTDN 1050	 OTI 4444	 OTDN 4444	 OTI 43	 OTKN 43
MAIN DIMENSIONS (mm)	440X780X850	440X780X850	440X440X850	440X440X850	430X850	430X850
TOTAL ELECTRICAL INPUT (kW)	3	-	1,5	-	1,5	-
POWER SUPPLY VOLTAGE (V)	220 - 240	-	220 - 240	-	220 - 240	-
WORKING FREQUENCY (Hz)	50	-	50	-	50	-
THERMOSTAT RANGE (°C)	30-90	-	30-90	-	30-90	-
SUPPLY CABLE (H07 RNF)	3 X 1,5	-	3 X 1,5	-	3 X 1,5	-
DISH CAPACITY (Pieces)	100	100	50	50	50	50
MAXIMUM SLOPE	5°	-	5°	-	5°	-
CLASS	1	-	1	-	1	-
PROTECTION CLASS	IP 20	-	IP 20	-	IP 20	-

 ELECTRICAL CIRCUIT DIAGRAM

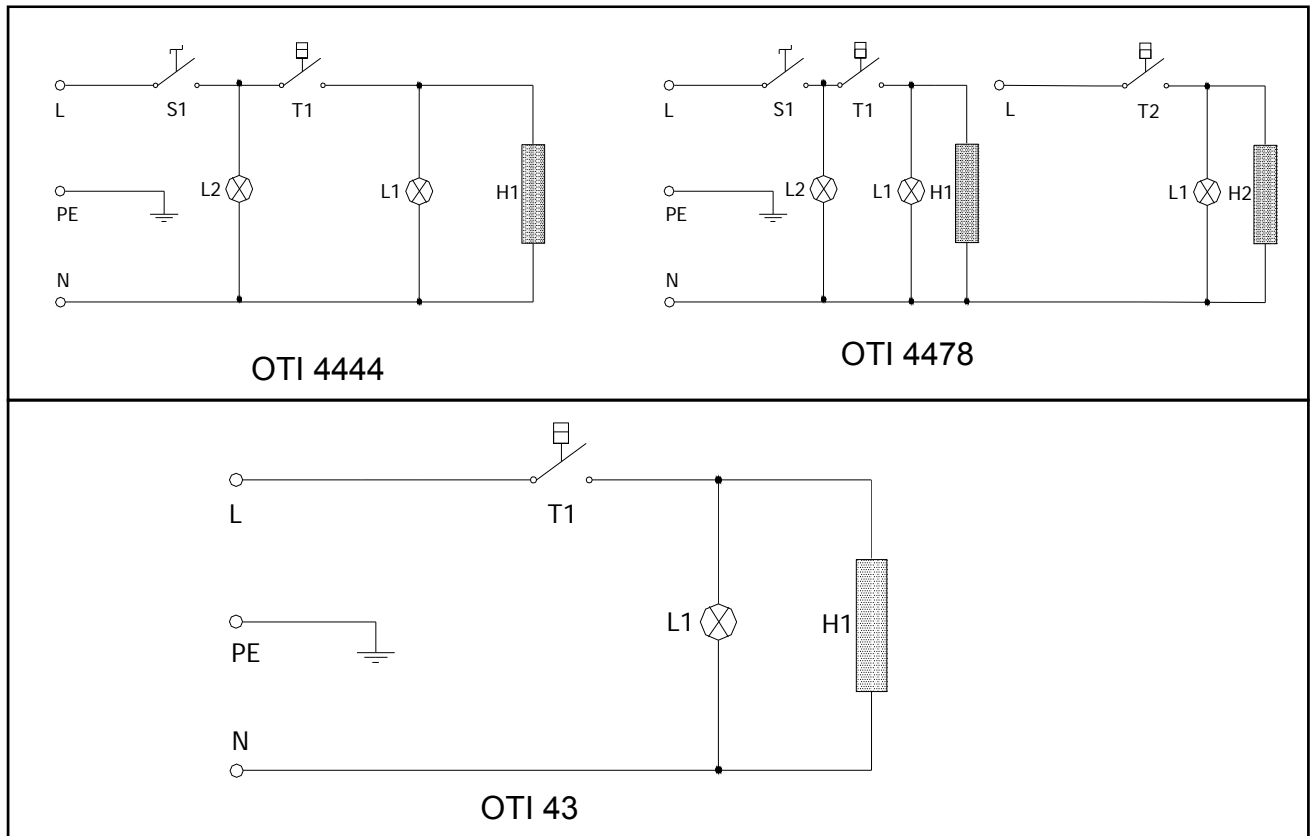


CODE	COMPONENTS
H1, H2	Resistance
S1	Switch
L2	Thermostat lamp
L1	Thermostat
T1, T2	Power lamp

 MAIN DIMENSIONS

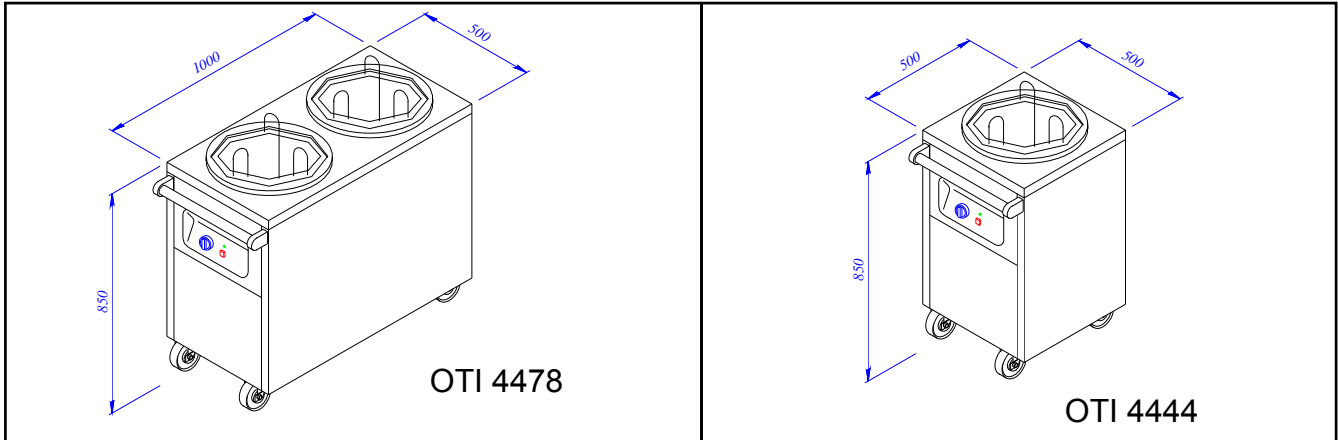

CONTROL BOARDS

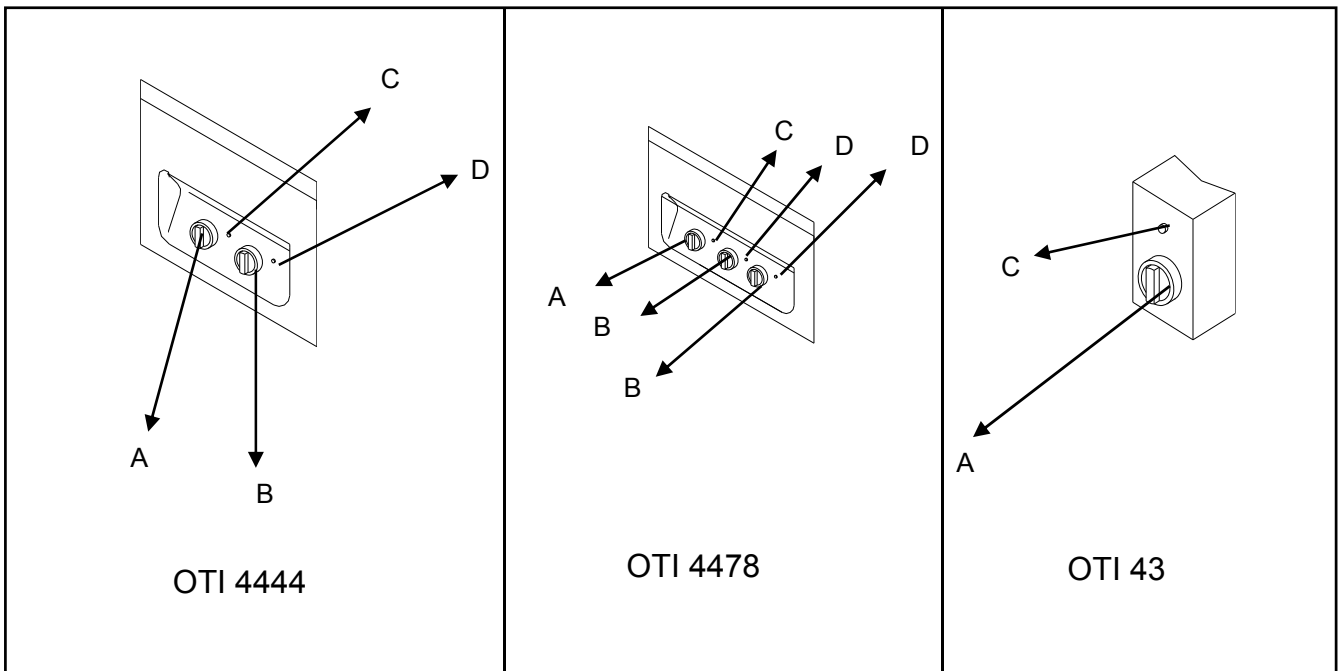 

- A : ON-OFF SWITCH
- B : THERMOSTAT
- C : POWER LAMP
- D : THERMOSTAT SIGNAL LAMP

WARNING SIGNS



POWER NETWORK GROUNDING



PE

GROUNDING



POWER



OVERHEAT

 
POWER SUPPLY CONNECTIONS
220-240 V NPE / 50 Hz
VOLTAGE: 220-240 V
SUPPLY CONNECTION: SINGLE PHASE
GROUNDED
FREQUENCY : 50 Hz

SAFETY DETAILS

☞ Any kind of flammable solid and liquid material (cloths, alcohol and derivatives, petrochemical products, wooden and plastic materials, cutting blocks, curtains etc.) should never be held near the appliance.




☞ You can use this appliance simultaneously together with other products of ours.

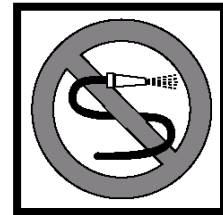

☞ Do not clean up the appliance with pressure water

 ☞ This appliance should be installed in line with effective regulations and only be operated in well ventilated places. Please refer to the instructions before installing and operating the appliance.

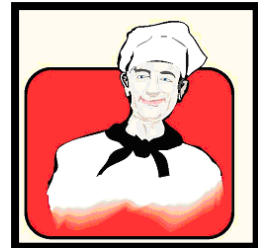

☞ This appliance is designed for industrial use and should only be operated by personnel trained on the appliance.



 
☞ The appliance should not be handled by unauthorized persons except for the manufacturer or authorized service.




☞ In case of fire or flame in the area where the appliance is operated, act without panic, close gas valves, turn off the power switches and use a fire extinguisher. Never use water to extinguish the fire.





TRANSPORTING AND MOVING

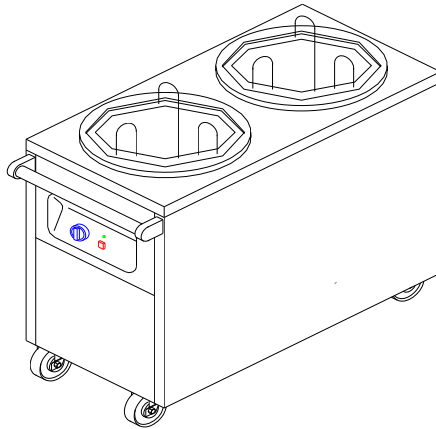

 For devices installed by an authorized service, **POWER SUPPLY CABLES CANNOT BE EXTENDED OR REPLACED** except by an authorized service.

- ☞ **Before moving the appliance disconnect power supply.**
- ☞ **The appliance may be moved with manpower.**
- ☞ **Do not hit or drop the product when moving.**

  INSTALLATION OF THE APPLIANCE

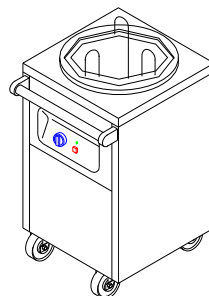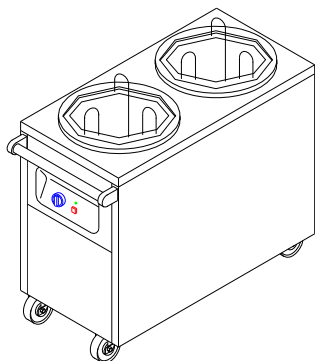

If this appliance located near to any wall, separation, kitchen furniture, decorative coating etc. the distance in between should be min.20 cm. and if those are coated with fireproof heat insulating material, the distance should be min.5 cm. It is strongly recommended that fire safety protection instructions are observed.



All of the items mentioned below in connection with the installation of the appliance should be carried out by authorized service personnel.

- ☞ **Power supply connection of the appliance should be checked by an eligible electrician, and it should be connected to a fuse at a maximum height of 170 cm.**
- ☞ **Power supply connection should be made using a 30 mA current leakage fuse as a protection against current leakage danger.**
- ☞ **Power installation to be used should be grounded by connecting it to a grounding bar at the nearest panel.**

OPERATION OF THE APPLIANCE






Dish dispenser is used in kitchens of tourist facilities, restaurants, fast food stands, canteens, hospitals in order to warm up ready-to use dishes

Before initial use of the appliance, the outer surface should be wiped with a cloth soaked in warm water and soap.

The appliance is on trundles and is facilitated for moving and transporting.

NOTE: Do not use except purpose of use. The appliance should be operated by qualified personnel knowing safety terms and technical specifications and who has read the instruction manual.



-  Plug the appliance to power supply. Fill in the dishes into the appliance.
-  Turn the on-off key on. Set thermostat to desired temperature. When doing this, green lamp will light.
-  OTI 43 type has no ON/OFF switch. In this type thermostat is used directly to set the desired temperature. ..
-  Turn the switch to “0” position after daily use. Disconnect the appliance from the power supply. Clean up the appliance after disconnecting it from the power supply.
-  It is recommended to operate the appliance between temperatures of +5°C +40°C and in ambient humidity of maximum 65%.

OPERATION OF THE APPLIANCE



CAUTION! : The appliances should be installed and operated as described in this user's manual. If any failure is encountered please contact our nearest authorized service dealer.

WHEN THE APPLIANCES HAS A FAILURE ONLY AUTHORIZED SERVICE DEALERS ARE ALLOWED TO HANDLE THE APPLIANCES. IF ANY PERSON OTHER THAN ONLY AUTHORIZED SERVICE DEALERS HANDLE THE APPLIANCES, IT WILL NOT BE COVERED BY THE WARRANTY.

NEVER ALLOW PEOPLE WHO ARE NOT AUTHORIZED TO HANDLE THE APPLIANCES. OTHERWISE PRODUCER COMPANY WILL NOT BE RESPONSIBLE FOR THE CONSEQUENCES. DURING MAINTENANCE SERVICE OUR AUTHORIZED SERVICE DEALERS SHOULD NOT BE PROPOSED TO USE NON-ORIGINAL SPARE PARTS FOR WHATSOEVER. INSTALLING ANY NON-ORIGINAL SPARE PART TO THE APPLIANCE LEAVES THE APPLIANCE OUT OF WARRANTY COVERAGE.



CLEAN-UP AND MAINTENANCE

1. CLEAN-UP:

Before (before the power is switched on) and after the first use and every subsequent use, outer surface of the appliance should be completely cleaned up with sponge and liquid detergent and then wiped dry.

Do not use CHEMICAL CLEANING AGENTS like hydrochloric acid or abrasive cleaning agents.

2. MAINTENANCE:

Periodic maintenance should be carried out by a technician. It is recommended to carry out maintenance at least every 6 months, depending on the frequency of use. Periodic maintenance conducted by authorized service personnel of ours is charged, even the guarantee period has not expired.

LIFE OF USE

appliances life of use is 10 year if it is used under recommended conditions.

TERMS OF WARRANTY

1- Documents without sales date, factory and sales company approval on, are not valid. In order to benefit from the warranty, warranty document should be presented.

2- If the appliance is installed and operated following the instructions in the installation, maintenance and user's manual, it is warranted for failures sourcing from materials and workmanship .

3- The failures within the scope of warranty, how and where these will be eliminated, and the way and place of maintenance is determined by

4- The warranty is only valid provided that the warranty terms and the instructions in the installation, maintenance and user's manual are fully complied with. The warranty is only valid for the warranted appliance, and no other right or compensation for some other thing may be claimed.

5- If the information about the kind and the type of the appliance, serial numbers printed on the warranty document are scraped, rubbed or changed, then the warranty is not valid.

6- The warranty covers only maintenance and repairing of material or workmanship failure within the valid warranty period. Failures and parts within the scope of the warranty are repaired and replaced without any charge. Replaced parts belong to

7- The failures occurring in the appliance may only be handled by service personnel authorized by If people who are not authorized handle the appliance, it will not be covered by the warranty.

8- Installation should be carried out by authorized service personnel and the service should be informed about the location change of the appliance.

9- When any failure occurs during operation, authorized service dealer should be contacted.

10- Warranty does not cover failures and damages resulting from loading, unloading and shipping, which are outside the responsibility of Similarly, failures and damages resulting from external factors are not covered.