


AGD 650

DUAL ZONE STOP-LINE DETECTOR

PRODUCT MANUAL

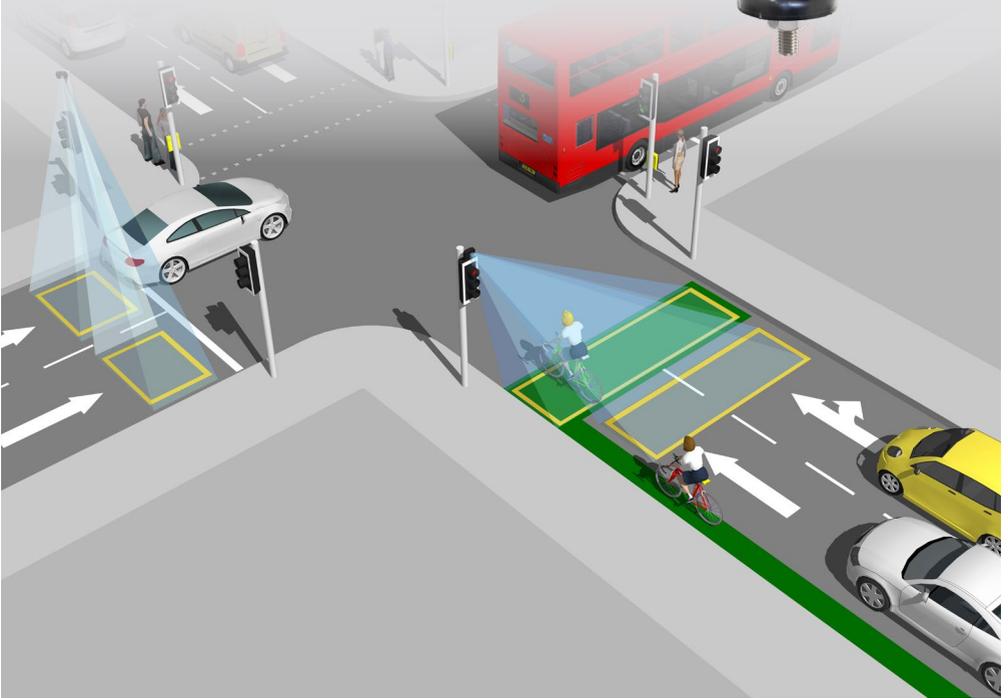

© AGD Systems Limited 2022 Doc. Ref 650 PM ISS2



AGD Touch-setup ✓
WIFI 3-CLICK TOUCH-SETUP

AGD[®]

PRODUCT SOLUTIONS FOR
INTELLIGENT TRAFFIC SYSTEMS

Table of Contents

AGD 650 DUAL ZONE STOP-LINE DETECTOR

INTRODUCTION	3	TROUBLESHOOTING	16
Product Overview and technology	3	Physical installation	16
Key features	3	Electrical installation	16
Typical applications	3	Connecting / Commissioning	16
Product overview image	4		
Product Variants	4	TECHNICAL SPECIFICATIONS	17
		Product Specification	17
INSTALLATION AND COMMISSIONING	5		
Physical Installation	5	END OF LIFE DOCUMENT	18
Step 1 – Mounting height	6		
Step 2 – Detector alignment	6	IMPORTANT SAFETY INFORMATION	
Step 3 – Final adjustment & verification	6	Safety precautions	19
Electrical Installation	7		
Connections	7	DISCLAIMER	20
Power Up Sequence	8	Warranty	20
Connecting	8	Contact Details	20
Connecting Wifi	8		
Connecting device	8		
Set-up device using Wifi AGD Touch-setup	9		
Step 1 – Name site	9		
Step 2 – Set zones	10 - 12		
Change masks	11		
Detection zones	12		
Step 3 – Choose settings	13		
Example image 1	14		
Example image 2	15		



AGD Touch-setup
WIFI 3-CLICK TOUCH-SETUP

safer, greener, more efficient

Introduction

PRODUCT OVERVIEW AND TECHNOLOGY

The AGD650 stop-line detector is a smart optical detector designed for use in dynamic environments. It makes intersections and junctions more efficient by delivering robust vehicle detection data at the stop-line of multi lane approaches.

With in-built artificial intelligence (AI) it is a high performance stand-alone product that processes information on board with a new neural processing platform and sophisticated algorithms for automated decision-making to provide ultra-reliable detection.

The AGD650 employs high grade optics and deep learning image recognition to detect stationary and moving targets as they approach the stop-line. The neural net has undergone extensive training to develop a library of vehicle types. Objects that are not defined within this library are simply ignored.


KEY FEATURES

- Detection of moving & stationary targets at the stop-line
- Two independent user adjustable detection zones
- Deep learning image recognition allows for prioritisation of vehicle types
- In-built AI aids target differentiation
- WiFi AGD Touch-setup - speeds installation & reduces risk



AGD 650 DUAL ZONE STOP-LINE DETECTOR


TYPICAL APPLICATIONS

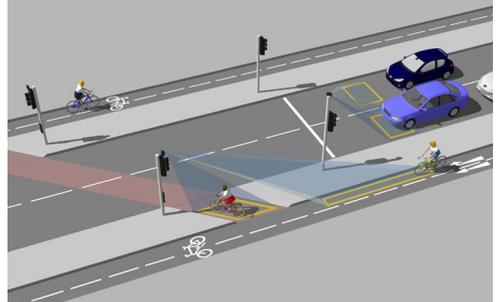

Dual Zone / Active Travel (Cycle Lane Detection)



Dual Zone / Multi lane Advance Stop-line (cycle refuge area)

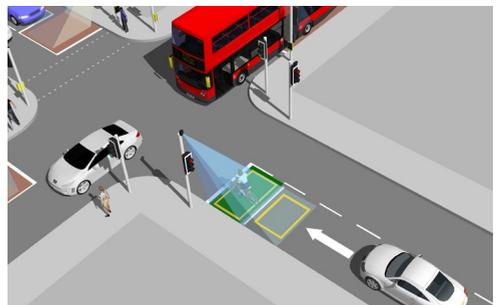

Single lane Advance Stop-line (cycle refuge area)

Introduction

AGD 650 DUAL ZONE STOP-LINE DETECTOR

PRODUCT OVERVIEW IMAGE



PRODUCT VARIANTS

Product No.	Description
650-400-022	Dual Zone Stop-line Detector/24-42V/Dual Opto Output/1m + mating lead
650-401-022	Dual Zone Stop-line Detector/24-42V/Dual Opto Output/5m flying lead

safer, greener, more efficient

Physical Installation - Parameters

PHYSICAL INSTALLATION

The AGD650 requires specific installation parameters to allow the detector to operate correctly. Installing it outside of these basic design parameters can reduce performance and detection accuracy so it's important to ensure you are within these parameters when installing the detector.


Distance from mounting pole to number of lanes covered

The pole's location can restrict the number of lanes the 650 can be deployed on due to the detector's field of view. The table below depicts minimum recommended installation distances from the stop-line with a standard road layout. Advance Stop-Line applications may vary: a long cycle refuge area may require a greater installation distance.


Minimum pole distance from stop-line (m)	Number of lanes covered (3.4m lanes)
1.2	1
1.8	2
2.4	3
3.0	4

Choosing the correct mounting pole on different junctions

It's important to mount the detector on the recommended pole to ensure high performance and reduce occlusion.

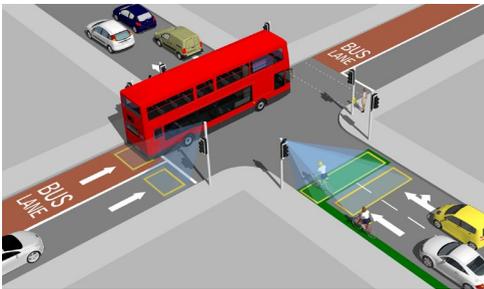

Mount on the side of the road with the lowest number of large vehicles (bus lanes/HGV routes)

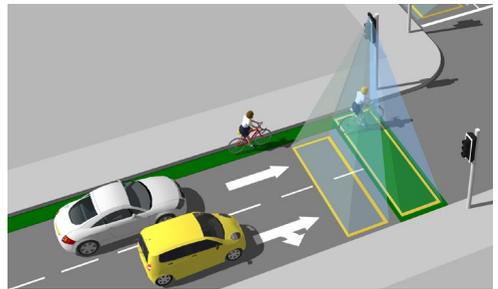

Mount on the side of the road closest to approaching cyclists for cycle refuge applications

Mounting position in different environments

When installing the AGD650 on the traffic head, please use the 6" extension bracket supplied to allow it to sit over the backing boards and detect traffic at the stop-line. If the stop-line is 1.4m or less from the mounting pole, then a 90° bracket looking around the traffic head is recommended.



1.4m or closer



Greater than 1.4m

Installation and Commissioning


AGD 650 DUAL ZONE STOP-LINE DETECTOR

PHYSICAL INSTALLATION


STEP 1 - MOUNTING

HEIGHT – The AGD 650 Dual Zone Stop-line Detector has excellent performance when mounted between heights of **3-6 metres**.

If you have an application whereby you wish to mount the detector outside of these heights, then please contact AGD.

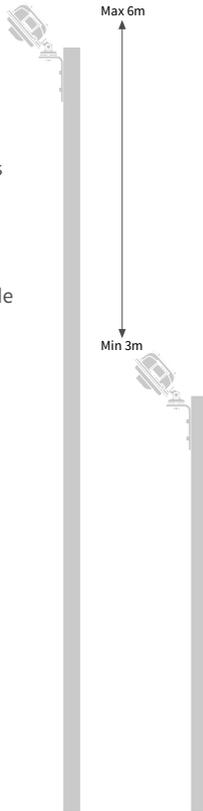

STEP 2 - DETECTOR ALIGNMENT – The AGD650 Dual Zone Stop-line Detector should be mounted using the supplied hardware. The optimal mounting angle will change depending on the installation location; aiming the camera to the centre of the area of interest is a good start position. The mounting angle may need to be corrected during commissioning stage of the installation. Ensure the detector is securely fixed and the mounting nut is tight.

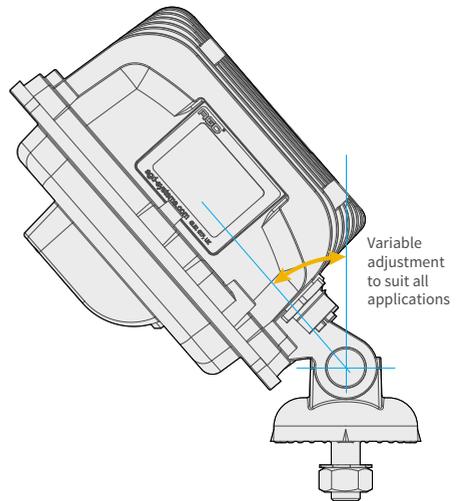

STEP 3 - FINAL ADJUSTMENT & VERIFICATION

Confirm the detector is correctly aligned. The entire stop-line should be visible when looking at the detector's live view within the GUI. Where possible, the field of view should include at least one full vehicle length before and after each detection zone. The horizon should be out of view to reduce sun glare. Once complete, please monitor traffic to ensure zones are correctly placed.



Installation and Commissioning

AGD 650 DUAL ZONE STOP-LINE DETECTOR


ELECTRICAL INSTALLATION




The detector is powered using a 24/42V ac/dc ($\pm 20\%$) supply. The power is applied to the detector using the multi-pin mating connector

The AGD650 Zone Stop-line Detector is provided with a Buccaneer Series PX0728/S 9 pole connector or flying leads to enable direct connection to any traffic control system.

Pin view of Bulgin connector

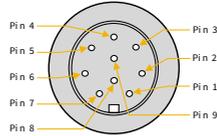

Pin view of bulkhead connector

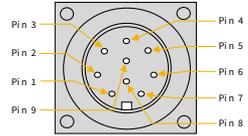

CONNECTIONS

Single Cable 24/42V ac/dc Supply Wiring (1m bulkhead lead with Bulgin connector)

Pin No.	Wire Colour	Function	Power Off	Power On-No Detect	Power On-Detect	Notes
1	Red	24/42V ac/dc	-	-	-	-
2	Black	0V ac/dc	-	-	-	-
3	Green	Earth/Ground	-	-	-	Must be connected
4	White	Opto 1/2 Common	-	-	-	-
5	Yellow	Opto 1 N/O	N/O	N/C	N/O	Zone 1
6	Blue	Opto 1 N/C	N/C	N/O	N/C	Zone 1
7	-	Not Connected	-	-	-	-
8	Brown	Opto 2 N/O	N/O	N/C	N/O	Zone 2
9	Violet	Opto 2 N/C	N/C	N/O	N/C	Zone 2

Single Cable 24/42V ac/dc Supply Wiring (5m flying lead)

Wire Colour	Function	Power Off	Power On-No Detect	Power On-Detect	Notes
Red	+24/42V ac/dc	-	-	-	-
Grey	0V ac/dc	-	-	-	-
Green	Earth/Ground	-	-	-	Must be connected
White	Opto 1/2 Common	-	-	-	-
Yellow	Opto 1 N/O	N/O	N/C	N/O	Zone 1
Blue	Opto 1 N/C	N/C	N/O	N/C	Zone 1
-	Not Connected	-	-	-	-
Brown	Opto 2 N/O	N/O	N/C	N/O	Zone 2
Pink	Opto 2 N/C	N/C	N/O	N/C	Zone 2

Opto-coupler ratings

- Max current 60mA
- Max Voltage 60V
- Max on-state impedance 25 Ohms

The voltage tolerances of supply

- 24/42V ac/dc $\pm 20\%$

Installation and Commissioning



POWER UP SEQUENCE

After applying power to the unit, the red LED will illuminate for approx 30s while the operating system loads. The red LED will then flash 5 times before going off. If detection zones have been set up the red LED will then come on when either zone is in the detect state, otherwise it will remain off until the unit has been set-up and commissioned.

Upon power up, owing to the nature of the equipment power supply, an initial current of 15A <5ms can be drawn. The supply should be fused as follows: **24/42V ac/dc** - 3A circuit breaker or in-line fuse.

CONNECTING

The AGD 650 Dual Zone Stop-line Detector has been designed with efficiency and ease of use in mind. It can be set up simply by connecting to it by WiFi and using a browser window. No additional software needs to be installed.

This step-through process describes the actions required to set up the detector upon initial deployment when first removed from the box.

CONNECTING WIFI

Check the red LED has illuminated and flashed 5 times on the rear of the unit. Search for the unit and identify it by its **serial number (S/N)**:

650:XXXXXX-XXXX-TBD (the 'X's denote the S/N, TBD is a renewable field used to name the pole location the 650 is installed on)

Click 'connect' and input the **default password**:

Agd650:XXXXXX-XXXX (the 'X's denote the S/N)

AGD Systems recommend you change the password via STEP 1 of the 3-click touch set-up process.

The LED on the underside of the unit should now be illuminated blue to show WiFi is successfully connected and your device should show connected.



CONNECTING DEVICE

Complete Wifi connection step as above.

Launch a browser on your smartphone, tablet or laptop (Modern versions of Google Chrome, Safari, Firefox and Microsoft Edge are all supported).

In the address bar of your browser, enter the 'IP Address':
http://10.42.0.1:8080

You will be presented with your initial AGD Touch-setup page.

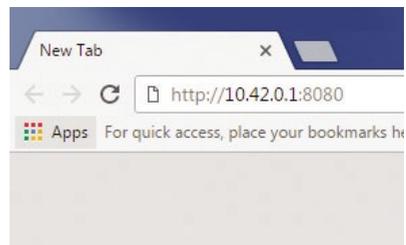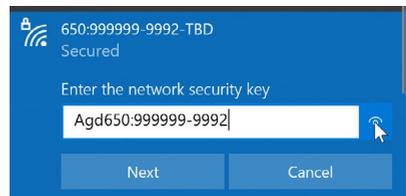

Installation and Commissioning

AGD Touch-setup WIFI 3-CLICK TOUCH-SETUP

SET-UP DEVICE USING AGD TOUCH-SETUP

When logged in to the device for the first time you are presented with the set-up screen. This is the AGD Touch-Setup, a three stage process that allows installers to configure the device quickly and efficiently.

STEP 1 – NAME SITE

AGD 650
DUAL ZONE STOP-LINE DETECTOR

HOME SETUP ADVANCED

(1) Site/Wifi Settings (2) Set Zones (3) Choose Settings

Site / WiFi Settings

Site

Install Location:
POLE_1

User Notes:

WiFi

SSID Prefix: 650:999999-9992 Allow changes

Effective SSID: 650:999999-9992-POLE_1

Leave the password fields blank to keep the default password

New password:

Confirm password:

Please Note: If you choose to change the password and the password is lost, the product will need to be returned to AGD to be reset.

Next

Install location - Used to locate the detector when installed on a site. Entering an install location changes the detector's SSID.

You must reconnect to the new SSID after a change is made.

E.g. Inserting POLE_1 will change the SSID WiFi name to 650:999999-9992-POLE_1

The use of a “space” within this field is not supported; use an underscore “_” in its place.

Please note: If you have entered characters in this field, you will be notified and have to reconnect to the new SSID after clicking “next”

User notes - An editable field to allow engineers to store notes in the device. Max characters = 110.

SSID prefix - The first part of the SSID can be changed. To change, you must first tick allow changes. Default is recommended if using the default password.

Please note: If you have changed characters in this field, you will be notified and have to reconnect to the new SSID after clicking “next”

Effective SSID - Displays what SSID will be shown when searching for the new WiFi connection.


New password/Confirm password - To keep the default password, leave these fields blank. To change you must enter an identical password in both fields. Characters = 8 minimum, 63 maximum.

Installation and Commissioning

AGD Touch-setup WIFI 3-CLICK TOUCH-SETUP

SET-UP DEVICE USING AGD TOUCH-SETUP

STEP 2 – SET ZONES

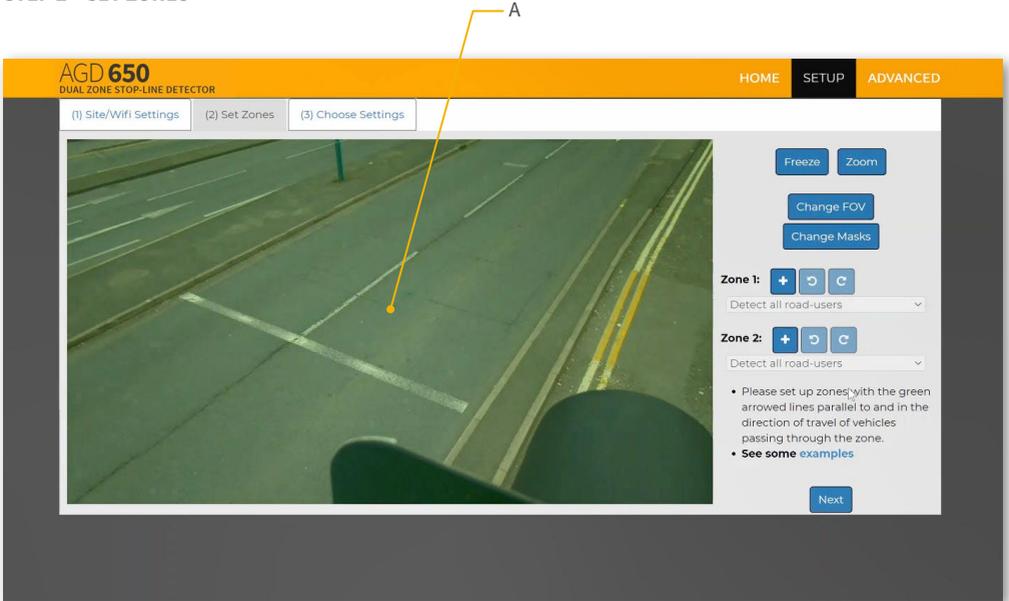

A - Live Traffic View

Freeze - Pause the live traffic view when the road is clear of traffic to aid set-up.

Zoom - Zoom out to extend zones off the screen.

Change FOV - Full field of view is recommended for most installations. A reduced field of view may be beneficial when detection zones are distant from the detector. Please contact AGD for advice.

Change Masks - Used to mask objects to avoid unwanted detections. See STEP 2 - SET ZONES CONTINUED section for further detail.

Zone 1 - Detection area linked to OPTO 1 output.
Add / Undo / Redo buttons for quick set-up.


Zone 2 - Detection area linked to OPTO 2 output.
Add / Undo / Redo buttons for quick set-up.

Drop-down menus

Detect all road users: Detect all forms of vehicle and pedestrians.

Detect 4 wheeled vehicles only: Detect all types of vehicles with 4 wheels or more ignoring all motorbikes, cyclists, scooters and pedestrians.

Do not detect 4 wheeled vehicles: Only detect motorbikes, cyclists, e-scooters and pedestrians. Ignore all other vehicles types.

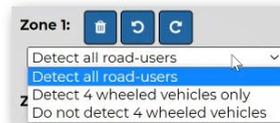

Installation and Commissioning

SET-UP DEVICE USING AGD TOUCH-SETUP

STEP 2 – SET ZONES CONTINUED

Change Masks

Add masks to specific regions of the image. Mask regions create areas where the detector will not report a target. This can be used to remove false detections from street furniture in view. It's important to note that vehicles moving through the masked area might not be detected, so they should be used sparingly.

E.g. A mask will **always** be required on a traffic head below the detector

The screenshot displays the AGD 650 Dual Zone Stop-Line Detector setup interface. The top navigation bar includes 'HOME', 'SETUP', and 'ADVANCED'. The 'SETUP' tab is active, showing three steps: '(1) Site/Wifi Settings', '(2) Set Zones', and '(3) Choose Settings'. The main area shows a live camera feed of a road with a yellow traffic light pole. A yellow mask is drawn around the traffic light pole, and a blue mask is drawn around a dark area in the foreground. The bottom left corner of the camera feed shows the time '17:520' and the date '16:55:42,966'. On the right side, there is a control panel with buttons for 'Freeze', 'Zoom', 'Apply changes', 'Cancel', and 'Apply'. Below the buttons are icons for adding (+), deleting (trash), undo (curved arrow), and redo (curved arrow).

- Masks specify regions of the image in which detections will be ignored.
- Up to three masks can be defined.
- Masks should be used sparingly. Bear in mind that targets passing in front of masked objects may not be detected.

Installation and Commissioning

SET-UP DEVICE USING AGD TOUCH-SETUP

STEP 2 – SET ZONES CONTINUED

Detection Zones

Add the detection zones where required (using Zone 1 & Zone 2). The green arrows should follow the direction of traffic and be parallel with the road layout. Lane differentiation can be achieved by placing zones in the middle of each lane. A gap between each lane is required to stop false detections of adjacent lane traffic.

AGD 650
DUAL ZONE STOP-LINE DETECTOR

HOME SETUP ADVANCED

(1) Site/Wifi Settings (2) Set Zones (3) Choose Settings

Freeze Zoom

Change FOV

Change Masks

Zone 1: [trash] [refresh] [C]
Detect all road-users

Zone 2: [trash] [refresh] [C]
Detect all road-users

- Please set up zones with the green arrowed lines parallel to and in the direction of travel of vehicles passing through the zone.
- See some [examples](#)

Next

18244 16:57:20,520

Select the correct option from the drop-down list for your intended application. Each zone operates independently.

Zone 1: [trash] [refresh] [C]

Detect all road-users

Detect all road-users

Detect 4 wheeled vehicles only

Do not detect 4 wheeled vehicles

Next

Installation and Commissioning

AGD Touch-setup WIFI 3-CLICK TOUCH-SETUP

SET-UP DEVICE USING AGD TOUCH-SETUP

STEP 3 – CHOOSE SETTINGS

The screenshot shows the 'Choose Settings' screen for the AGD 650 Dual Zone Stop-Line Detector. The top navigation bar includes 'HOME', 'SETUP', and 'ADVANCED'. Below the navigation bar, there are three tabs: '(1) Site/Wifi Settings', '(2) Set Zones', and '(3) Choose Settings'. The main content area is titled 'Choose Settings' and contains the following fields:

- Wifi off after:** A dropdown menu set to 'Never'. A blue button labeled 'Turn off wifi NOW' is located to the right.
- Detect LED OFF at night:** A checkbox that is currently unchecked.
- Hold time (ms):** Three input fields for Zone 1, Zone 2, and a general field, all set to '0'.
- Delay before reporting demand (ms):** Three input fields for Zone 1, Zone 2, and a general field, all set to '0'.
- Timeout (mins):** An input field set to '0'.
- Audible detection signal:** A checkbox that is currently unchecked.
- Fault mode after 72h non-detect:** A checkbox that is currently unchecked.
- Detection threshold (%):** An input field set to '30'.

A blue 'Finish' button is located at the bottom right of the screen.

WiFi off after - Select how long you would like the WiFi to stay on after you have disconnected. The device will need to be power cycled to have the WiFi network viewable after the selected period.

Input range = 0 - 48h. Default = Never

Detect LED OFF at night - Select to disable red LED at night

Hold time (ms) - The amount of time the detection output is held on after a valid target leaves zone 1 or 2.

Input range = 0 - 120,000ms. Default = 0ms

Delay before reporting demand (ms) - The amount of time the detection output is not reported after a valid target enters zone 1 or 2.

Input range = 0 - 5,000ms. Default = 0ms

Timeout (mins) - The amount of time the detection output is permitted to stay ON. Once the set timeout figure (mins) is reached the detector will go into a NON DETECT state until that vehicle has moved and another vehicle enters the detection zone

Input range = 0 - 120mins. Default = 0, OFF (never times out)

Fault mode after 72h non-detect - If no valid targets are seen/reported in any defined detection zone for 72h then the detector will revert to a permanent detect state.

Detection threshold (%) - The threshold value at which the detector will report a valid target. Percentage figures can be seen on the home screen when looking at the live traffic view.

Input range = 0 - 100%. Default = 30 (recommended)


Installation and Commissioning

AGD **Touch-setup**
WIFI 3-CLICK TOUCH-SETUP

SET-UP DEVICE USING AGD TOUCH-SETUP

EXAMPLE IMAGE 1

An example of what you will see once all steps have been completed correctly.

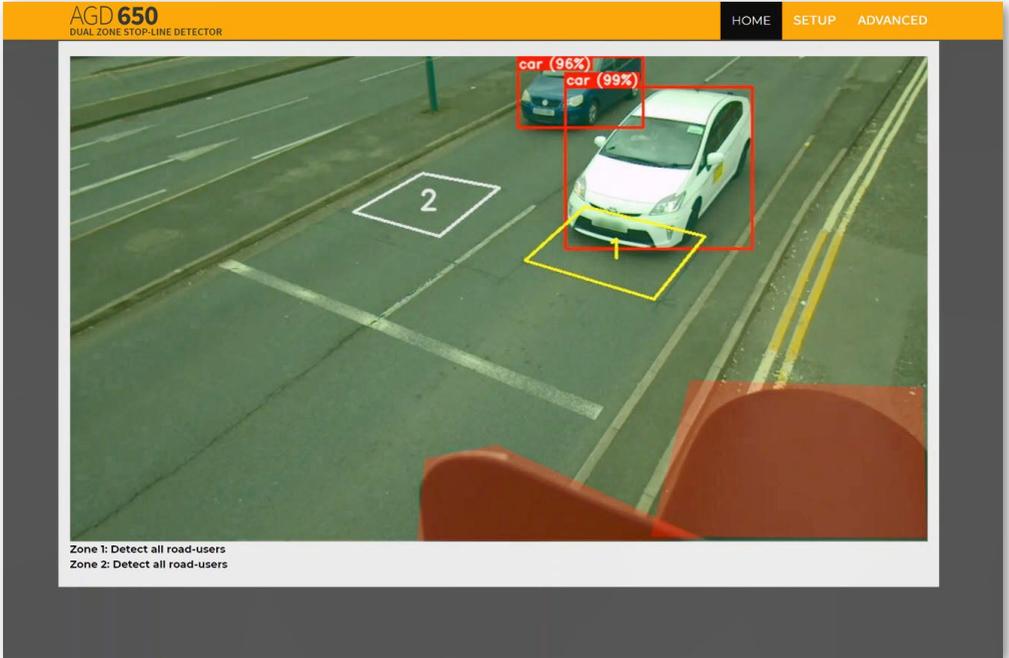

Installation and Commissioning

AGD **Touch-setup**
WIFI 3-CLICK TOUCH-SETUP

SET-UP DEVICE USING AGD TOUCH-SETUP

EXAMPLE IMAGE 2

An example of what you will see once all steps have been completed correctly.



PHYSICAL INSTALLATION

If the unit is not operating correctly, please check that the unit has been:

- 1) Mounted within the recommended height of 3-6 metres?
- 2) Angled according to the installation guide to provide good coverage of the detection area?
- 3) Installed without any obstructions in the viewable area such as the traffic signal head?

ELECTRICAL INSTALLATION

If the unit is not operating correctly, please check the following:

- 1) Is power present at the unit?
- 2) Is the red LED illuminated when power is first applied to the unit?
- 3) Is there sufficient current to run the unit - identified by the red LED failing to flash or flashing only once during power-up and the web page not starting correctly? Refer to technical specification table.

CONNECTING / COMMISSIONING

If the unit is not operating in the prescribed manner, please check the following:

- 1) Is the LED on the underside of the unit you wish to connect to illuminated blue to show that the WiFi network is successfully connected?
- 2) Has the correct IP Address been entered into the browser address bar?
- 3) Have you followed the AGD Touch-setup stages correctly and verified correct operation?

If trouble with operation persists please contact AGD Technical Support.

AGD TECHNICAL SUPPORT

eMail: technical@agd-systems.com


Tel: +44-1452-557404

Technical Specifications

AGD 650

DUAL ZONE STOP-LINE DETECTOR

PRODUCT DIMENSIONS

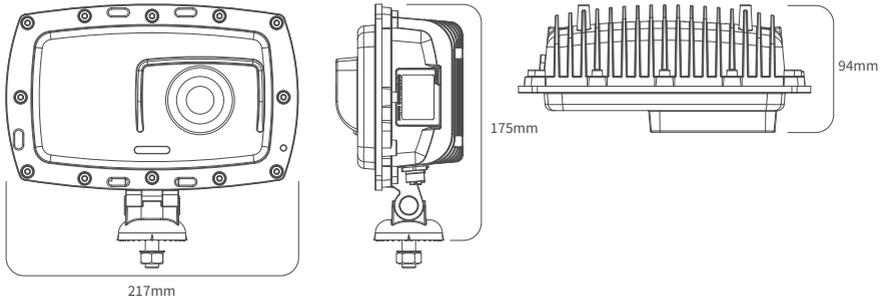

SPECIFICATIONS

Description	Dual Zone Stop-line Detector	
Technology	AGD Optical Vision with AI	
Detection Zone	Dual Virtual Loops	
Mounting Height	3-6m Nominal	
Power Supply	24/42V ac/dc	
Power	12W @ 24Vac (740mA) / 24Vdc (440mA) / 42Vac (530mA)	
WiFi Frequency/Power	2412-2472 MHz / Highest EIRP power in the range (dBm): 19.7'	
LED Indication	LEDs for detect and WiFi connection	
Frames per second	7.5	
Housing Material	Black Polycarbonate / Aluminium	
Range	20m at full FOV / 30m at reduced FOV	
Ingress Protection	IP66	
Operating Temp	-25°C to +60°C	
Configuration	WiFi AGD Touch-Setup	
Lux Level	Operates down to 20 Lux	
Dimensions	W 217mm x D 94mm x H 175mm	
Weight	1200g	
Complies with	EMC (Art 3.1(b)):	EN50293:2012 EN301 489-17 V3.2.4 EN301 489-1 V2.2.3
	Health & Safety (Art 3.1(a)):	EN IEC 62368-1:2020+A11:2020 EN 50556:2011 EN 62479:2010
	Spectrum (Art 3.2):	EN 300 328 V2.2.2
	ROHS:	EN IEC 63000:2018
	Other:	TOPAS 2505B Appendix E
Patent No.	Patent Pending	

Owing to the Company's policy of continuous improvement, AGD Systems Limited reserves the right to change their specification or design without notice.




Registration
Evaluation
Authorisation
and Restriction of
Chemicals

End Of Life – Disposal Instructions (EOL)

AGD 650

DUAL ZONE STOP-LINE DETECTOR

AGD650 DUAL ZONE STOP-LINE DETECTOR

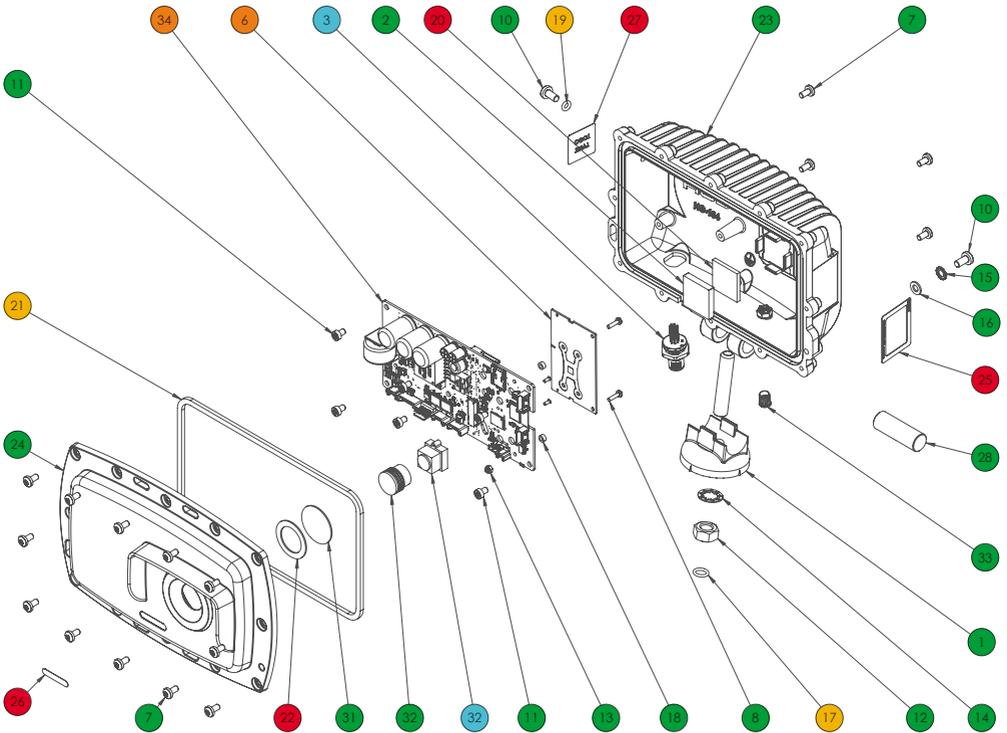

Item	Qty	Material	Item	Qty	Material	Item	Qty	Material
1	1	Polycarbonate	11	6	Stainless Steel	23	1	Aluminium
2	1	Copper	12	1	Stainless Steel	24	1	Polycarbonate
3	1	Mixed Metals, PVC	13	2	Stainless Steel & Nylon	25	1	Polyester
4	1	Mixed Metals, PVC & Nylon	14	1	Stainless Steel	26	1	Polyester
5	1	Mixed Metals, PVC & Nylon	15	1	Stainless Steel	27	1	Polyester
6	1	PCB Assembly	16	1	Stainless Steel	28	1	Aluminium
7	16	Stainless Steel	17	1	Nitrile	29	1	Stainless Steel
8	2	Stainless Steel	18	2	Nylon	30	1	Polycarbonate
9	2	Stainless Steel	19	1	Nitrile	31	1	Glass
10	2	Stainless Steel	20	1	Aluminium Oxide	32	1	ABS & Glass
			21	1	Nitrile	33	1	Polycarbonate & Steel
			22	1	HSAP	34	1	PCB Assembly

- Reuse / Recycle
- Separate & Recycle
- Downcycle
- Hazardous Recovery
- Non - Recyclable

SAFETY PRECAUTIONS

All work must be performed in accordance with company working practices, in-line with adequate risk assessments. Only skilled and instructed persons should carry out work with the product. Experience and safety procedures in the following areas may be relevant:

- **Working with mains power**
 - **Working with modern electronic/electrical equipment**
 - **Working at height**
 - **Working at the roadside or highways**
1. This product is compliant to the Restriction of Hazardous Substances (RoHS - European Union directive 2011/65/EU, UK Statutory Instrument 2012/3032)
 2. The product must be correctly connected to the specified power supply. All connections must be made whilst the power supply is off or suitably isolated. Safety must always take precedence and power must only be applied when deemed safe to do so.
 3. No user-maintainable parts are contained within the product. Removing or opening the outer casing is deemed dangerous and will void all warranties.
 4. Under no circumstances should a product suspected of damage be powered on. Internal damage may be suggested by unusual behaviour, an unusual odour or damage to the outer casing. Please contact AGD for further advice.
 5. This Product is Compliant with the European Radio Equipment Directive 2014/53/EU & UK Radio Equipment Regulations 2017 (SI2017/1206) There is no restrictions of use within any EU Member state for this product. This product is Receiver Category 2.
 6. Indicates compliance with all applicable Australian ACMA technical standards and associated record keeping (including testing) arrangements.



Disclaimer

While we (AGD Systems) endeavour to keep the information in this manual correct at the time of download or print, we make no representations or warranties of any kind, express or implied, about the completeness, accuracy, reliability, suitability or availability with respect to the information, products, services, or related graphics contained herein for any purpose.

Any reliance you place on such information is therefore strictly at your own risk. In no event will we be liable for any loss or damage including without limitation, indirect or consequential loss or damage, or any loss or damage whatsoever arising from loss of data or profits arising out of, or in connection with, the use of this manual.

WARRANTY

All AGD products are covered by a 12 month return to factory warranty. Products falling outside this period may be returned to AGD Systems for: evaluation, repair, update or re-calibration, any of which may be chargeable.

Revision
Issue 1 Sept 2022



Produced using Zero carbon footprint on energy

AGD[®]

PRODUCT SOLUTIONS FOR
INTELLIGENT TRAFFIC SYSTEMS

AGD Systems Limited White Lion House, Gloucester Road, Cheltenham, GL51 0TF, UK

Tel: +44 (0) 1452 854212 **Email:** info@agd-systems.com **Web:** agd-systems.com

 **THE
TRAFFIC
GROUP**

traffic.group