

## INSTRUCTIONS FOR ESWOOD SMARTWASH 500 DISHWASHER



### Detergent

**CHECK DETERGENT & RINSE AID IS CONNECTED**  
then check the tubes / weights are sitting in the detergent

### Operation

1. Press the **ON / OFF** button to turn on the machine.
2. Wait for the machine to fill & heat (approx. 20 minutes) to operating temperature (all lights will turn **GREEN**)
3. Press the **P** button & scroll to select wash time (set for P2 - 2 minute cycle)
4. The **SP** button is only required for special cycles, e.g. glass-washing or long cycle (approx. 6 minutes)
5. Press **START**: the **STATUS BAR** will flash **ORANGE**, indicating operating.
6. End of cycle is displayed by word **END**
7. The machine is ready for another load when temp ready

### End of day procedures

#### Drain, Empty & Clean Dishwasher

- 1: Remove 2 side filters then close the door
- 2: Press the **CYCLE** button until "dr" shows
- 3: Press **START**
- 4: When machine turns off – remove bottom filter & clean filter & also wipe the bottom of machine

#### **Regularly clean the wash / rinse arms**

Squeeze wash/rinse arm attachment to remove – then clean and replace. This should be done regularly to both top and bottom arms



The dishwasher will turn off once draining is complete - then **replace all filters**



These instructions **MUST** be adhered to as stated in the food act,

"PREVENTION OF CONTAMINATION OF FOOD AND FOOD PRODUCTS".

### **Contacts:**

**info@warewashingsolutions.com.au 1300 217 411**