

*For the Best*

### 50MM-KB001/50MM-KD001 INSTRUCTION MANUAL

**IMPORTANT: REMEMBER TO CHANGE YOUR PASSWORD FROM FACTORY DEFAULT.**

#### 1. NOTES

- Please read this instruction carefully for correct use of the product and preserve it for reference purposes.
- All the examples and pictures used here are for reference only.
- There may be several technically incorrect places or printing errors in this manual. The updates will be added into the new version of this manual.
- The contents of this manual are subject to change without notice.
- This device should be operated only from the type of power source indicated on the marking label. The voltage of the power must be verified before using the same.

#### 2. HDD INSTALLATION

This series of the product supports up to 4 SATA hard drives. Please make sure that the device is powered off before the installation. The pictures of the installation are only for reference, please take the real object as the standard.



1. Loosen the screws to open the cover.



2. Screw two screws into the holes of HDD but not tighten them.



3. Turn over the machine and place the HDD with two screws onto the bottom of the case. Then lock the screws according to the order of the marks.



4. Install the other three HDDs according to above-mentioned method.



5. Connect the power and data cables.




6. Install the cover back and fix it.

Tips: Please check the inside structure of the device and make sure the cables connected well before installing the cover back.

#### 3. REAR PANEL INSTALLATION

The interfaces of the rear panel are for reference only.

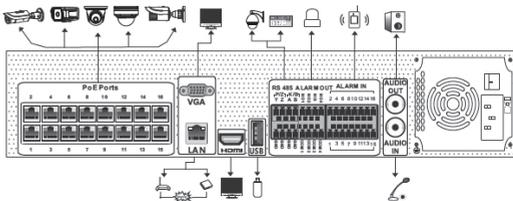

#### 4. STARTUP & SHUTDOWN

##### Startup

1. Connect the monitor and the power.
2. The device will boot and the power indicator will display blue.
3. A wizard window will pop up.

##### Shutdown

Go to "Main Menu" and then select "Shutdown" icon. This will bring up a shutdown window. The device will shut down by clicking "OK" button. Then disconnect the power.

#### 5. LOGIN

The default username is **admin** and the default password is **123456**. You must configure the wizard if you start the NVR for the first time and you may change the password when you configure the wizard for the first time. You can skip the settings of wizard next time. Click "Start" and select "Login". This will take you to see a login box. Input default username and password you set and you can see the live image.

## 6. NETWORK CONFIGURATION & ADD IP CAMERA

After you finish adding IP cameras, you can see the live images through the monitor of the NVR. The following will mainly introduce how to add the IP cameras via LAN/WAN.

### LAN

1. Set the network of the NVR. Go to Start > Settings > Network > TCP/IP. Input IP address, subnet mask, gateway, etc. If using DHCP, please enable DHCP in both the NVR and the router.
2. Go to Start > Settings > Network > Port. Input HTTP port (the default value is 80), server port (the default port is 6036).
3. The internal ethernet port is the port which connects all the PoE ports with the NVR system. The PoE ports are available if the internal ethernet port is online; if it is offline, all the PoE ports will be unavailable. The IP address and subnet mask of the internal ethernet port can be changed to make the port in the same network segment with the IP cameras which directly connect to the PoE ports of the NVR.

**IP Address Settings**

Ethernet Port1 (Online)

Obtain an IPv4 address automatically       Obtain an IPv6 address automatically

Address: 192.168.1.2      Address: \_\_\_\_\_

Subnet Mask: 0.0.0.0      Mask Length: 0

Gateway: 192.168.1.1      Gateway: \_\_\_\_\_

---

**Internal Ethernet Port (Online)**

Address: 192.168.1.3      Address: \_\_\_\_\_

Subnet Mask: 0.0.0.0      Mask Length: 0

MTU: 1500

Obtain DNS automatically

4. Go to Start > Settings > Camera > Add Camera. The NVR will automatically refresh the cameras searched. The IPC which supports the Onvif protocol may be added manually. If the IPC searched is not in the same local network as the NVR, you should select the device and click the pencil symbol to modify the IP address.

**Add Camera**

Quickly Add      Manually Add

No.	Address	Port	Edit	Subnet Mask	Protocol	Model	Version
1	192.168.1.20	80		255.255.255.0	XXX	XXX	3.4.2
2	192.168.1.38	80		255.255.255.0	XXX	XXX	3.4.2
3	192.168.2.45	80		255.255.255.0	XXX	XXX	4.0.0.1 beta

Selected: 1/3

Remain Bandwidth: 108 / 120 Mb      Default Password      Add      Cancel

**Edit Camera**

Mac Address: GE-98-23-75-35-22

Address: 192.168.1.40       Sync to IPC

Subnet Mask: 255.255.255.0

Gateway: 192.168.1.1

Username: admin

Password: \*\*\*\*\*

OK      Cancel

5. Checkmark the device you want to add and then click "Add" button. The NVR will automatically refresh the cameras and return to "Edit Camera" interface. "Online" status means connecting the device successfully and you will see the live image. You may select the added device and click the pencil symbol button to modify channel, IP address, etc.

**Edit Camera      Edit Camera Group**

Search Camera

No.	Camera Name	Address	Port	Status	Protocol	Model	Preview	Operation	Upgrade	Version
1	IP Camera 1	192.168.1.20	80	Online	XXX	XXX				4.1.0.0
2	IP Camera 2	192.168.1.38	80	Offline	XXX	XXX				4.1.0.0
3	IP Camera 3	192.168.1.45	80	Online	XXX	XXX				4.1.0.0

Remain Bandwidth: 85/120Mb

**Edit Camera**

Camera Name: IP Camera 1

Address: 192.168.1.58       Sync to IPC

Port: 9008

Protocol: XXX

Model: XXX

Username: admin

Password: \*\*\*\*\*

Display Password

Test      OK      Cancel

1. Set the network of the NVR. Go to Start > Settings > Network > PPPoE. Enable PPPoE and then input the user name and password received from your ISP.
2. Go to Start > Settings > Camera. Click "Add Camera" or plus symbol behind the column of the search camera and select "Manually Add" to add the IP cameras. Input IP address, server port, username and password of the IP camera. The IP camera must be connected over WAN. And here the IP address of the IP camera must be a WAN IP address.

## 7. UPnP

You can use the UPnP function to enable the fast connection of the device to WAN via a router without port mapping.

1. Go to Start > Settings > Network > UPnP, and enable UPnP and then click "Apply" button to save.
2. Enable the UPnP function in the router.
3. Click "Refresh" button to refresh the UPnP status. If the UPnP status were still "Invalid UPnP" after refreshing it for several times, the port would be wrong. Please change the mapping type to "Manual" and then click the pencil symbol to modify the port until the UPnP status turns to "valid UPnP".

**UPnP**

Enable

Map Type: Auto

Port Type	External Port	External Address	Port	UPnP Status	Edit
HTTP Port	80	183.17.254.19	80	Valid UPnP	
Server Port	8038	183.17.254.19	8038	Valid UPnP	
RTSP Port	554		554	Invalid UPnP	

Refresh      Apply

## 8. NAT

1. The NVR shall be powered on and connected to the network.
2. Go to Start > Settings > Network > TCP/IP. You can obtain the IP address, subnet mask and gateway automatically. You can also manually enter them according to the actual network situation. Please make sure the network segment is the same as that of the network which is used.
3. Set the preferred or alternative DNS Server. Click "Apply" to save the parameters.
4. Go to Start > Settings > Network > NAT tab. Enable NAT and select the NAT Server Address (The default NAT Server Address is nat.autonat.com). Click "Apply" to save the parameters.



### NAT Access

After finishing the NAT settings, you can input [www.autonat.com](http://www.autonat.com) in the IE address bar and then press enter to go to the following interface. If you are the first time to access the NAT, you shall download and install the ActiveX according to the popup tips. After installing ActiveX successfully, it will pop the login box.



**Device Serial Number:** Click the monitor with paper in background symbol on the menu bar at the bottom of the live interface to check the serial number or go to Start > Settings > Network > Network Status to check the serial number of the NVR).

**Username:** The username of the NVR. The default username is admin.

**Password:** The password of the NVR. The password is set by yourself when you configure the wizard for the first time.

## 9. MANUAL RECORDING

Before recording, please install and format a HDD. In the live interface you can see the menu toolbar. Click movie symbol button to start recording. Click it again to stop recording. You can also click movie with paper in background symbol to check the status of the recording.



## 10. PLAYBACK

### Instant playback

Click "Instant Playback" in the right-click menu of the camera's preview window to select or drag the playback progress bar to change the playback time to play back the record.

### General playback

Click play symbol on the tool bar at the bottom of the live preview interface or click Start > Playback to go to the playback interface as shown below. You can also add the playback cameras manually. Click plus symbol in the playback window to pop up the "Add Camera" window. Check the cameras in the window and then click "Add" to add playback camera. The record files of the added playback camera will be played in the playback interface.



