


PART #: 82004

BONNET STRUT KIT FACELIFT LAND CRUISER 70 SERIES 2024+



STEP 1

Check to ensure all contents of kit are present and correct. Read through all instruction steps before proceeding with fitment

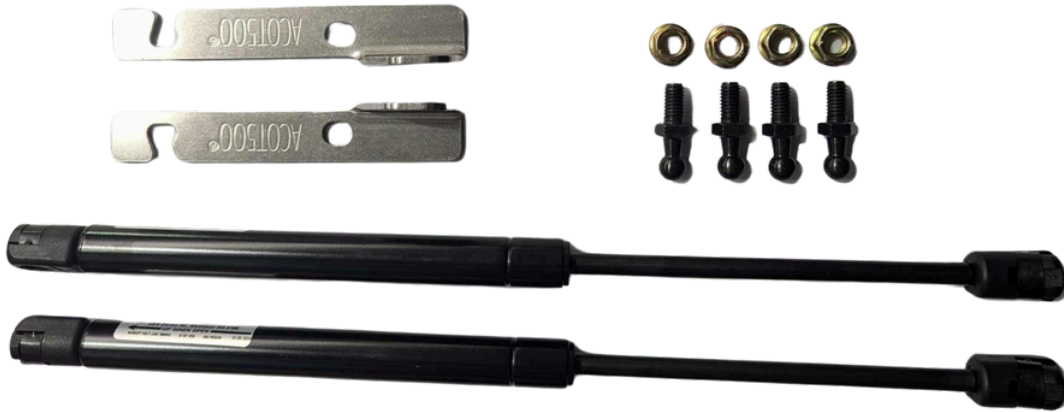

STEP 2

Assemble brackets as shown below, pictured in order LH/RH for reference.



To gain access to the RH side, unclip the lid of the airbox and push aside. Easier access can be gained by removing the airbox completely.

PROGRESS BEYOND DEVELOPMENT

PART #: 82004

BONNET STRUT KIT FACELIFT LAND CRUISER 70 SERIES 2024+



STEP 3

Remove the accessory fuse box from its brackets. Carefully bend the brackets inwards (towards the engine) evenly about 5mm then re-fit.

****This step is optional for fitment but will ensure the strut and brackets clear the Accessory Fuse box lid completely when bonnet is closed****



STEP 4

Fit the strut ball mount to the thread on the LH side engine bay body rail as shown
Repeat for RH side



PROGRESS BEYOND DEVELOPMENT

BONNET STRUT KIT FACELIFT LAND CRUISER 70 SERIES 2024+



STEP 5


Using a whiteboard marker, trace the outline of the LH side bonnet hinge Repeat for RH side
This step is crucial to retain factory fitment of bonnet function/gaps



STEP 6

With the help of someone to hold the bonnet in place, carefully unbolt and remove both bolts of the LH side bonnet hinge. The bonnet will slip downwards towards the body when bolts are removed, take necessary precautions to not damage the body.

Take the LH side assembled bracket and fit it on top of the bonnet hinge, threading the bolts in enough to hold the bonnet up. Using the previously marked outline, line up the bonnet hinge and tighten bolts Repeat for RH side

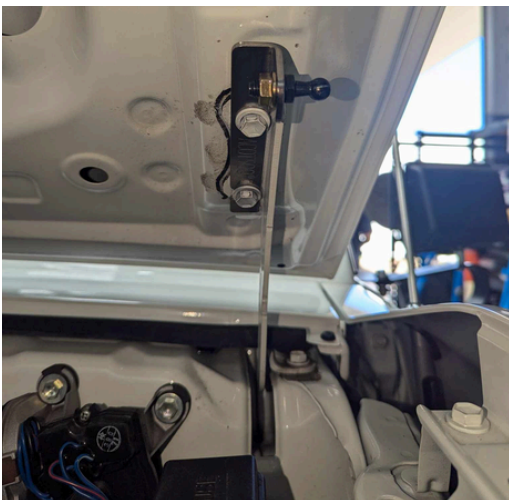

PART #: 82004

BONNET STRUT KIT FACELIFT LAND CRUISER 70 SERIES 2024+



STEP 7

Ensure both struts are within arms reach. Remove the bonnet stay/support rod and fit struts, oriented as shown below



STEP 8

Test for correct operation of struts. Check bonnet gaps are correct. Adjust bonnet hinges if necessary. If satisfied proceed with next step

STEP 9

Touch up the previously removed bonnet hinge bolts. This is not necessary for fitment but highly recommended to help prevent rust and retain the clean factory look



STEP 10

Enjoy your new Acot 500 Bonnet Struts!

PROGRESS BEYOND DEVELOPMENT

+61 (0) 9295 6888 | sales@acot500.com | www.acot500.shop