


HAND CONTROL OVERVIEW

To turn on hand control, insert the 2* AAA batteries into the back of the controller. Depending on if you have purchased a SmartFlex 2 or 3, your remote will be different. The image at the left depicts a SmartFlex 2 remote, whilst the right image is of a SmartFlex 3 remote. Please refer to the following diagram explaining the functions.

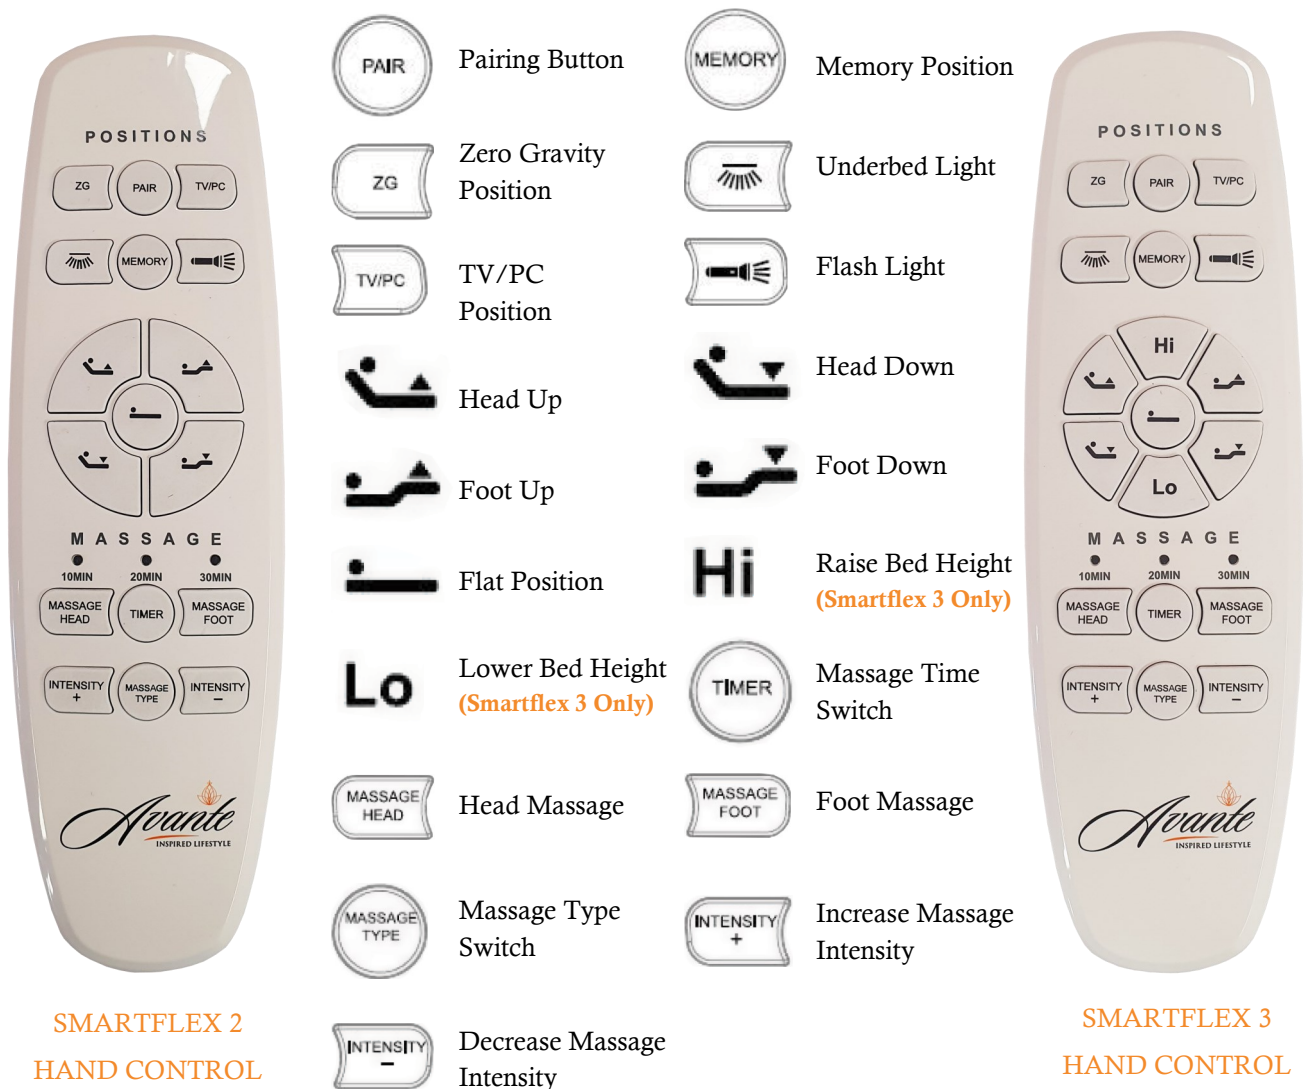

NOTE:


Click the "Message Head" or "Message Foot" button, the message motor will switch intensity among 1-2-3-0 (0 intensity will turn message Off).

Click "Timer" button, to switch the message time, when time switch to 0, the message is function is turned off.

REPROGRAMMING HAND CONTROL POSITIONS

STEPS OF REPROGRAMMING PRESET POSITION

1. Adjust the bed into desired position.
2. Choose the pre-set position that you would like to change (TV/PC or Zero Gravity).
3. Press and hold the chosen pre-set button for 5 seconds, until the backlight start flashing, then the current position of the bed is now saved as a custom position under the pre-set button.

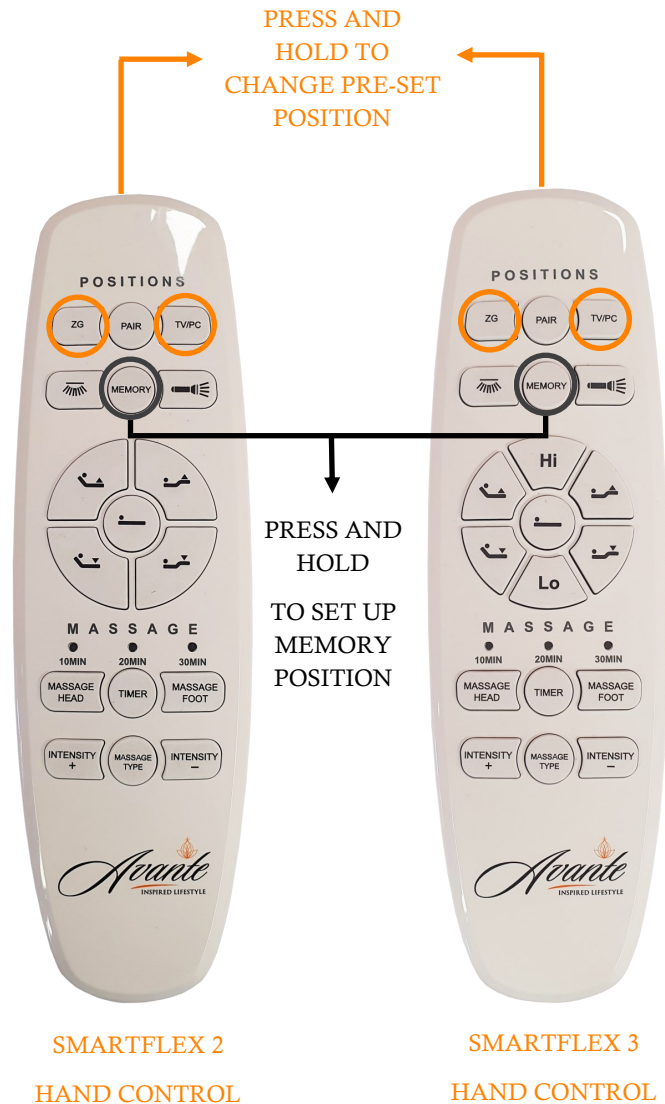

SET UP MEMORY POSITION

1. Adjust the bed into desired position.
2. Press and hold “Memory” button for 5 seconds, until the backlight start flashing, then the current position of the bed is now saved as a Memory position

SYNCING BASES

To Sync ONE base ONLY

1. Fit 2 AAA Batteries to the hand control.
2. Connect power to the transformer.
3. Pressing the Pair button on the control box twice quickly(the blue pairing light will turn on).
4. Press and hold the pair button on remote control for 3 seconds, the backlight will start flashing. The blue pairing LED light on the control box will turn green to indicate that pairing is complete. If not successful , repeat the above steps.



To Sync TWO bases to ONE remote

Requires Link Cable

1. Insert link cable end into each control box on the separate bases you wish to sync.
2. Once completed, either remote will then operate both bases.