

TD-550 & TD-560 OIL IN WATER ANALYSER



Turner Designs Hydrocarbon Instruments is proud to introduce the new standard in grab sample oil in water analysis with the TD-550 and TD-560. The TD-550 is suitable for crude oils and other heavy oils with a greatly enhanced detection range (low ppb to 5000 ppm) over most oil in water analyzers. The TD-560 includes the same optical channel of the TD-550 while along with a second optical channel for detecting lighter hydrocarbons such as BTEX, gas condensates, gasoline, jet fuel, kerosene, transformer oils, styrene and phenol.

Based on our experience with the highly successful TD-500D and TD-3100, the new TD-550 and TD-560 include many new features and capabilities never offered on traditional oil in water analyzers while providing a low cost and simple solution.



FEATURES

- Low cost per sample analysis
- Large full-color touch screen interface
- Advanced data logging and graphing capabilities
- Compatible with all popular extraction solvents and TDHI's No-Solvent Method
- Results can be correlated to official lab methods such as USEPA 1664A and ISO 9377-1

APPLICATIONS

Produced Water | Waste Water | Steam Condensate | Cooling Water | Intake Protection | Discharge Compliance | Oil in Soil Analysis | Storm Water | Treatment Verification

SPECIFICATIONS

Common Target Oils

- TD-550: crude oil, diesel, lubrication oils and fuel oils
- TD-560: all oils listed for the TD-550 plus gas condensates, BTEX, gasoline, styrene, phenol, jet fuel, kerosene, heat transfer fluids and hydraulic oils

Detection Range

- 5 ppb to 5000 ppm (dependent on target oil)

Power

- External power supply: 90–240 VAC and 6–8 hours on battery

Data Output

- USB and MicroSD card

Calibration

- Direct and raw

Display Units

ppm, ppb, mg/l, ug/l, raw


Approvals

- CE


Data Logging and Graphing

- Stores multiple calibrations and site locations
- Records each sample analyzed with time stamp, location and results for fast lookup
- Sort by date, location or calibration


ADVANCED INTERFACE

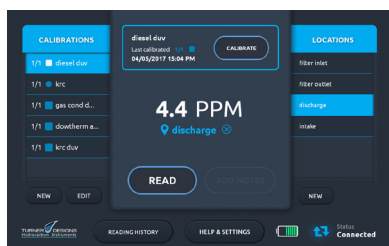


Analyze samples quickly with saved calibration.

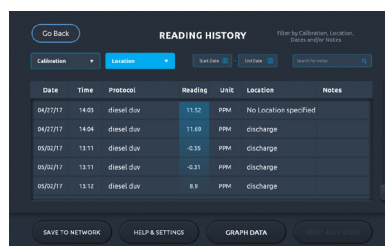

Filter data by calibration, location or date.

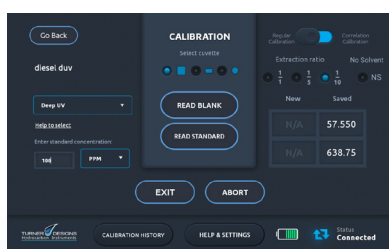

Select channel, cuvette and extraction ratio.

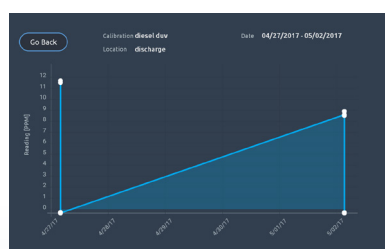

Graph filtered data from reading history.

INS-DS-0109 - SEP 2018