



Original Operating Instructions

For ErgoStrap 700/700E/712E/725E/740 E
model year 2018

serial no._____

Declaration of conformity

EU declaration of conformity for the purposes of the EU machine directive 2006/42/EG

ErgoPack Deutschland GmbH
Hanns-Martin-Schleyer-Str. 21
89415 Lauingen

We hereby declare that the systems "ErgoStrap 700, 700E, 712E, 725E, 740E", to which this declaration refers complies with all the relevant and basic health and safety requirements because of their concept, type of construction and the model we have brought on to the market.

This declaration loses its validity if a change is made to the system without our permission.

Respective


EC directives:

EC Machine directive (2006/42/EG)
EC Guideline on electromagnetic compatibility
(2014/30/EU)

Applied standards

EN 12100: 2010
EN 415-8: 2008
EN 61000-6-2:2005
EN 55011: 2018-05
EN 60 204-1: 2006

Lauingen, 03th May, 2018



Andreas Kimmerle
CEO

Validity of the operating instructions

- **The operation in these instructions is explained by using the ErgoStrap 725E as an example.**
- **As to ErgoStrap 700, all the points in these instructions referring to the operation of the sealing head and also all points referring to the operation of the control box with the motor, charger and rechargeable batteries are not applicable. Also at all points in which the movement of the ChainLance is described by using the joystick, at the ErgoStrap 700 you have to use the crank handle accordingly.**
- **All points in these instructions referring to the operation of the sealing head are not applicable as far as the “ErgoStrap 700E“ is concerned.**

These operating instructions are valid for the following models:

ErgoStrap 700 model year 2018

Strapping unit with manual drive via a hand crank,
without sealing head

ErgoStrap 700E model year 2018

Strapping unit with electrical drive, electronically controlled via a
joystick, without a sealing head

ErgoStrap 712E model year 2018

Strapping unit with electrical drive, electronically controlled via a
joystick, with a sealing head for strap width of
9-13mm and a maximum tension of 1200N

ErgoStrap 725E model year 2018

Strapping unit with electrical drive, electronically controlled via a
joystick, with a sealing head for strap width of
12-16mm and a maximum tension of 2500N

ErgoStrap 740E model year 2018

Strapping unit with electrical drive, electronically controlled via a
joystick with sealing head for strap width of
16-19mm and a maximum tension of 4500N

Table of contents

	Page
1 Technical data	
1.1 Strapping system	6
1.2 Sealing head	7-8
1.3 Charger	9
2 General	10-11
2.1 Notes on environmental protection	11
3 Safety regulations	12-15
3.1 Safety regulations for charger and battery	15
4 Description	16
4.1 Construction	16
4.2 Operating panel strapping unit	17
4.3 Operating panel sealing head	17
4.4 Charger indication	18
5 Commissioning	19
5.1 Battery charger	19
5.2 Charging the battery	19-21
6 Operation	22
6.1 Setting strap width at the sealing head	22
6.2 Switching on the control unit	23
6.3 Setting strap tension range at the sealing head	24
6.4 Setting strap tension at the sealing head	25
6.5 Setting mode of operation	26
6.6 Threading in the strap	27-40
6.7 Strapping	41-45
6.8 Tensioning and sealing of pallets over 70cm in height	46-49
6.9 Inspection of the sealing	50
6.10 Setting welding time	51
6.11 Tensioning and sealing of pallets under 70cm in height	51-53
7 Service and repair	54
7.1 Cleaning the ChainLance	54
7.2 Replacing the ChainLance	55
7.3 Replacing individual chain links	56
7.4 Replacing the reversing sledge	57-58
7.5 Replacing the length adjusting belt	59-60

7.6	Changing the sealing head	61-62
7.7	Changing the control box with the motor	63-64
7.8	Cleaning/replacing the tension wheel at the sealing head	65
7.9	Cleaning/replacing the tooth plate at the sealing head	66
7.10	Replacing the cutter at the sealing head	66
8	Save moving and parking	67
9	Spare parts lists	67
10	General safety warnings for power tools	68-71

1. Technical Data

1.1 Strapping system

Weight:

ErgoStrap 700	64,4 kg
ErgoStrap 700E (incl. battery)	88,1 kg
ErgoStrap 712E (incl. battery)	92,1 kg
ErgoStrap 725E/740E (incl. battery)	92,9 kg

Dimensions (all types)

Length	630 mm
Width	770 mm
Height	1200 mm

Maximum chain speeds

Mode A, strapping

Moving out horizontally:	40 m/min
Moving out vertically:	60 m/min
Moving in vertically:	44 m/min
Moving in horizontally:	54 m/min

Mode B: setting up/threading strap

Moving out	20 m/min
Moving in:	16 m/min

Max. chain thrust:

310 N

Measured A-graded

noise emission level (EN ISO 11202)	L _{pa}	79 dB (A)
--	-----------------	-----------

1.2 Sealing head

Weight:

(incl. spiral cable)

3,8 – 4,3 kg

Dimensions

(incl. spiral cable)

length 335 mm

width 140 mm

height 180 mm

Tension

712E

150-1200N

725E

400-2500N

740E

400-4500N

Tensioning speed

290mm/S (712E)

220mm/S (725E)

120mm/S (740E)

Sealing

friction welding

Measured A-graded

noise emission level

(EN ISO 11202)

712E L_{pa} 79 dB (A)

725E L_{pa} 78 dB (A)

740E L_{pa} 79 dB (A)

(EN 60745-1/2:2009)

L_{paeq} 77 dB (A)

L_{paeq} 82 dB (A)

L_{paeq} 81 dB (A)

Sound power level, on average

(EN 60745 -1/2:2009)

712E L_{waeq} 88 dB (A)

725E L_{waeq} 93 dB (A)

740E L_{waeq} 92 dB (A)

Measuring inaccuracy K

712E 3,0 dB (A)

725E 3,0 dB (A)

740E 3,0 dB (A)

Hand arm vibrations

(EN 60745-1/2:2009)

712E	a 2,4 ms ⁻²
725E	a 2,4 ms ⁻²
740E	a 2,3 ms ⁻²

Measuring inaccuracy K

712E	1,5 ms ⁻²
725E	1,5 ms ⁻²
740E	1,5 ms ⁻²

Plastic strap

Strap materials

Polypropylene (PP)
Polyester (PET)

Strap width

712E, adjustable to 9-10 mm
12-13 mm

725E, adjustable to 12-13 mm
15-16 mm

740E, adjustable to 15-16 mm
18-19 mm

Strap thickness

712E 0,35-0,85 mm
725E 0,50-1,00 mm
740E 0,80-1,30 mm

1.3 Battery and Charger

Charger	3 stage lead charger Prim.: 100-240 VAC 50/60Hz 1,2A Sec.: 2x 24V DC/2A Total max. power 60W
Battery	24V lead AGM battery
Weight:	12.3 kg
Charging time:	approx. 8 hours
Temperature range:	5°C - 40°C
Number of strappings:	150 to 400 per charge, depending on pallet size, tension, welding time and age of battery
Life span:	approx. 300-500 charges

2. General

These operating instructions will help you to understand the system and how to use it according to regulations. The operating instructions contain important notes on how to use the system safely, properly and economically.

Adhering to the notes helps you to avoid dangers, repairs and down times and also increases the reliability and life span of the system

The operating instructions must be available where the system is used. It has to be read, understood and used by everybody who works with the system.

These works include operation, maintenance and repair.

In addition to the operating instructions and the rules in the country and place of use for the prevention of accidents, the recognized special rules for working safely and according to proper and professional standards also have to be respected.

Meaning of warning symbols, usage conventions



DANGER

Marks a hazard with a high risk.

If not avoided, it will result in death or serious injury.



Warning

Marks a hazard with moderate risk.

If not avoided, it can result in death or serious injury.



Caution

Marks a hazard with a minor risk.

If not avoided, it can result in a minor or moderate injury.



Attention

Marks a situation to be considered.

If not considered, it can lead to material damage or poor operating results.



Marks useful, additional information.

2.1 Waste disposal

Physical or chemical materials dangerous to health have not been used for manufacturing the system.

Concerning waste disposal, valid national rules and regulations have to be considered. Take care about disposing packaging, the product itself and parts accordingly.

Special dealers offer disposal according to proper environmental protection.

- Do not open the battery
- Do not throw the used battery into the domestic waste bin, into fire or into water.

3. Safety regulations



Inform yourself!

Before usage, the manual has to be read and understood.
Service and maintenance has to be done by trained staff only.



Wear a safety helmet!

Wear a safety helmet, when strapping pallets higher than 1.20m.
The duty wearing a helmet, can be avoided, if the user was taught about the risk of injury by the plastic chain falling.
This instruction has to be recorded in writing.



Protect yourself!

Wear eye and hand protection (cut proof gloves) and also safety shoes.



Attention: Laser beam!

Direct eye contact with the laser beam or reflecting radiation may result in permanent eye injuries. Never look direct in the laser.
Laser category 2
DIN EN 60825-1:2015-07



Warning:

Strap tensioning or strapping, danger of jamming and crushing.

Do not place hands or other body parts between the strap and the packaged goods during the strapping process. Ensure that there are no other persons in the hazardous zone..

For an emergency stop in the case of danger (trapped person):

- To release tension (before welding), open the rocker lever.
- After welding, cut the strap with a suitable tool (strap cutter)

**Warning:**

Following hazards can result in serious injuries:

Breaking strap, risk of injury

When being tensioned, the strap may break and rip. Do not stand in line with the strap and wear eye protection.

Strap ends snapping back, risk of injury

When cutting strap, hold the upper portion and stand aside. Do not stand in line with the strap and wear eye protection.

ChainLance, risk of tripping

When parking the system, the ChainLance must be fully inside the system. The sledge must not stick out.

Strap waste, risk of tripping

Make sure any strap waste, which possibly appeared, will be removed from the floor quickly.

Sealing head and ChainLance, risk of crushing

Do not put your fingers into the area of the tension wheel of the sealing head and into the ChainLance.

Reversing sledge, risk of crushing

Especially around the entire surroundings of the reversing sledge, there is a risk of squeezing.

Hazardous area, risk of crushing and risk of injury

Make sure before each strapping cycle, there is no person in the hazardous area (especially of the ChainLance) and nobody can enter that area. This is due, especially for the limited or bad visible area, on the opposite site of the pallet (users view). During strapping, there must not be any hands or body parts between strap and goods.

Power source, risk of injury

Before maintenance or repair works: Switch main switch to “0” and unplug the cable from the battery.

EX Areas, risk of explosion

The system must not be used in areas with explosive atmospheres.

**Warning:**

Following hazards can cause serious injuries:

ChainLance, risk of injury

After the ChainLance moved up on the opposite side of the pallet, it falls towards the user with its own weight.

Used without paying attention, the ChainLance can fall on the head of the user and cause injuries. When using the system, watch out and be concentrated and catch the ChainLance, when it falls over.

Loose and falling goods

Check the weld. Never transport or move strapped goods with an improper welded strap.

**Caution:**

Following hazards can result in minor or moderate injuries:

Strap roll, risk of injury

If the strap roll is 20 kg or heavier, 2 persons need to lift it.

Tilting danger

Strapping pallets should, whenever possible, take place in areas with an even surface. When using the system on inclined surfaces, after positioning and before strapping, the brakes of the castor wheels on the strap side of the system have to be

**Attention:**

Avoid damages:

Water damages

For cleaning do not use water or steam.

Visual inspection

Before using the system the first time, a visual inspection has to be done.

Only use original ErgoStrap spare parts!

Warranty and liability become invalid if other parts are used.

Intended use

This system is designed for strapping pallets/ loading carriers. The system has been developed and constructed for safe operation when strapping.

The system is only to be used for strapping with plastic straps (polypropylene and polyester). Strapping with a steel strap is not possible with this system.

The system is not designed to strap aliments which are not packaged.

The set up tension force must correspond to the packaged goods to be strapped. The construction of the system does not consider any risk to damage goods, because of the strapping itself and/ or improper set tension force.

3.1 Safety regulations for battery and charger

- Check the plug and the cable before each use and have them replaced by a specialist if they are damaged
- Do not use any batteries from other manufacturers, use original spare parts only.
- Keep the connection plug to the battery away from non-related objects and dirt.
- Protect the charger from moisture; operate it in dry rooms only.
- Do not open the battery and protect it from shock, heat and fire.
Danger of explosion!
- Store batteries in a dry frost-proof place. The ambient temperature must not exceed 50°C and must not fall below -5°C.
- Damaged batteries may not be reused.

4. Description

4.1 Design



Fig. 1



Fig. 3

Control unit with drive
Cutter
Strap brake



Fig. 2



Fig. 4

Sealing head
Sliding window with safety switch
Tool-Lift
Cover of battery pack

4.2 Control panel strapping unit



Fig. 5

Joystick to move “ChainLance“ in and out with precision speed control.

LED display

Permanent light green = battery full

Permanent light

green + yellow = battery will soon be empty

permanent yellow light = battery empty, control unit switches off

(Control unit switches off when battery voltage $\leq 23,7V$)

Flashing green + yellow = teaching mode

Flashing light green or yellow = setup mode

Quickly flashing red = sliding window open

Rotary switch: A = strapping mode

B = setup mode

Main switch “power supply 1/0“

4.3 Control panel sealing head

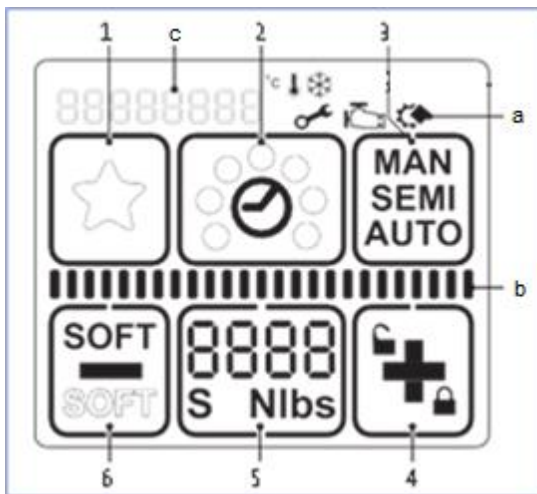


Fig. 6

1 Keypad "Favorite"

2 Keypad "Welding time"

3 Keypad "Operating mode"

4 Keypad "Plus & Keylock"

5 Keypad "Tensioning force"

6 Keypad "Minus & Soft tension"

a Display "Information symbols,,

b Status indicator bar “Tensioning/Welding“

c Display "Messages"



Display activated.



Welding process is finished, tool can be removed



Application error: temporary system error, can be rectified by the operator



Tool fault: static system error, rectify error. If the error cannot be rectified
-> Service department ErgoStrap

4.4 Indications of the Dual-Charger

Inside the red battery housing there are two 12V batteries installed. The dual charger charges each of the two batteries separately.

The dual charger has one LED- indication for each of the two 12V batteries. (Output I and Output II), indicating the charging status of each battery.

LED permanent yellow = Charging battery. **Do not remove battery from the charger!**

LED permanent green = Battery fully charged, charger switches into preserving mode.

Note: The battery pack only is fully charged, **if both** LED indication lights are permanent green!



Fig. 7

5. Commissioning



Attention!

Before using the system the first time, it needs to be checked for visible damages.

5.1 Battery charger

The main voltage must comply with the details on the type plate.
The charger is only suitable for charging the delivered 24V lead battery.

5.2 Charging the battery

- 1.) Connect the charger to the electrical outlet.
- 2.) Open cover of battery case (by pulling at the outer corners as shown below.)



Fig. 8

- 3.) Turn the red ring (12) of the plug (13) on the battery (7) counter clockwise.
- 4.) Disconnect the plug (13) from the battery and put it into the hole of the storage box above.

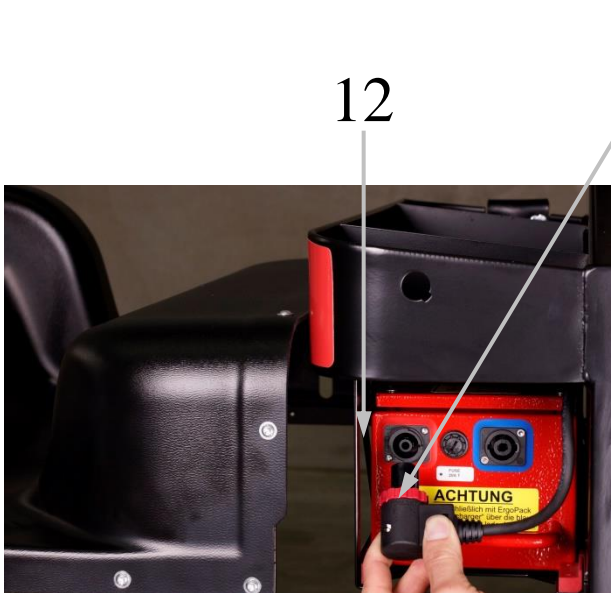


Fig. 9



Fig. 10a



Warning!

Charge the battery only with the ErgoStrap Dual-3-step charger through the blue socket!

- 5.) Put the plug (14) of the charger into the blue charging socket of the battery pack (7) as shown in Fig 10b diagonal to the lower left corner. Thereafter turn the plug clockwise by 45° as shown in Fig. 10c until it snaps in.



Fig. 10b



Fig. 10c

14



Fig. 10d

- 6.) To remove the blue charging plug after charging is completed please proceed as follows:
- a) pull the silver locking bar (15) backwards
 - b) turn the plug by 45° counter clockwise
 - c) remove the plug



Attention!

The charging time is about 8 hours. The battery pack is fully charged, only once **both** LEDs on the charger are green!

The maximum charging current flows if the temperature of the battery is between 5 - 40°C. Avoid battery temperatures below 0°C when charging.

You achieve the longest life span, if the battery is charged daily and is not being operated until the control unit switches off.

(only the yellow LED light is shining on the control box).

During charging, the battery always has to be in a horizontal position (cover upside, battery must not be in upright position).

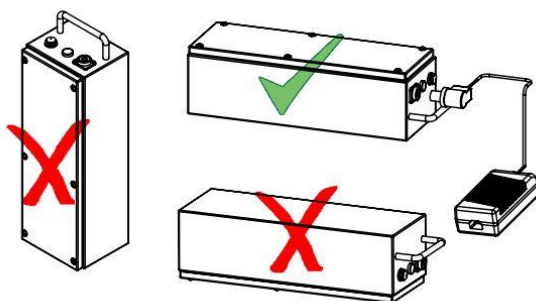


Fig. 11

6. Operation

6.1 Setting strap width at the sealing head

The sealing head can be used with different strap widths:

ErgoStrap 712E:	9-10mm or 11-13mm
ErgoStrap 725E:	12-13mm or 15-16mm 9-11mm (optional)
ErgoStrap 740E:	15-16mm or 18-19mm

The setting of the strap width is explained using the example of model 725E. The setting of the strap width with the models 712E from 9-10mm to 11-13mm and 740E from 15-16mm to 18-19 mm works accordingly.

a) Change strap width from 12-13mm to 15-16mm

- Switch the system off
- Remove three cylinder screws Torx (6). Lift rocker lever towards the
- handle, remove cylinder screw Torx (7) and strap guide rear 13 mm (8).
- Remove side cover (5).
- Remove counter-sunk screw Torx (2) and strap guide front 13 mm (1).
- Remove counter-sunk screw Torx (4) and strap guide front 13 mm (3).
- Remove cylinder screw Torx (10) and strap guide rear 13 mm (9).
- Fit side cover (5) (secure cylinder screw with Loctite 222). Install strap guide rear 16 mm (8).

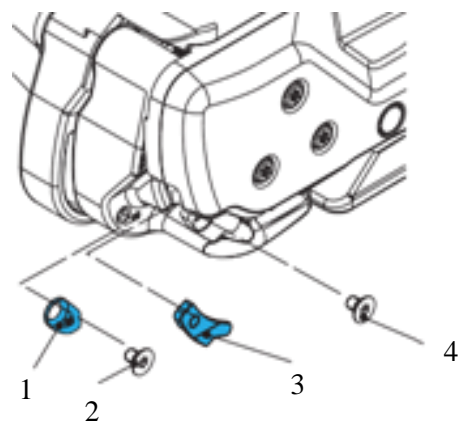


Fig. 12

b) Change strap width from 15-16mm to 12-13 mm

- Switch the system off
- Remove three cylinder screws Torx (6). Lift rocker lever towards the
- handle, remove cylinder screw Torx (7) and strap guide rear 16 mm (8).
- Remove side cover (5).
- Fit strap guide front 13 mm (1) (secure counter-sunk screw with Loctite 222).
- Fit strap guide front 13 mm (3) (secure counter-sunk screw with Loctite 222).
- Fit strap guide rear 13 mm (9) (secure cylinder screw with Loctite 222).
- Fit side cover (5) (secure cylinder screw with Loctite 222). Install strap guide rear 13 mm (8).

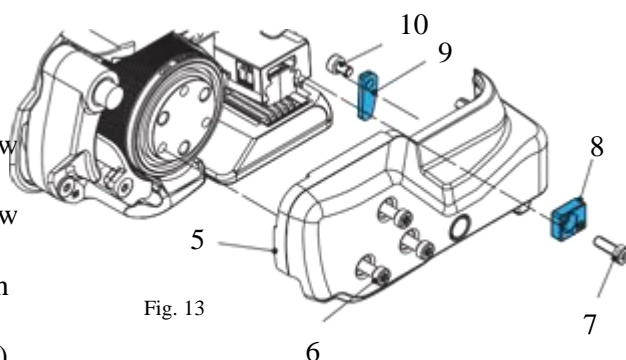


Fig. 13

6.2 Switching on the control unit

1. Step

- Charge the battery as described under 5.2.
- Plug in the connector of the power cable (13) into the socket of the battery (7) and lock it by turning the red ring (12) clockwise.
- Lock the cover of the battery case again.
- Turn the main switch (11) to the right to operating mode “1“
- Set the operating mode switch (10) to operating mode “A“.



Fig. 14



Fig. 15

2. Step

2 LEDs (green and yellow) are now flashing. The control unit is in teaching mode.

Now move the joystick (8) completely to “move out“ or “move in direction“ and keep it pushed until the green LED permanently is shining. (if the green **and** the yellow LED are shining, the battery is not fully charged but you nevertheless can continue).

The control unit now is ready for operation. After two seconds the 7-segment indicator lights on the display of the sealing head are shining. The sealing head now also is ready for operation.

6.3 Setting the strap tensioning range at the sealing head

Two strap tensioning ranges can be set at the sealing head:

NORMAL = 400-1200N (712E); 900-2500N (725E); 1300-4500N (740E),
standard tension range for PET strap

SOFT = 150-750N (712E); 400-1360N (725E) bzw. 400-1600N (740E),
soft tension for PP straps

Press "Soft" button (1).

The soft mode **is deactivated** when the
"SOFT" display (2) changes position and
is shown outlined.



Press "Soft" button (1).

The soft mode **is activated** when the
"SOFT" display (3) changes position and
is shown in bold.

The displayed tension force is reduced
correspondingly.

On the left under the tension force an "S"
(4) also appears.

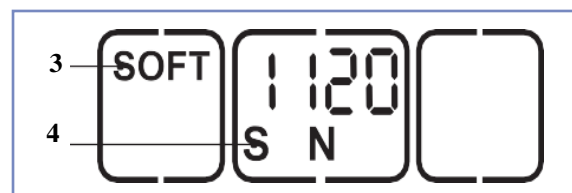


Fig. 16



Important!

When using the Soft mode, the tension wheel starts more slowly and avoids excessive stap waste when using PP strap.

Whenever using PP strap, use the soft mode!

6.4 Setting strap tension at the sealing head

The set tension force is displayed continuously when the tool is ready for operation.

- Press "Tension force" button (2).
- The set tension force flashes for 5 seconds.
- The + (1) and – (3) buttons appear.
- Unused displays disappear.
- Press the + (1) or – (3) button until the desired tension force is displayed.
- The status indicator bar (4) shows the set tension force in relation to the possible maximum value.
- Save: Press the "Tension force" button (2) or wait for 5 seconds.

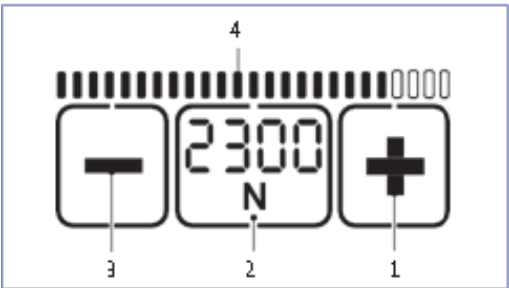


Fig. 17a



- Switch between display in "N" or "lbf": Press the flashing "Tension force" button (2) for two seconds.
- Every time the button is pressed an acoustic signal confirms the action.
- The tension force is displayed continuously when the tool is operational.
- Setting soft tension (Section6.3).

713										
Standard	N*	400	500	600	700	800	900	1000	1100	1200
	lbf*	90	110	135	155	180	200	225	250	270
Soft	N	150	225	300	375	450	525	600	675	750
	lbf	33	50	67	85	100	120	135	150	165

726										
Standard	N*	900	1100	1300	1500	1700	1900	2100	2300	2500
	lbf*	200	250	290	340	380	430	470	520	560
Soft	N	400	520	640	760	880	1000	1120	1240	1360
	lbf	90	115	145	170	200	225	250	280	305

745										
Standard	N*	1300	1700	2100	2500	2900	3300	3700	4100	4500
	lbf*	290	380	470	560	650	740	830	920	1000
Soft	N	400	550	700	850	1000	1150	1300	1450	1600
	lbf	90	120	160	190	225	260	290	325	360

(rounded values)

* N = Newton, lbf = pound-force per square inch



Warning!

Adjusted tension force must relate to the goods to be strapped..Possible hazards caused by damages of dangerous goods or their packaging are not considered with the design of the system.

6.5 Setting mode of operation

Press the "Operating mode" button (1).

- Unused displays disappear.
- The currently set operating mode flashes for 5 seconds.
- + and – appear.
- Press the + (2) or – (3) button until the desired operating mode is displayed.

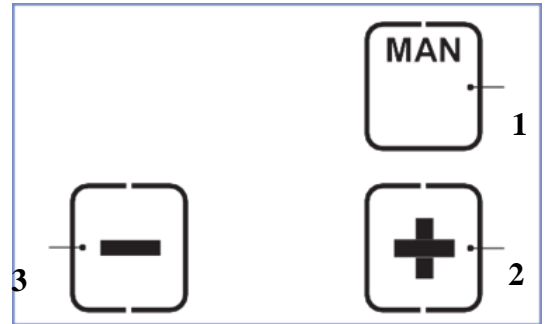


Fig. 17b

MAN / SEMI / AUTO

- By pressing the "Operating mode" button (1) again, or after waiting for a period of 5 seconds, the set mode is saved. Every operating mode can also be selected for the "Soft tension" tension range (Side 24).

- **MAN-Manual**

The tensioning button must be pressed and held down until the desired strap tension has been reached. The welding button must then be briefly pressed so that the straps are welded and the upper strap is cut off.

- **SEMI-Semi-automatic strapping (standard/factory setting)**

The tensioning button must be pressed and held down until the set tension force has been reached. The straps are then automatically welded and the upper strap is cut off. It can be welded manually at any time by pressing the welding button.

- **AUTO-Fully automatic strapping**

The tensioning button must only be briefly pressed (touched). This triggers the tensioning process. Once the set tension force has been reached, the straps are automatically welded and the upper strap is cut off.



WARNING

Strap tensioning or strapping, danger of jamming and crushing

Do not place hands or other body parts between the strap and the packaged goods during the strapping process. Ensure that there are no other persons in the hazard zone

For an emergency stop in the case of danger (trapped person):

To release the strap tension (before welding), actuate the rocker lever. In operating mode AUTO, also the tensioning or welding button can be pressed again. After welding, cut the strap using a tool (strap cutter).

6.6 Threading in the packaging strap

1. Step

Switch on the control unit with the key as described under point 6.2

2. Step

Set the operating mode switch (3) to position “B”
(green LED flashes / green and yellow LED are flashing if the battery is not fully charged)



Fig. 18

3. Step

You can use the joystick (8) to position the ChainLance so that the red chain link is in the middle of the sliding window (6).

The sliding windows must be closed during this operation!

4. Step

Open the sliding window (6). (red LED flashes quickly).

The control unit automatically switches off for safety reasons when the sliding window is open. Additionally, the main switch has to be turned to the left into pos. „0“.



Fig. 19



Fig. 20

5. Step

Remove the pin for setting the pallet width from its position at 1,2 m.

To remove and to insert the pin, the button at the center of the pin must be pressed.



Fig. 21

6. Step

Put the pin into the hole with the milling groove at the lower left side.



Fig. 22

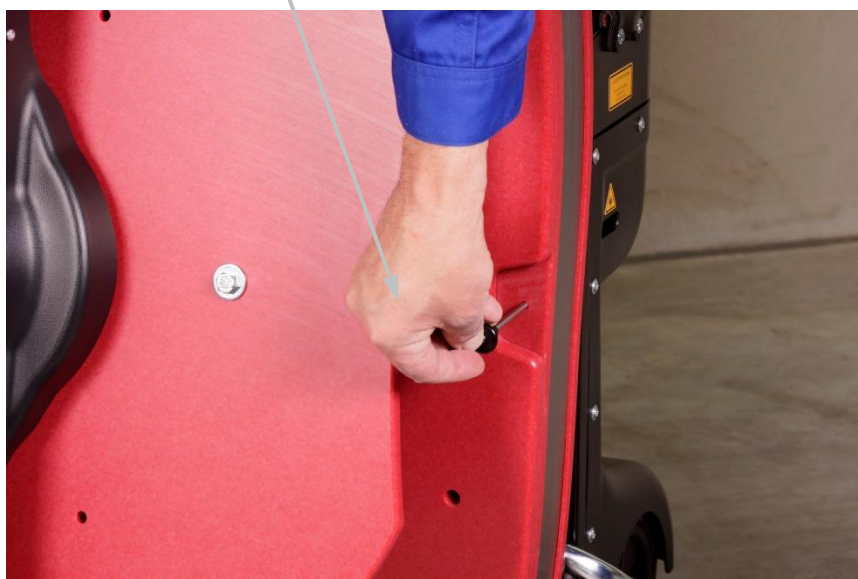


Fig. 23

7. Step

Fold down the arm with the red disc until its final stop.



Fig. 24

8. Step

Place a new roll of strap onto the red disc so that the strap unwinds in the **counter-clockwise direction** when looking down on the roll.



Fig. 25



Important!

Do not remove the tape or strap which fix the strap on the roll!

9. Step

Fold up the arm with the strap roll again in its vertical position as shown on the picture.



Fig. 26

10. Step

You can remove the tapes or adhesive strips now which secure the strap on the roll.

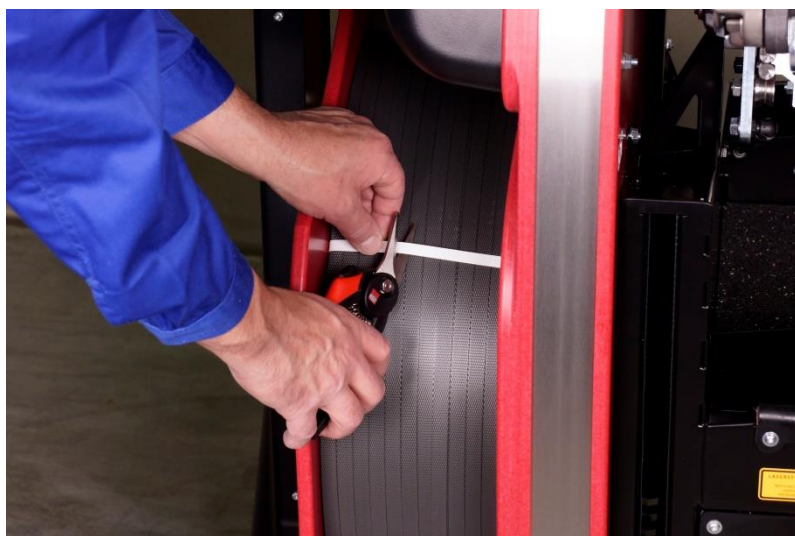


Fig. 27



Fig. 28

11. Step

Fold up the cover of the white roll for strap inflow, thread the strap through the U-bolt...



Fig. 29

...and over the white roll to the inside. Thereafter fold the cover back down again.



Fig. 30



Fig. 31

12. Step

Press from the left hand side on the clamp lock located in the red chain link

...and then slide the strap from the right to the left through the slot in the clamp lock.



Fig. 32



Fig. 33

Now close the sliding window (6).
Make sure that the window is fully closed.
The safety switch for the control unit will unlock only
after the window is fully closed.
(red flashing LED turns off, green LED lights up
or green and yellow LED light up)



Fig. 34



Fig. 35

13. Step

Press the joystick in the “move out “ direction until the reversing sledge tilts upwards.



**Warning,
risk of crushing!**

Never put your fingers through the ChainLance.



Fig. 36

Hold the end of the ChainLance with the left hand while you still continue to push the joystick in the “move out direction“.

Extend the ChainLance as far as shown on the picture.

Then put the chain on the system...



Fig. 37



...and continue to move out the ChainLance until the red chain link is at about the same level as the left handle of the system.

Fig. 38



Fig. 39

14. Step

Remove the strap from the clamp in the red chain link and hold it straight up as shown.



Fig. 40



15. Step

Move the ChainLance back now by pushing the joystick in the „move in“ direction until the ChainLance is approx. 30 cm lower than the strap you are holding in your hand.



Fig. 41

16. Step

Open the double eccentrics by pushing it inwards with the finger as shown.



Fig. 42

Push the strap from the back through the top of the ChainLance as shown. The strap must be between the two aluminum eccentrics.



Fig. 43



17. Step

Now hold the strap vertically so that the strap and the ChainLance are straight.



Fig. 44

18. Step

Move the ChainLance completely backwards by pushing the joystick again in the “move in“ direction.



Important !

Make sure that the strap remains continuously tensioned while the ChainLance moves back, to avoid the strap being pushed back into the system.



Fig. 45

19. Step

Set the operating mode switch (3) to position “A“

3



Fig. 46

20. Step

Place the overlapping strap as shown with a loop through the small slot underneath the left handle.



Fig. 47a



Fig. 47b

21. Step

Remove the pin for setting the pallet width from the hole with the milling groove...

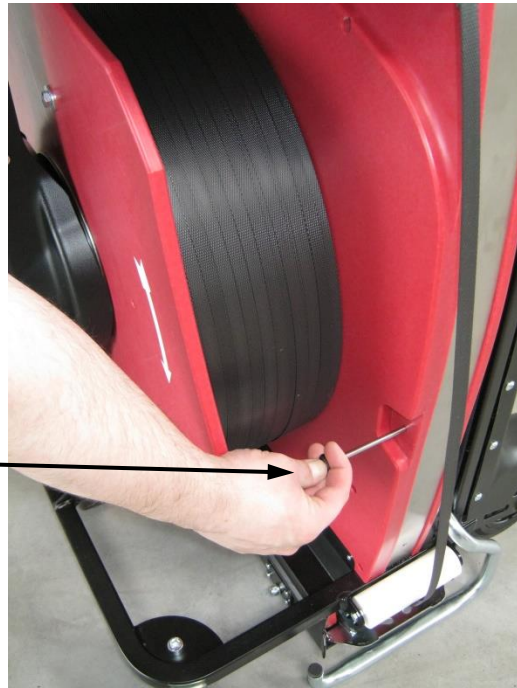


Fig. 48

...and set the requested pallet width as shown on the picture by placing the pin into the next higher size of your pallet width.

Example 1:

Pallet width 0,80 m-

Put the pin into the 1,0 m position

Exampel 2:

Pallet width 1,2 m-

Put the pin into the 1,4 m position

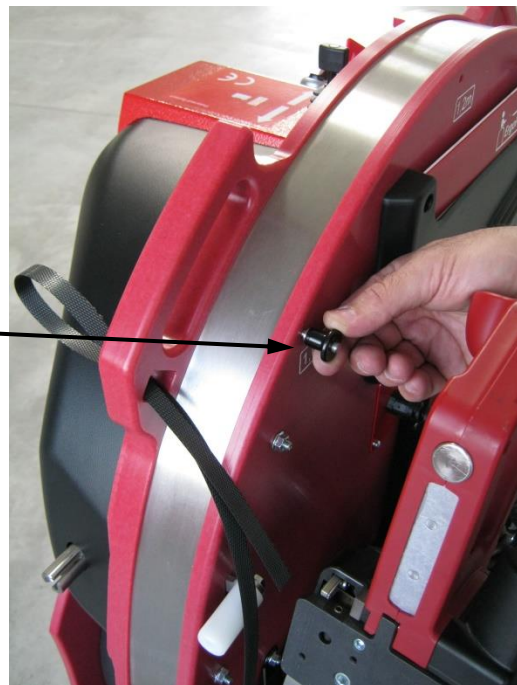


Fig. 49

Your ErgoStrap is now ready for strapping.

6.7 Strapping



Fig. 50

1. Step

Place the ErgoStrap at a distance of approx. 30 cm in front of the pallet to be strapped.

If your unit is equipped with the optional line laser:

Align the ErgoStrap parallel to the pallet so that the laser line runs parallel to the lower pallet edge.

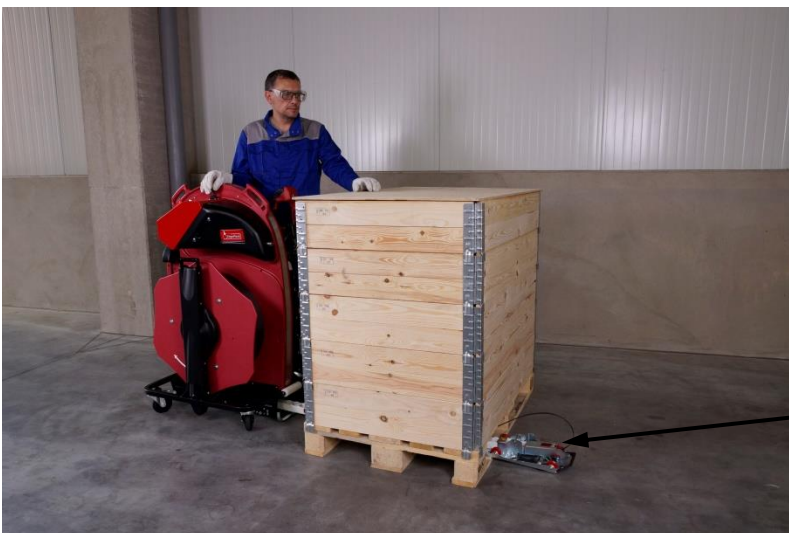


Fig. 51

2. Step

Move the ChainLance by pushing the joystick in the “move out” direction.

The reversing sledge leads the strap through and underneath the pallet...



Fig. 52

...and back up again
on the opposite
side.

If the setting of the pallet width and the positioning of the pallet are correct, the distance between the chain and the pallet is about 10-15cm.



Important!

To guarantee that the ChainLance remains straight, it is important that you push the joystick until the ChainLance appears on the other side.

Catch the ChainLance as shown at the front edge. Do not let the ChainLance drop onto the package!

As soon as you have caught the ChainLance, let the joystick move back to the neutral position so that the ChainLance stops moving out further.

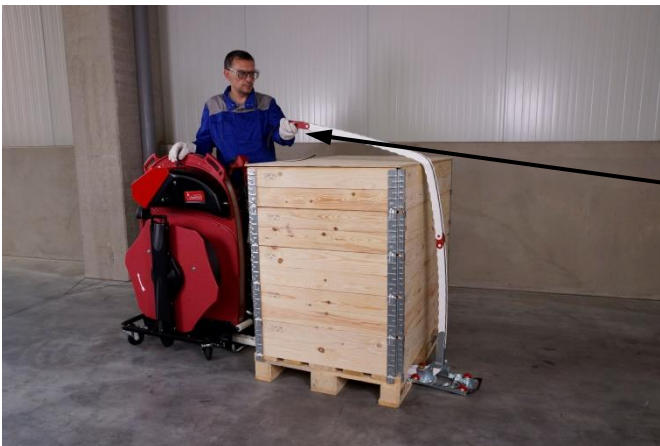


Fig. 53

3. Step

Hold the strap as shown with the left hand at the front, directly at the chain lance...



Fig. 54

.... move the Chain Lance completely backwards by pushing the joystick in the “move in” direction.

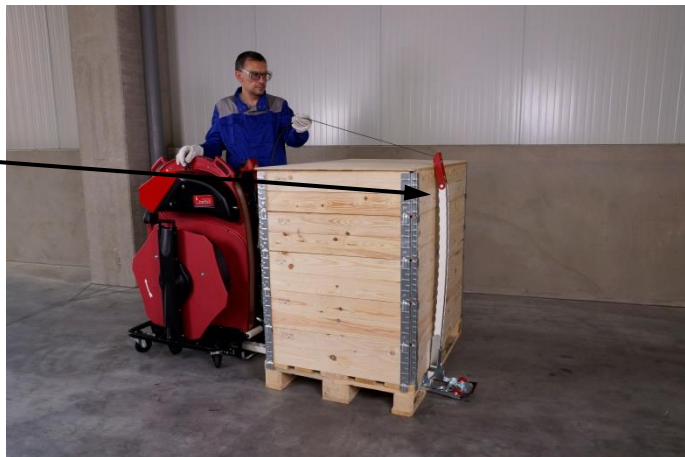


Fig. 55



Important!

Always keep the strap slightly under tension when moving the ChainLance backwards so that no loops can be formed or pushed into the system as this can lead to malfunctions.

4. Step

The strap lifter comes up automatically after the reversing sledge has moved back into the system.

You now have to let the strap slide through your left hand; otherwise the strap lifter cannot come up.

The strap lifter lifts the second end of the strap up to working height so you can take it without bending down.

Keep pushing the joystick back until the strap lift arm is completely in the upper position.

The strap lifter automatically moves down again after 2 seconds. (The strap lifter will not go down automatically after 2 seconds if the upper position has not been reached successfully)



Fig. 56



Important!

You have to hold the strap loose in your hand when the strap lifter rises.

The system automatically switches off to prevent damage if you do not release the strap once the strap lifter comes up. The strap lifter can be raised up again by repeatedly pushing the joystick in the “move in direction“.

Strap can be easily uncoiled manually if required.

Do not pull the strap at the strap lifter directly ...



Fig. 57

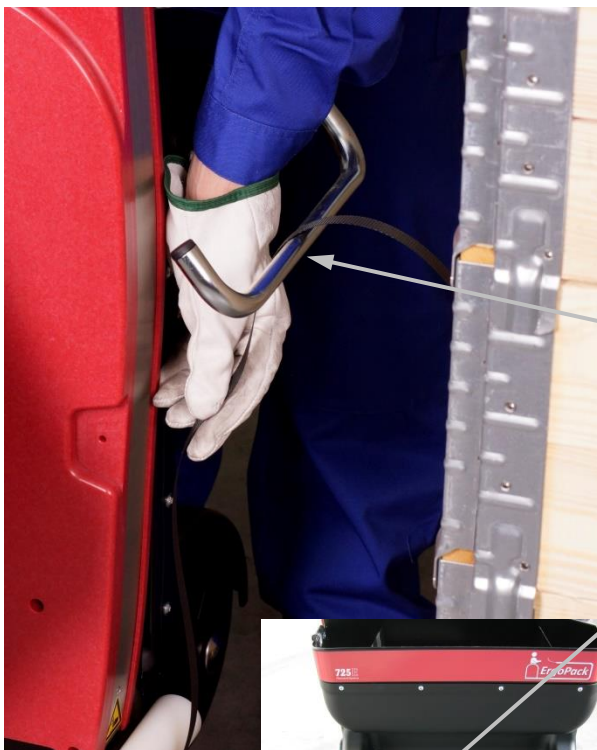


Fig. 58a

...but about 10 cm below the strap lifter. Hold the strap with the whole hand and pull it out of the unit. You also have to loose the end of the strap slide through your other hand at the same time!

If your unit is equipped with the optional strap brake release:

Before pulling at the strap, press down the foot pedal at the left side.

This reduces the brake force of the strap roll and makes pulling out strap manually a lot easier.



Fig. 58b

6.8 Strapping and sealing with pallet heights over 70cm

1. Step

Overlap the straps so that the end of the strap lies underneath.



Fig. 59

2. Step

Then hold both straps as shown with the **right hand**.

The end of the strap should lie in your hand and not project beyond it!



Fig. 60

3. Step

Push the sealing head towards the pallet with the left hand and tilt it forward at the same time so that the sealing head is parallel to the package.

Pull the rocker lever to open the jaws of the sealing head.



Fig. 61

With your right hand you can now feed the strap from the top to the bottom through the slot in the sealing head.
(similar to a credit card)

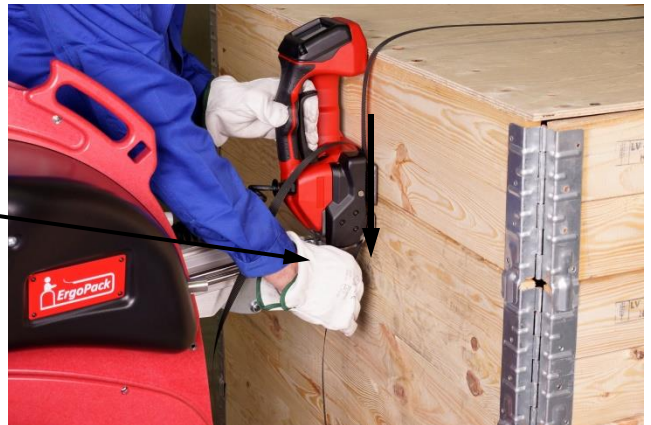


Fig. 62

Now let go of the rocker lever



Fig. 63

4. Step

The tensioning and sealing of the strap is different according to the set mode (manual or automatic mode)

See to this „Setting mode of operation“ page 26

4.1 Manual tensioning and sealing

The sealing head switches off automatically as soon as the set tension force is reached. (see page 26, chapter 6.5) or if the tension button is released.

Thereafter, press the round welding button on the right side.

4.2 Automatically tensioning and welding

If the sealing head is in automatic mode, the welding process is activated automatically as soon as the pre-set tension force has been reached. Re-tensioning is not possible any more.

The welding process is finished, once the indicator bar is filled fully (1.) The cool down starts (2.). After cool down there is a beep and the display lights up green.



Fig. 64



Fig. 65

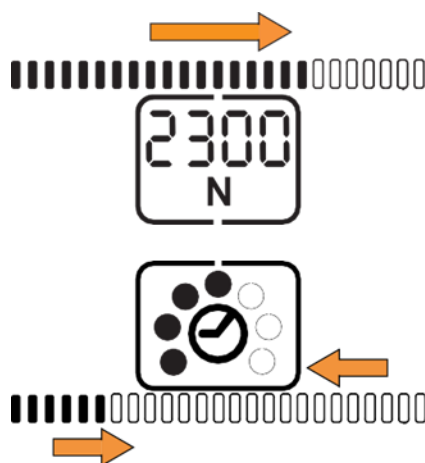


Fig. 66

5. Step

As soon as the countdown is finished and the signal has sounded you have to pull the rocker lever towards the handle.



Attention!

If after pressing the welding button, the welding does not start, but the sealing head beeps, the tensioning button was not pressed first.

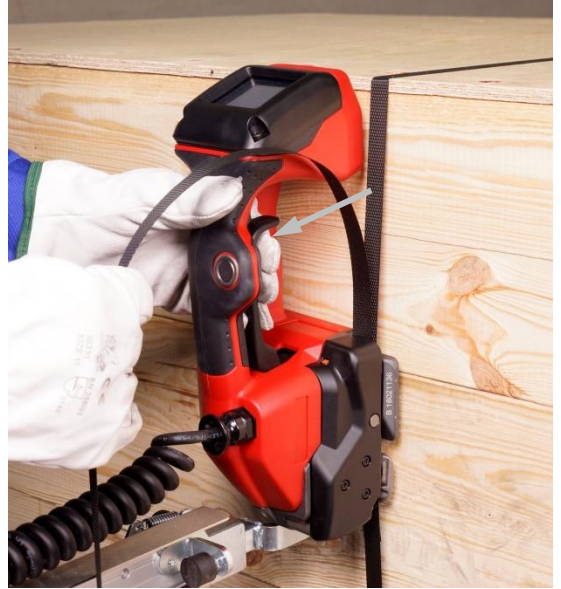


Fig. 67

6. Step

Now slew the sealing head to the left while keeping the rocker lever pulled.



Attention!

It is recommended to clean the sealing head regularly (daily), if there is a lot of strap waste. Especially the tension wheel and the tooth plate have to be checked for damages and kept clean.
Please refer to point 7.8 , page 65


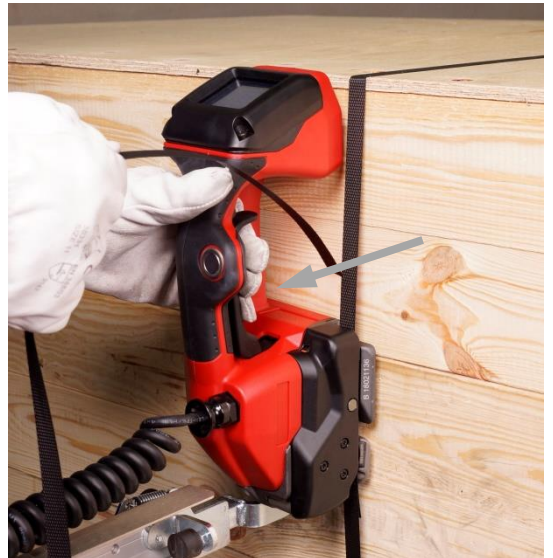


Fig. 68

6.9 Sealing control

The welding time must be checked in accordance with point 6.10. and changed if necessary when the straps are welded badly.

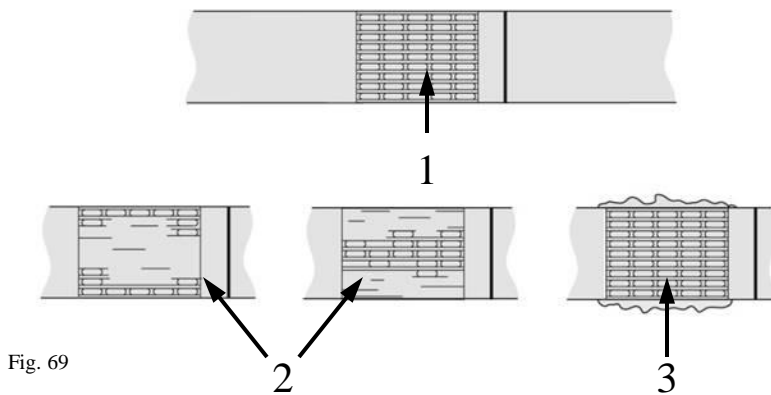

1 Good welding: the whole sealed surface has been properly welded without any extra material being squeezed out to the side.

2 Bad welding: The surface has been unevenly welded, the selected welding time is too short.

3 Bad welding: Surplus material has squeezed out to the side, the selected welding time is too long.



Warning:

Improper welded straps cannot secure the loads and can therefore cause injuries.

Never transport or move goods with improper welded straps.

6.10 Setting the welding time

The set welding time is displayed continuously by filled dots when the system is ready for operation.

- press Button “welding time“ (2)
- unused displays disappear.
- The filled dots of the current set welding time flash for 5 seconds.
- + and – appear.
- press button + (1) or – (3) until the desired welding time appears..
- Save: Press button “welding time” (2) or wait 5 seconds.

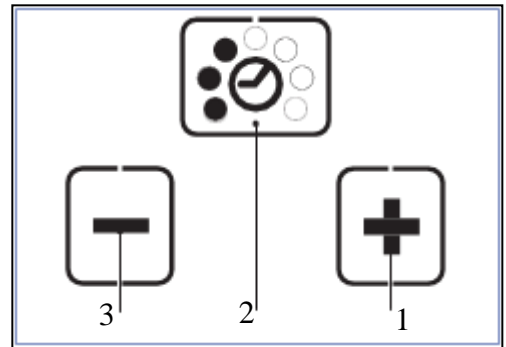


Fig. 70



Attention!

Is the necessary welding time to reach according to point 6.9 a good weld by 6 or 7, the welding mechanism probably starts to wear. Most often both tooth plates have to be replaced soon.

6.11 Strapping and sealing with pallet heights below 70cm height with ErgoStrap Standard-Tool-Lift

1.Step

Pull out the black knob of the locking bolt, then remove the sealing head from the Tool-Lift and place it on the package to be strapped.



Fig. 71



Fig. 72

Step 1-7 proceeds exactly as described under point 6.7, except that the sealing head is now in the horizontal position (Fig. 73a-e)



Fig. 73a



Fig. 73b

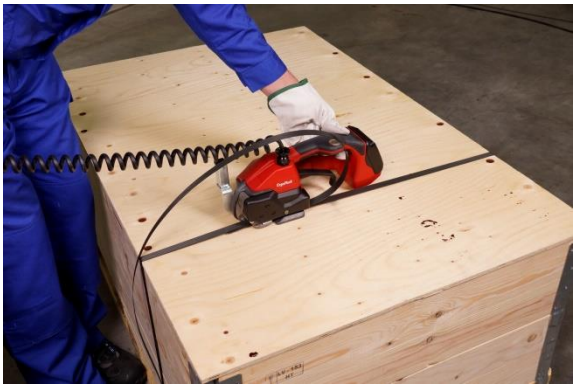


Fig. 73c



Fig. 73d



Fig. 73e

If your unit is equipped with the optional Triplex Tool-Lift:

Pull out the sealing head horizontally, tilt the sealing head into horizontal position and put it on top of the pallet.

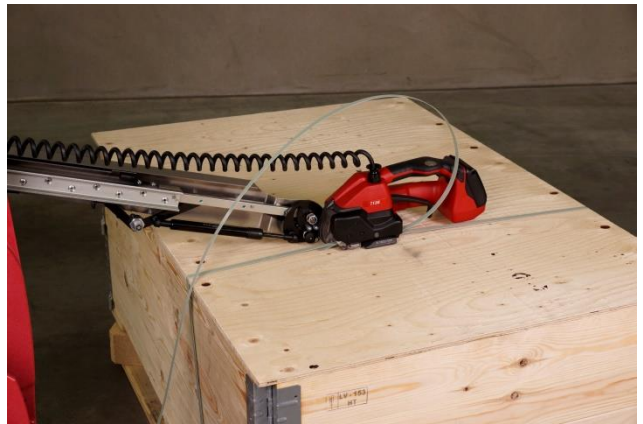


Fig. 74

7. Servicing and repair

Your ErgoStrap is made out of galvanized steel, powder coated steel, stainless steel and highly wear resistant plastics and is basically maintenance free.

Clean the outside of the ErgoStrap with a damp cloth if it is extremely dirty.



Warning!

During all maintenance and service/repair works, the main switch has to be switched off („0“), and the battery must be unplugged.

7.1 Cleaning the ChainLance

Clean the ChainLance with acetone or petroleum if it has become dirty with oil.



**Do not place the ChainLance into cleaner.
Never use lubricants like grease or oil!**

7.2 Replacing the ChainLance

1. Step

Disconnect the main power cable from the battery.

2. Step

Pull out the reversing sledge by about 1 m, pull out the ChainLance of the system as shown and roll it up.



Fig. 75

3. Step

Push the new ChainLance in again in reversed order of the removal.

4. Step

Reconnect the main cable to the battery again, set the main switch to position “1” and put the system into operation in accordance with point 6.2, step 2.



Fig. 76

7.3 Replacing individual chain links

The ChainLance can be opened as described under point 7.4 to replace broken chain links.

A defective chain link can also be removed without the need to insert a new chain link. The control unit automatically adjusts to the new zero point in accordance with point 6.2, step 2, after each restart.

7.4 Replacing the reversing sledge

1. Step

Disconnect the main power supply cable from the battery.

2. Step

Pull the reversing sledge by about 1 m out of the system, fold up the hinge at the reversing sledge and pull out approx 60 cm of the chain upwards as illustrated

3. Step

Press a screw driver between the wings of two chain links (there is a small groove between the two wings to put the screw driver to) and slew the chain to the side until it fully separates.



Fig. 77



Fig. 78



Fig. 79

4. Step

Push the ChainLance back into the system until it has completely moved out of the reversing sledge.



Fig. 80

5. Step

Place the reversing sledge on its top as illustrated and use a screwdriver to unscrew both screws of the length adjusting belt.

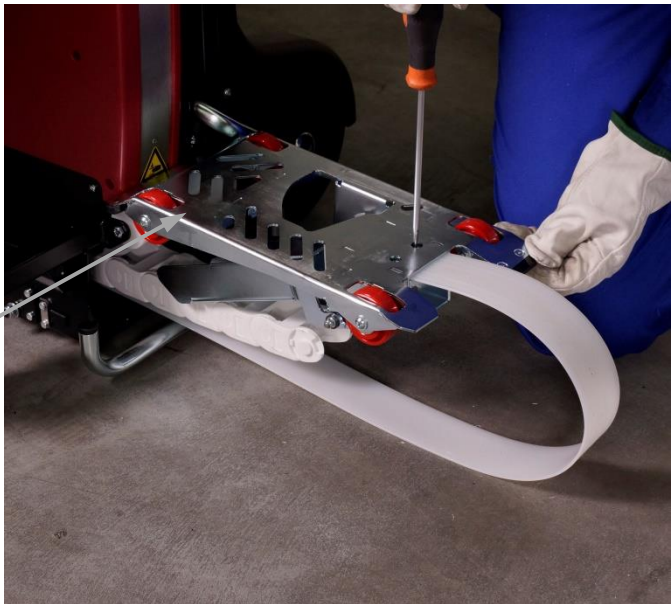


Fig. 81

6. Step

The fitting is done in the reversed order of the dismantling.



Important !

Both screws of the length adjusting belt must be protected with screw retaining varnish!

7.5 Replacing the length adjusting belt

1. Step (dismantling)

Perform steps 1 to 5 listed in point 7.4 and continue with step 2.

2. Step (dismantling)

Remove these 6 screws of the cover with a screw driver (Z2) and remove the two covers.

Thereafter, remove these 3 screws (4mm allen wrench and 8mm open-end wrench on opposite side....



Fig. 82



Fig. 83

...not the hexagon socket screws with a 5mm Allen wrench and a 10mm open end wrench on the opposite side!)

3. Step (dismantling)

Remove the pin for setting the pallet width and pull out the length adjusting belt.

4. Step (installation)

Push the ChainLance all the way back into the system so that you can see the groove of the length adjusting belt.

5. Step (installation)

Push the new length adjusting belt into the small groove below the groove for the ChainLance.

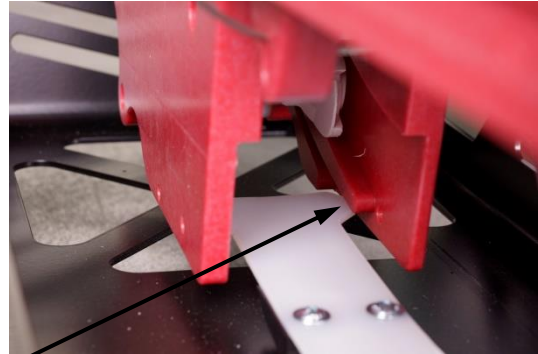


Fig. 84

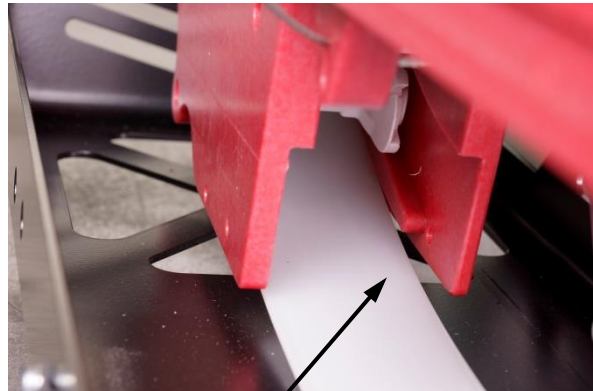


Fig. 85



Important !

Make sure that also the cut out of the length adjusting belt is inserted into the lower groove and that it does not slide into the upper groove of the ChainLance. Further assembling is to be done in reversed dismantling order.

The screws may only be tightened until the stop nut engages. The screws have to be loose and must not be tightened!

If the screws have been tightened too much, the storage plates will be pressed together, the ChainLance and the length adjusting belt could become jammed!

7.6 Changing the sealing head



Fig. 86

1. Step

1. Step

Remove the cover by pulling at the handle.
(the cover is fixed by magnets).

2. Step

Turn the red ring of the plug counter clockwise and remove the red plug.



Fig. 87

3. Step

Remove the 4 screws of the red metal cover at the operator's side.



Fig. 88

4. Step

Pull the cable with the plug through the opening in the storage plates.



Fig. 89

5. Step

Pull out the locking bolt for unlocking the sealing head and remove the sealing head.



Fig. 90

If your unit is equipped with the optional Triplex-Tool-Lift:

Remove both screws M5 (4mm Allen wrench). These screws are secured with special wedge-lock washers. (The wedge-lock washers can be reused)

When mounting the sealing head again make sure that the rough tooth system of the two wedge-lock washers are facing (Fig. 91)

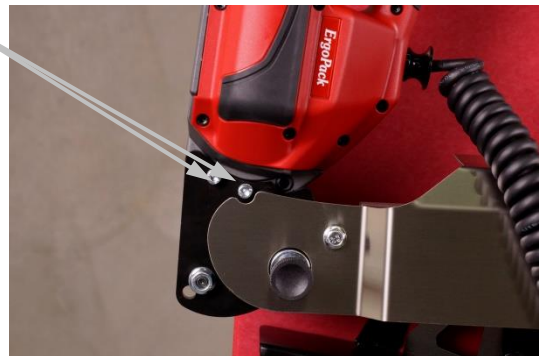


Fig. 91

6. Step

The mounting of the sealing head is to be done in reversed order of the dismantling.

When mounting the cover of the control unit, take care to engage it first at the level of the cutter and then all along the groove.

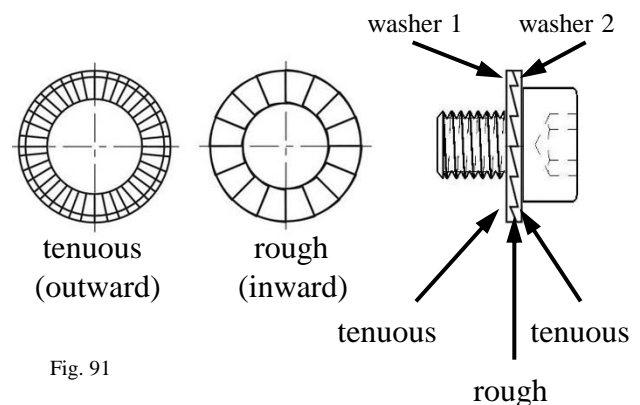


Fig. 91

7.7 Changing the control box with drive unit

1. Step

Remove the cover by pulling at the handle.
(the cover is fixed by magnets).



Fig. 93

2. Step

Remove all three plugs on the lower side of the control unit. (4 plugs if optional laser is installed)
All three plugs are secured with a safety ring which is unlocked by turning it counterclockwise.



Fig. 94

3. Step

Remove the 4 screws of the pocket for the manual and the 2 small cover caps.



Fig. 95



Fig. 96

4. Step

First remove the four screws around the drive shaft by using a 4mm Allen wrench.

To do so, you have to move the ChainLance to turn the gear wheel until you can see and open the individual screws.



Fig. 97

5. Step

Remove the fifth screw now and hold the control unit simultaneously.



Fig. 98

6. Step

Pull off the control unit. Make sure that the small fitting spring on the drive shaft does not get lost.

7. Step

The installation of the control unit is done in the reversed order of the disassembling.



Fig. 99

7.8 Cleaning/replacing the tensioning wheel at the sealing head

Removal

- Unplug the battery
- Remove four cylindrical screws (4) and remove strap stop rear (5) and cover (3)
- Remove tension wheel (1) carefully.
- Remove ball bearing (2) from tension wheel.



WARNING

Wear eye protection when cleaning with compressed air!

- Clean the tension wheel with compressed air.
- If the tension wheel teeth are covered with heavy dirt they must be carefully cleaned with the wire brush supplied.
- Check tension wheel for worn teeth. If a few teeth are broken, replace tension wheel (observe direction, see arrow).

The tension wheel must not be cleaned while it is rotating. There is a risk of breaking its teeth!

Installation

- Install the parts in reversed order.
- Grease interior gear teeth of tension wheel lightly with Klüber grease GBU Y 131 (Microlube).

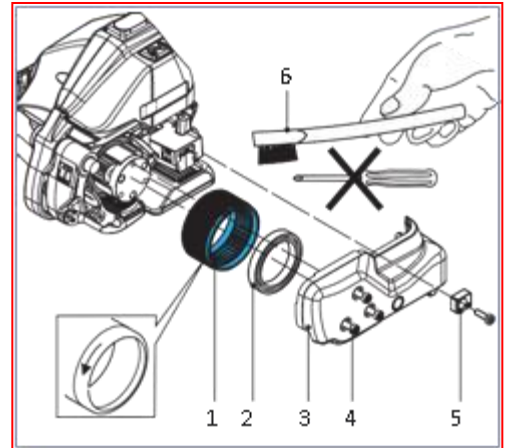


Fig. 100



Important !

The tension wheel is extremely sensitive when it comes into contact with hard, especially metallic objects. A hard object, such as a screwdriver or similar, must not be used under any circumstances whatsoever for cleaning. The tension wheel must not be cleaned in an installed state when it is rotating.

7.9 Cleaning/replacing the tooth plate at the sealing head

Removal

- Unplug battery
- remove pan head screw (1). Lift the rocker lever towards the handle and remove tooth plate (2)



WARNING

Wear eye protection when cleaning with compressed air!

- Clean tooth plate with compressed air (wear goggles)
- If the tooth plate teeth are covered with heavy dirt, they must be carefully cleaned with the wire brush supplied or a scribe.
- Check tooth plate for worn teeth, if necessary, replace tooth plate.

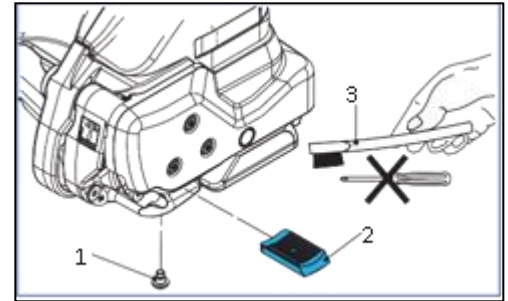


Fig. 101

Installation

- Install the parts in reversed order
- Secure pan head screw (1) with Loctite 222
- **The tooth plate (2) must be placed so that it can move freely in the rocker!**

7.10 Replacing the knife at the sealing head

Removal

- Unplug battery
- Remove four cylindrical screws (2) and remove strap stop rear (3) and cover (1)
- Release pan head screw (4) and remove knife (6) with flanged bushing (5). Replace knife.

Installation

- Install the parts in reversed order
- Before installing knife, check that the compressing spring on top of knife is still mounted
- Secure pan head screw (4) with Loctite 222.

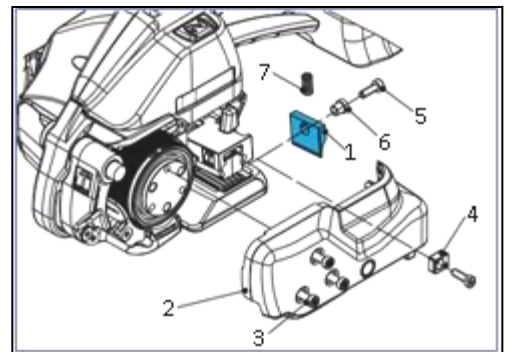


Fig. 102

8. Secure Movement and Parking

Moving the system

The system can be pushed in an upright position with the two hand grips at the head of the red frame plate. For pushing it you must release the brakes of the two guide rolls on the strap side.

Parking the system

After having parked the system you have to lock up the brakes of the two guide rolls on the strap side of the system to avoid that the system is rolling away accidentally. Furthermore, you have to make sure that the ChainLance is completely drawn in and that the key of the main switch is removed and kept safely from the access of unauthorized persons.

9. Spare parts lists

Spare parts lists and explosion drawings as well as the wiring plan can be found on our website **www.ergopack.de** under “downloads“ as a PDF file.

Please make a note of the type and serial number of your system for the selection of your proper spare parts list.

Please always state the number of the article when ordering spare parts (not the position number of the part on the exploded drawing).

10. General safety warnings for power tools



WARNING! Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

- a) **Keep the work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce the risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust masks, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to the power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c) **When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.