




# Ezy-Wash<sup>®</sup> Pre-Rinse Tapware

PRODUCT CODE:

- TF100HJP

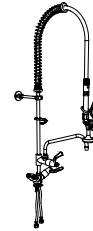

## SPECIFICATIONS

- Galvin Engineering recommends the installation of strainers and pressure reducing valves prior to installing the Pre-Rinse unit to ensure clean consistent supply. Debris or poor water quality could cause the trigger to seize or fail to seal.
- Whilst Pre-Rinse units have a 6 star WELS rating, the pot filler attachments are 0 star to allow for fast pot filling.
- The identification buttons on the handles are standard and signify hot or cold water only. If water other than hot or cold is used (e.g. pre-mixed) then appropriate identification buttons will need to be purchased to replace those supplied on the standard unit.

## TECHNICAL DATA

Inlet connections	15BSP – Female Flexi Tail	
Outlet connections	N/A	
Headworks	Jumper Valve	
Working Pressure Range (kPa)	Min	100
	Max	500
Maximum Working Temperature (°C)	Min	5
	Max	65
Nominal Flow Rate (LPM)	N/A	
Finish	Chrome	


**NOTE:** Galvin Specialised continually strives to improve their products. Specifications may change without notice.

## PRE-INSTALLATION

### MOUNTING DETAILS


#### Body:

- If the mounting holes do not already exist, mark out and drill the holes in the bench, as shown in rough-in dimensions.

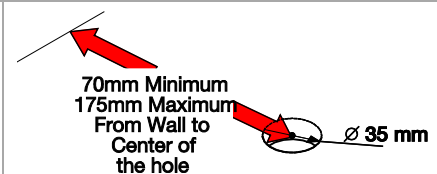

#### Wall Bracket:

- Measure 400mm directly up from the bench, cut out and drill two holes to suit wall plugs (not supplied). Holes between centres will be 37.5mm.

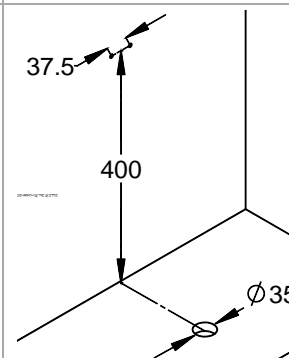



## TOOLS REQUIRED

- Spanner
- Thread Tape



## INSTALLATION

**IMPORTANT:** Galvin Specialised products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable National and/or State standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

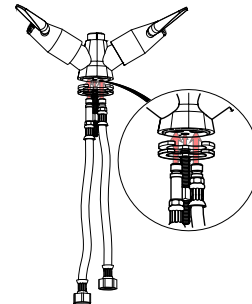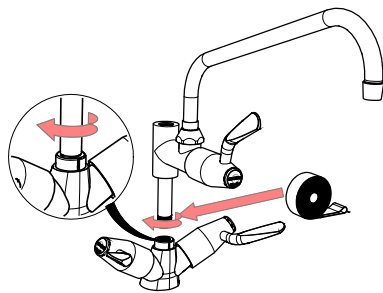


### 1. Assemble Pot Filler


- Apply thread tape to the end of short riser pipe and fit into mixer body and tighten, ensuring correct orientation.

### 2. Assemble & Fit body

- Fit the two supplied flexi hoses into the body.
- Fit the mixer body through the drilled hole on the bench and secure with supplied stud nut, rubber and “C” washer.

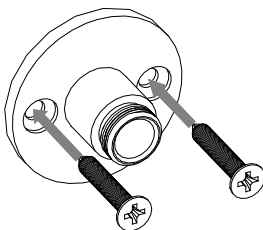

### Pre-Rinse with Pot Filler


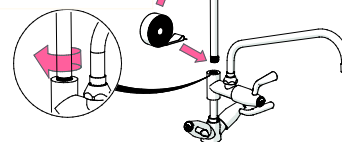


### 3. Fit Wall Bracket

- Fit wall bracket to the wall with supplied screws.

### 4. Fit Pre-Rinse Riser

- Apply thread tape to both ends of riser and fit into tap body and tighten.

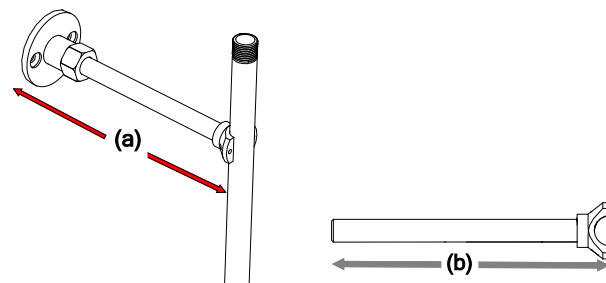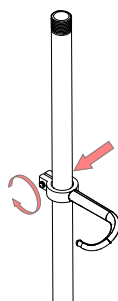


### 5. Fit Hook To Riser (as shown)

### 6. Fit Riser Support Rod


- a) Measure the distance between the wall bracket mounting surface and the centre line of the Pre-Rinse riser.
- b) Take the dimensions and subtract 20mm. This will be the finished length of the rod. **(a-20mm=b)**. Cut the extension rod and fit rod into wall bracket

**Note:** Wall bracket is adjustable from 70mm to 175mm.

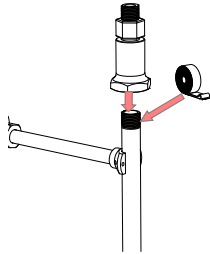


### 7. Fit Spring Retainer

- Remove spring retainer from hose assembly. Fit retainer to riser with wrench, this will also tighten the riser on the pot filler body. Ensure thread tape is applied.

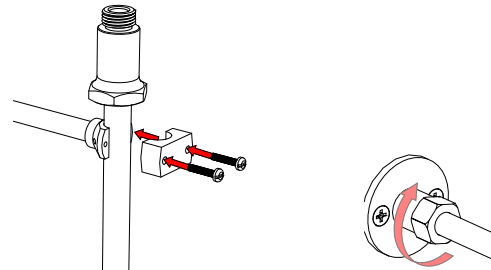


### 8. Secure Riser Support

- Fit support rod to the riser and secure the screws as shown.
- Tighten nut on wall bracket to secure the support rod.

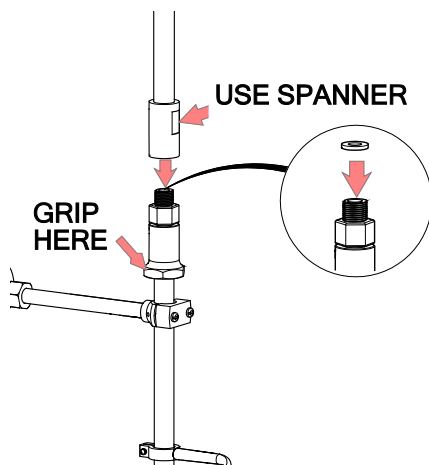


### 9. Fit Hose

- Fit hose to spring retainer with spanner.
- Ensuring supplied rubber washer is fitted inside of hose nut.

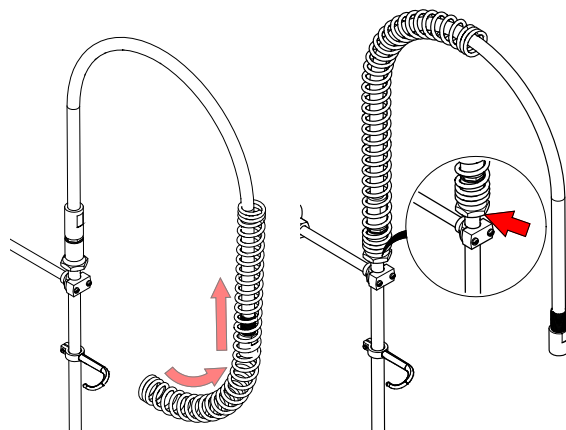


### 10. Fit Pre-Rinse Spring

- Slide the spring over the hose and the spring retainer as shown.

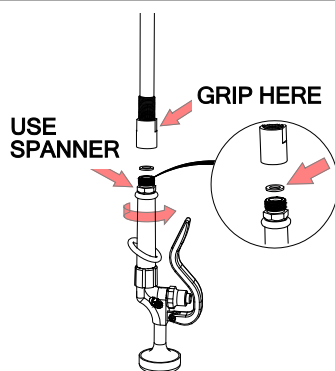

### 11. Fit Trigger Spray

- Fit trigger spray to the end of the hose. Ensure the rubber washer used between the trigger and the hose.

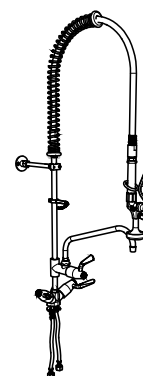

### 12. Test Unit

- Once all fittings have been tightened securely and the unit has been connected to the mains water, the unit must be tested for any leaks.

### OPERATING INSTRUCTIONS

- The isolation or main taps must be turned OFF whilst the unit is not in use, so that the unit is not under mains pressure when unsupervised. Flood damage may occur if a failure occurs whilst the unit is under mains pressure. (The warranty is void in this instance).
- Galvin Engineering recommends that the handpiece be removed periodically for servicing by a qualified plumber.

### WARRANTY

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from [www.galvinengineering.com.au](http://www.galvinengineering.com.au) Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product

